

NORTH STAR STROLLER

Jeep®

INSTRUCTION MANUAL

ADULT ASSEMBLY REQUIRED
STYLES AND COLORS MAY VARY

33098



▲WARNING:
CHOKING HAZARD

Adult assembly required because of small parts. Keep assembly parts out of reach of children under 3 years.

Read all instructions BEFORE assembly and USE of product. KEEP INSTRUCTIONS FOR FUTURE USE.



www.DeltaChildren.com

Customer Care Tel. (646) 435-8726

DCP-IM-06132019-F5

WARNING

WARNING: Please follow all of these instructions to ensure the safety of your child.
Keep these instructions for future reference.

WARNING: Failure to follow these instructions could result in serious injury or death.

- Avoid serious injury from falling or sliding out. **ALWAYS** insure that the child is properly positioned by using the safety harness according to these instructions. **ONLY** children who have developed enough upper body control to sit without leaning forward can use the front seat in the upright position.
- **NEVER** leave children unattended.

WARNING: CHOKING HAZARD Adult assembly required because of small parts.
Keep (assembly parts) out of reach of children under 3 years.

- **CAUTION:** Purses, shopping bags, parcels, diaper bags or accessory items may change the balance of the stroller and cause hazardous unstable conditions. **DO NOT** use the storage bag to carry children.
- The maximum weight that can be carried in the storage bag or canopy pouch each is 3 lbs (1.36 kg). Excessive weight may cause a hazardous unstable condition to exist.
- **DO NOT** exceed the maximum storage weight limit of 3 lbs (1.36 kg) in the cup holder.

TO PREVENT INJURY

- Make sure all body parts are clear of the stroller when folding and unfolding.
- **DO NOT** place hot liquids in the cup holder. Hot liquids can burn your child.
- Before allowing the children near the stroller, be certain the stroller is fully erect and latched in the open locked position.
- Use **ONLY** for a child who weights less than 40lbs (15.88 kg).
- Use of the stroller with children weighing more than 50 pounds or over 42 inches tall, will cause excessive wear and stress on the stroller and may cause hazardous unstable condition to exist.
- **NEVER** use the stroller on stairways or escalators.
- **NEVER** use the stroller with roller skates or in-line skates.
- **NEVER** allow your stroller to be used as a toy.

Product features and decorations may vary from the photo.

CARE AND MAINTENANCE

- To clean the plastic parts on stroller use a mild cleaning solution with warm water on a sponge or damp cloth. Hand wash fabric with damp cloth and air dry. Do not use bleach.
- To keep your stroller wheels from squeaking, use silicone or graphite based lubricant.
- Check your stroller for loose screws, worn parts, torn material or stitching on a regular basis. Replace or repair parts as needed.
- Discontinue use of stroller if it should become damaged or malfunctions.

Manufactured for and distributed by:



Delta Children

114 West 26th Street
New York, NY 10001
(646) 435-8726

www.DeltaChildren.com



Please DO NOT return this product to the store.

If you experience any difficulty with assembly, missing parts or use, please DO NOT return this item to the store. Retail stores are unable to properly assist you. Contact our Customer Service Department directly for assistance

(646) 435-8726

www.DeltaChildren.com • gcs@DeltaChildren.com
©2019 Delta Children's Products, Inc. New York, NY 10001



EXTENDED WARRANTY

DON'T MISS YOUR CHANCE TO BE COVERED FOR ALL OF LIFE'S MISHAPS!

With Delta's Extended Warranty, you're covered for mechanical failure from normal use or if your item stops working due to normal wear and tear, plus all those unexpected surprises.

2 YEARS OF PROTECTION

For Additional Information:

 
Simply visit our Website, register your product, and add the Extended Warranty

<https://www.deltachildren.com/pages/product-registration>


Extended Warranty only available in the following States: Arkansas, Colorado, Delaware, District of Columbia, Georgia, Idaho, Illinois, Indiana, Iowa, Kansas, Kentucky, Louisiana, Maryland, Michigan, Mississippi, Missouri, Nebraska, Nevada, New Hampshire, New York, North Carolina, North Dakota, Pennsylvania, Rhode Island, South Dakota, Tennessee, Utah, West Virginia

Parts


IMPORTANT! Please remove all parts from the package and identify them before assembly.

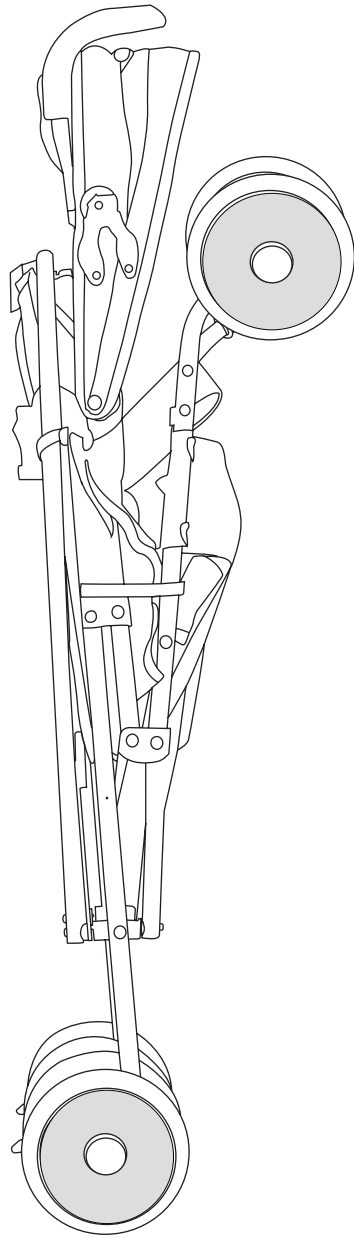


Stroller

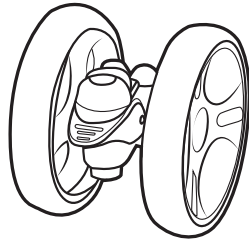 

Front Swivel Wheel x 2
Part # 50233

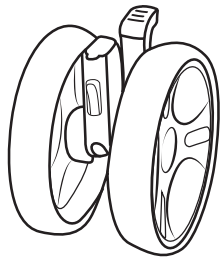 

Rear Non-Swivel Wheel x 2
Part # 50234

 



Cup Holder
Part # 50204



Carry All Parent Organizer

Assembly

  IMPORTANT! Before assembly or each use, inspect this product for damaged hardware, loose joints, missing parts or sharp edges. DO NOT use if any parts are missing or broken. Contact manufacturer for replacement parts and instructions if needed. Never substitute parts.

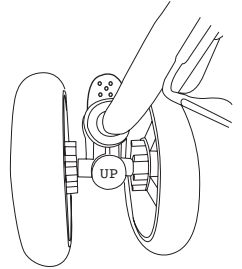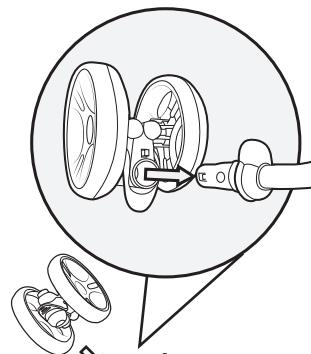


Top View of Front Wheels Fully Locked Position

1

Attaching Front Swivel Wheels

- Locate the legs on the front of the stroller as illustrated.
- Attach one Front Swivel Wheel to the stroller frame leg, making sure the "UP" is facing upward, until it "CLICKS" into a fully locked position. Make sure the wheel is in a fully locked position by pulling outward on the wheel.
- Repeat on opposite side.

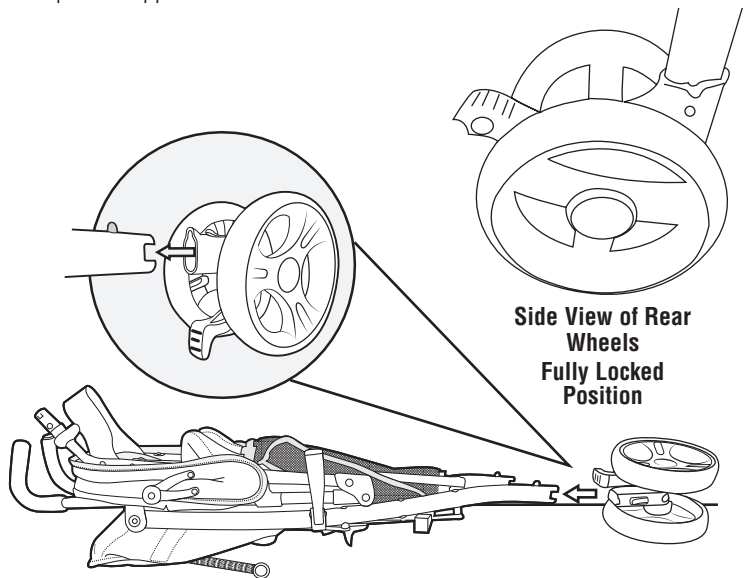


Side View of Rear Wheels Fully Locked Position

2

Attaching Rear Non-Swivel Wheels



- Locate the legs on the rear of the stroller as illustrated.
- Use the Rear Non-Swivel Wheel and align with the stroller frame leg.
- Attach Rear Non-Swivel Wheel into the rear of the stroller frame leg, make sure the pin is aligned with the housing, until it "CLICKS" into a fully locked position. Make sure the wheel is in a fully locked position by pulling outward on the wheel.
- Repeat on opposite side.

Setup and Use

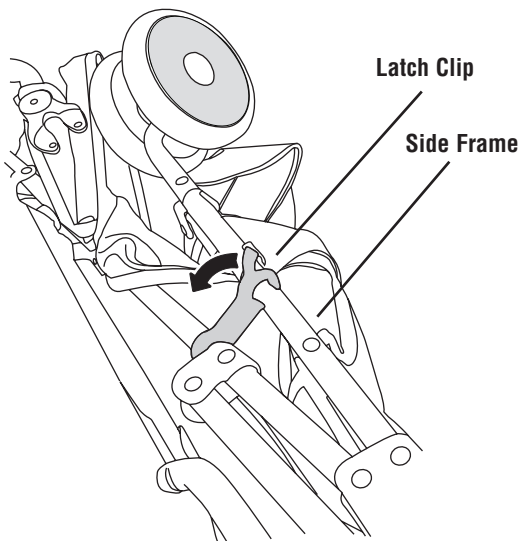


3

- Locate the latch clip on the side frame of the stroller.
- Pull to release the latch clip.

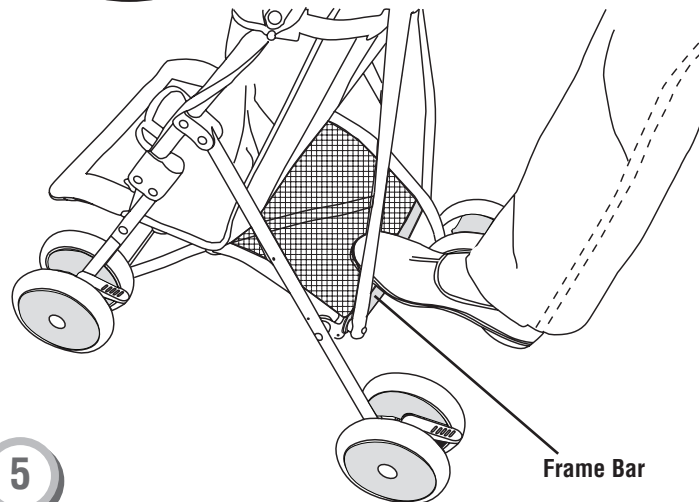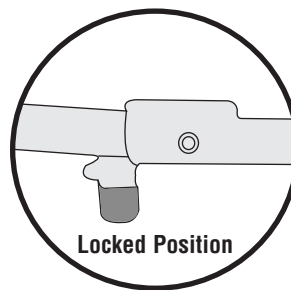



5

- With your foot, press down on the frame bar until it **“clicks”** into place.
- Check to be sure the stroller is locked open by pulling up on the frame bar.

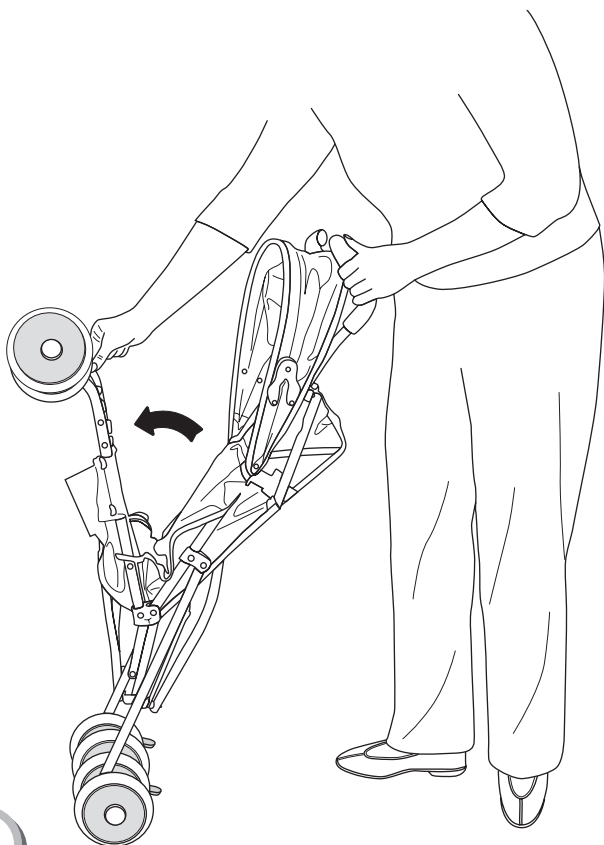

4

- Position the stroller upright on its rear wheels.
- Grasp a handle with one hand. With your other hand, push down on the front of the stroller to open.

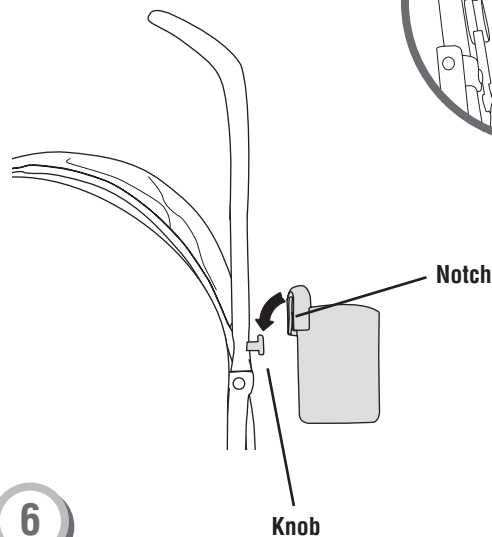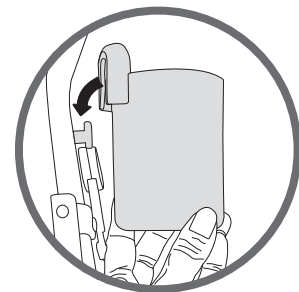


6

Attaching Cup Holder


- Locate the knob on the side of the stroller.
- Fit the notch in the cup holder over the knob on the side rail and push down until you hear a **“click”**. Pull up on the cup holder to be sure it is secure.

Setup and Use

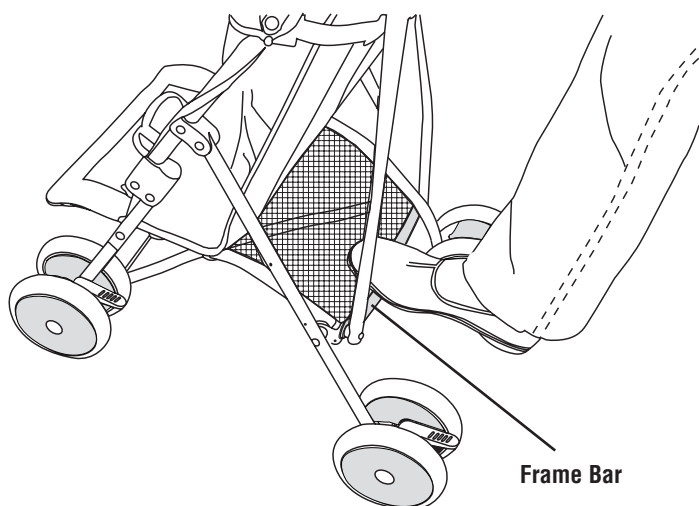

7

- With your foot, press down on the frame bar until it “clicks” into place.
- Pull up on the frame bar to make sure it is locked.

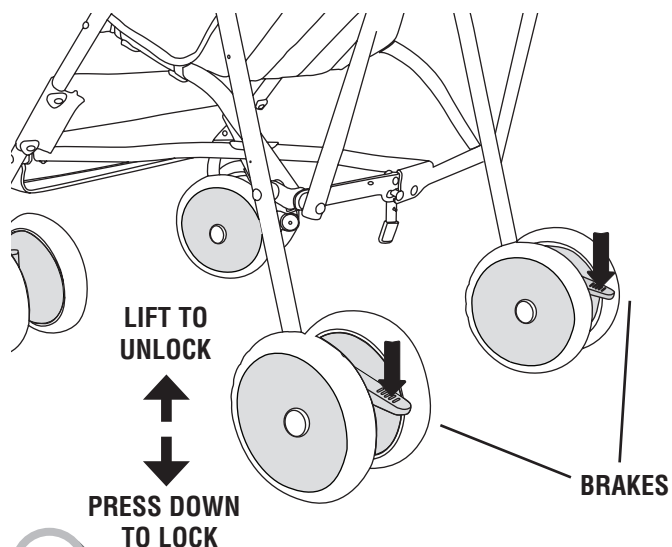

9


Rear Wheel Brakes

To lock the rear wheel brakes:

- Press **both** brake pedals down until they “click” into the locked position. **Make sure the brake pedals are pressed down completely.**
- Always set both brake pedals whenever you park the stroller.

To unlock the rear wheel brakes:

- Lift both brake pedals until they “click” into the unlocked position.

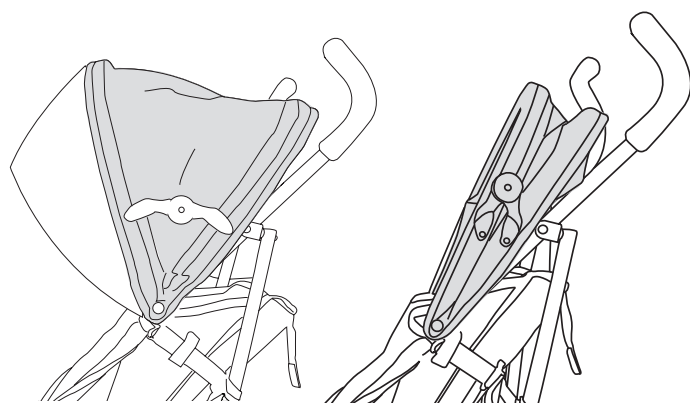


8

CANOPY OPEN

CANOPY CLOSED

Canopy Adjustment

- The canopy can be adjusted to the open or closed position.

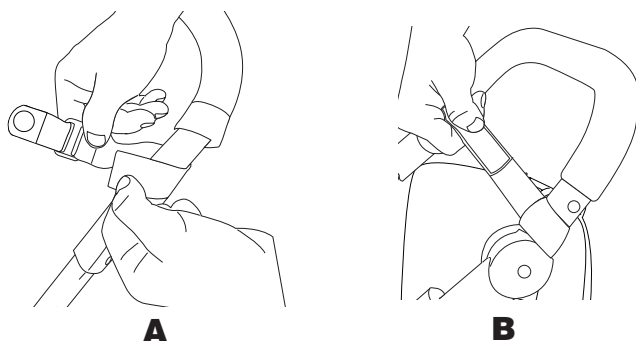

10

Attaching Carry All Parent Organizer

- Take velcro strap, wrap around jogger handle and put strap through clip. **(A)**
- Pull strap tight. **(B)**
- Make sure velcro section is attached. **(C)**
- Repeat on opposite handle until parent organizer is attached.




Securing Child

Before Placing your Child in Stroller:

Close Canopy. Press both brake pedals down until they “click” into the locked position.

Make sure the brake pedals are pressed down completely.


Always set both brake pedals when parking the stroller.

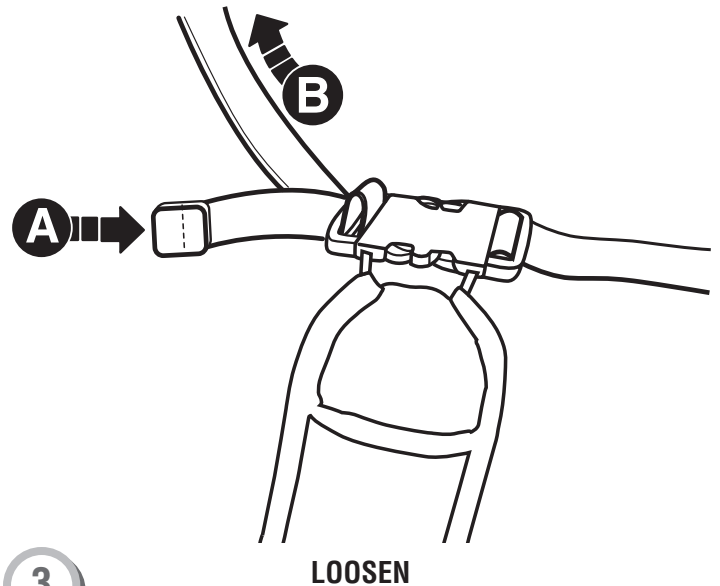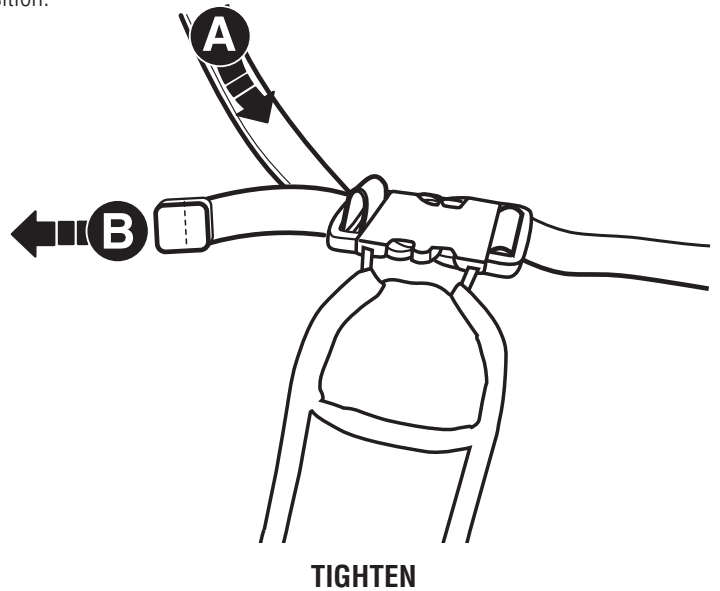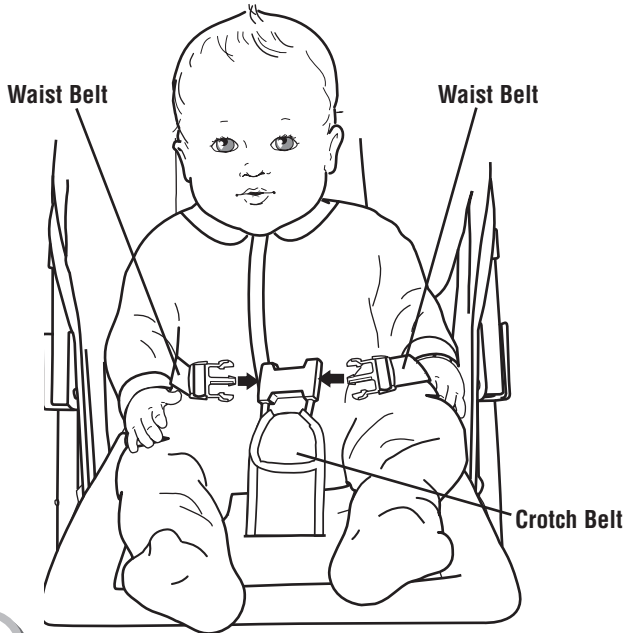

1

Securing Child

- Place your child in the stroller. Position the crotch belt between your child's legs.
- Fasten **both** waist belts to the buckle on each side of the crotch belt. Make sure you hear a “click” on both sides.
- Check to be sure the restraint system is securely attached by pulling it away from your child. The restraint system should remain attached.

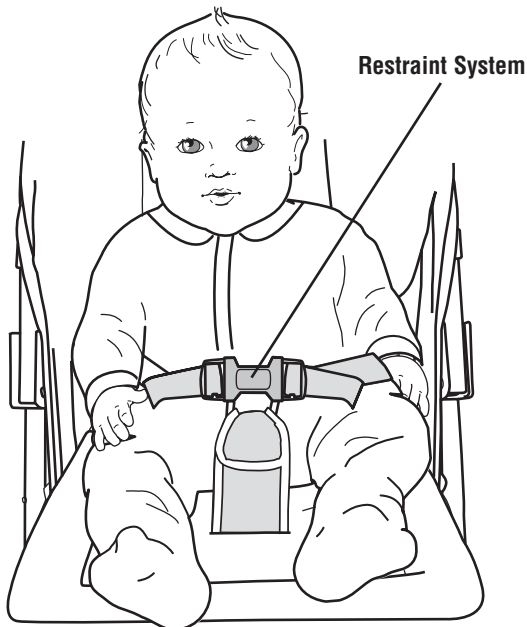

2

- Tighten each waist belt so that the restraint system is snug against your child. Please refer to the next section for instructions to tighten the waist belts.

3

To tighten the waist belts:






- Feed the anchored end of a waist belt up through the buckle to form a loop **A**. Pull the free end of the waist belt **B**.
- Repeat this procedure to tighten the other waist belt.

To loosen the waist belts:

- Feed the free end of the waist belt up through the buckle to form a loop **A**. Enlarge the loop by pulling on the end of the loop toward the buckle. Pull the anchored end of the waist belt to shorten the free end of the waist belt **B**.
- Repeat this procedure to loosen the other waist belt.


Please note: After adjusting the restraint system to fit your child, make sure you pull on it to be sure it is securely fastened.

Storage

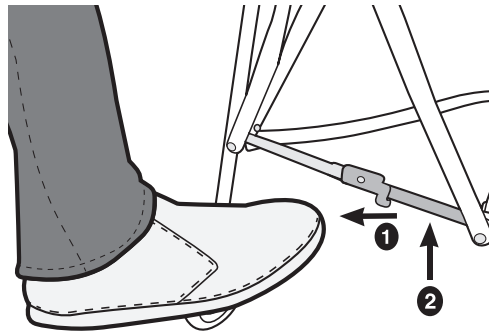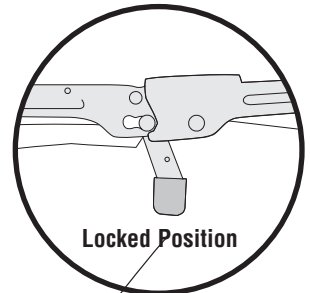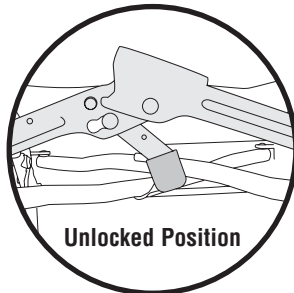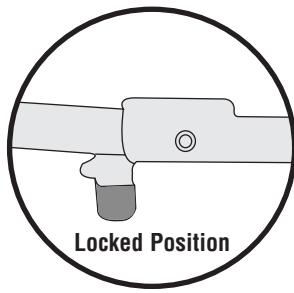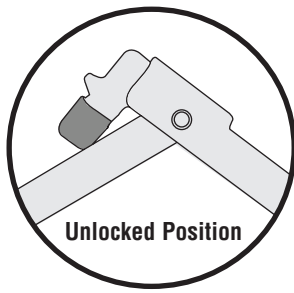

← OR →

* DEPENDS ON MODEL

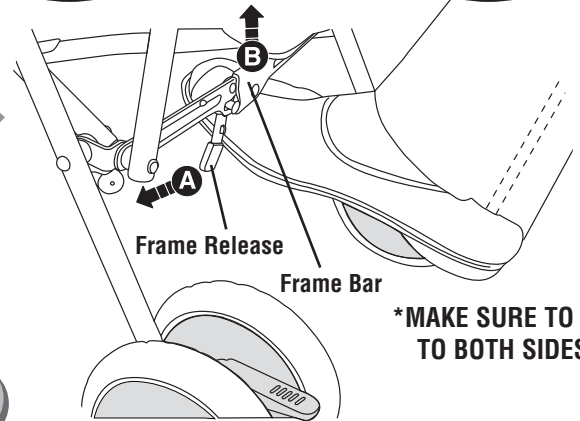

***MAKE SURE TO DO TO BOTH SIDES**

1a


Hint: Make sure canopy is in the closed position before folding the stroller.

- Push lever outward **1**, then upward **2**.

1b


Hint: Make sure canopy is in the closed position before folding the stroller.

- With your foot, slide the frame release to the left **A**, then push up on the frame bar **B**.

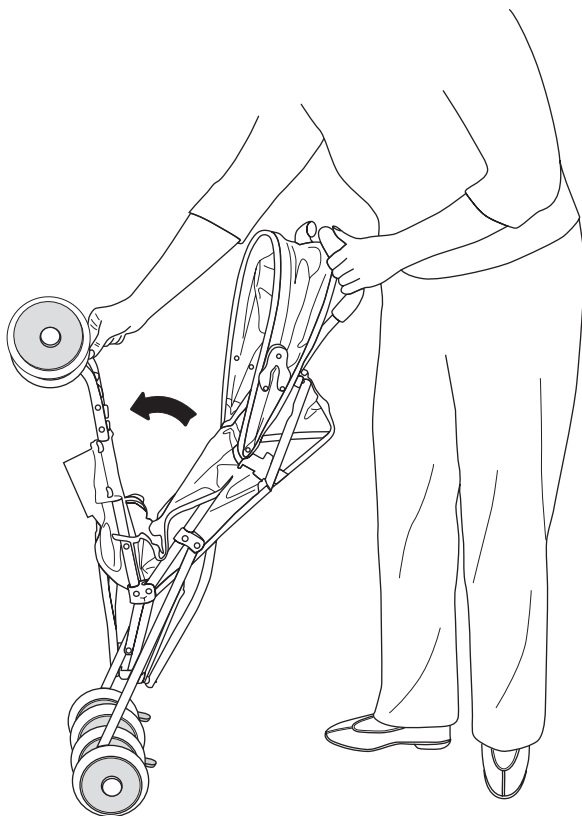

2

- Lift the front wheels toward the closed canopy.

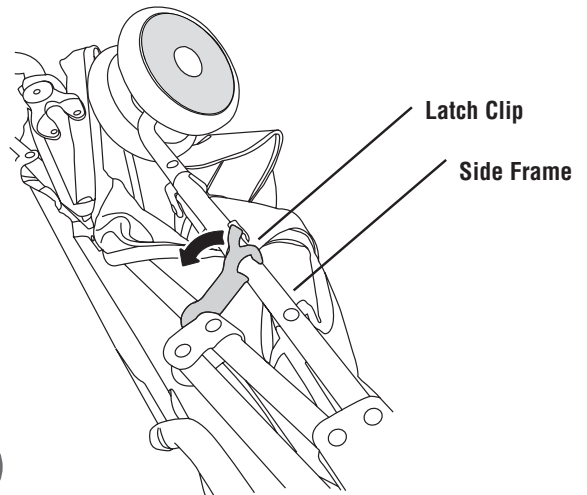

3

- Slide the latch clip onto the side frame to secure in the folded storage position.



Delta Children

114 West 26th Street
New York, NY 10001
(646) 435-8726

www.DeltaChildren.com