




Programmable Controls Gas or Electric

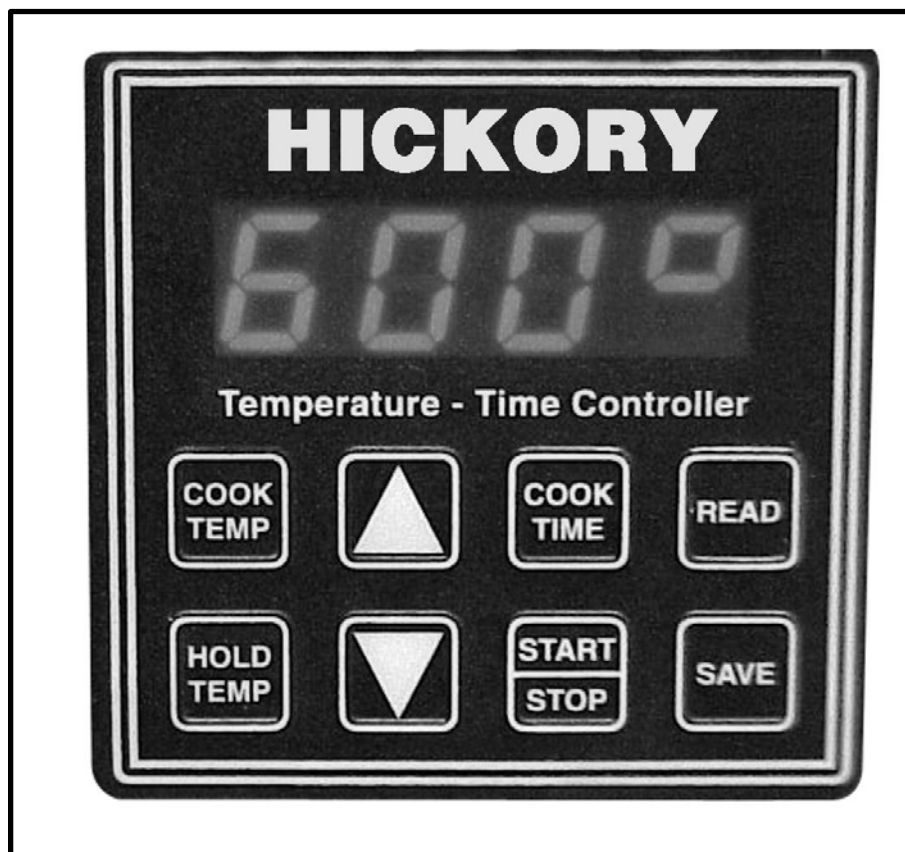

TRAINING MANUAL


Hickory Industries, Inc. • 4900 West Side Ave., North Bergen, New Jersey 07047 • www.hickorybbq.com

Tel: 201-223-0050 Fax: 201-223-0950 Web: www.hickorybbq.com Email: sales@hickorybbq.com

Revised October 2008

MANUAL SETTING PROCEDURE

Setting Time / Temperature / Hold Functions

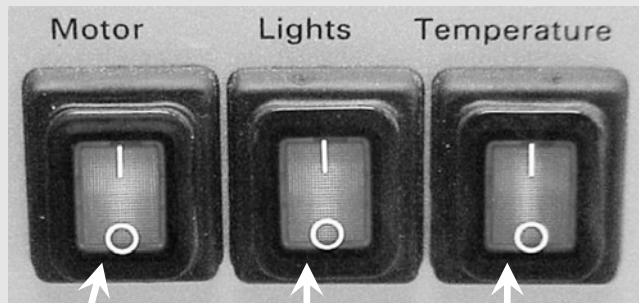


Turn On

Motor Lights Temperature
Buttons



Figure 1.


Press and Hold  then Toggle the



buttons until desired cooking temperature is reached.



Figure 2.

Press and Hold  then Toggle the



buttons until desired Cook Time (Hr:Min) is reached

MANUAL SETTING PROCEDURE

Setting Time / Temperature / Hold Functions

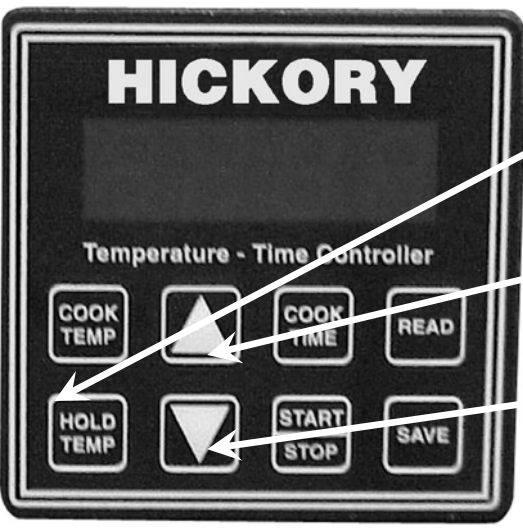





Figure 3.

Press and Hold  then and Toggle the  UP or  DOWN buttons until you reach desired temp. Hold settings are "OFF", 150°F thru 300°F





Figure 4.

STARTING THE PROCESSs

Press  You will hear one chirp and the unit will display temp (XXX°) and time (cX:XX)

Cooking process initiated




Figure 5.

- Burner or Elements will turn on.
- Wait approximately 20 -30 Minutes to Achieve Preset Temperature Programmed
- When temperature light shuts off, temperature setting has been reached.

–Rotisserie is Operational–

PRE-PROGRAMMED RECIPES

Figure 1.

Press



Toggle



UP

or



DOWN

until desired recipe # is reached.

***(See Recipe page.)**



Figure 2.

Press



ONE chirp, your cooking process is initiated.

To stop the process, press



again.

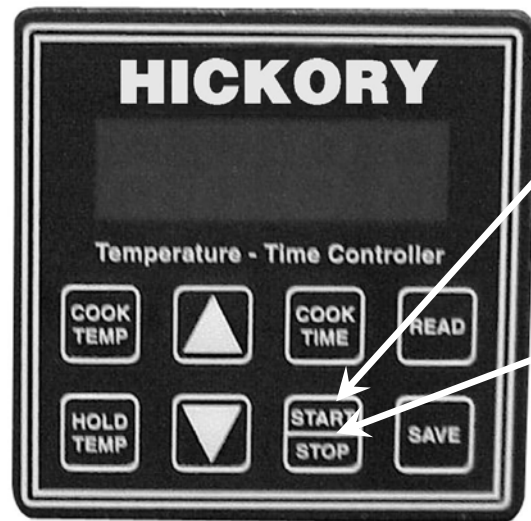


Figure 3.

- Burner or Elements will turn on.
- Wait approximately 20 -30 Minutes to Achieve Preset Temperature Programmed
- When temperature light shuts off, temperature setting has been reached.

–Rotisserie is Operational–



SPECIAL PROGRAMABLE OPERATION

Make sure controller displays rdy

This Process is used to Override the Pre-programmed recipes

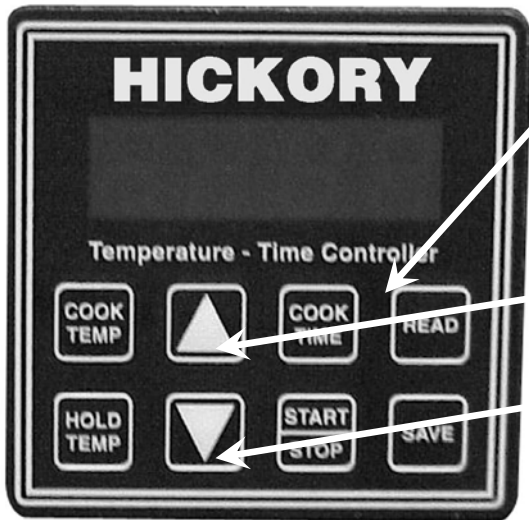


Figure 1.

Press  and then

Press  UP
or
 DOWN

Buttons until the desired recipe you want to override is displayed.

Press  and  at the same time.

"P_{RO}" will be displayed. Change your Cook Temp, Cook Time and Hold Temp accordingly. Press save to override -- the recipe is saved.

REPEAT STEPS ABOVE

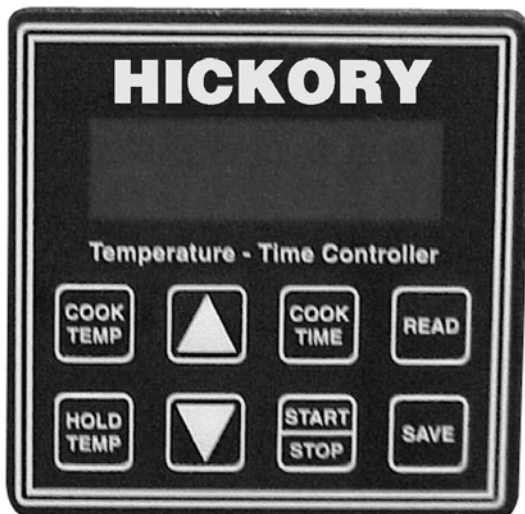


Figure 2.

Repeat above steps until you have saved all of the programs for your operation.

DAILY OPERATION PROCEDURE

Figure 1.



Press



Press



UP

or

DOWN buttons to desired

Program and press



The timer stops the cooking process when it times out - but it beeps until the Start Stop is pressed. (If cooking with a hold temperature, when the timer stops and beeps, Pressing the "HOLD" or "Cook Temp" (one chirp), Enters the "HOLD" Mode and the oven will display hXX:XX. Pressing The "Cook Time" adds 5 minutes to the current cooking cycle.) Otherwise, pressing the "Start/Stop" stops the buzzer.

Figure 3.



- Upper Burner will ignite.
- Wait approximately 20 -30 Minutes to Achieve Maximum Temperature Programmed
- When burner cycles off
— Rotisserie is Operational—
- Load the product to be cooked and shut the door.

Tips and Hints

Displaying Actual Oven Temperature

Simultaneously press both the “**COOK TEMP**” and “**SAVE**” buttons.

Changing Degrees from Fahrenheit to Celsius

An additional person maybe required for this procedure.

De-power the unit - **before powering the unit back up again, press and hold the “COOK TEMP” and do not release.**

Power up the unit and while holding the “**COOK TEMP**” button, toggle the “**UP BUTTON**” for Fahrenheit or toggle the “**DOWN BUTTON**” for Celsius.

Resetting Controller

Caution - Performing this step will erase any saved recipes and bring the controller back to its original state - an additional person maybe required for this procedure.

De-power the unit - **before powering the unit back up again, press and hold the “READ” button and do not release.**

Power up the unit and release the “READ” button. The unit will go into test and count down and display “0000.” Press following buttons in order; “**COOK TEMP**”; “**UP ARROW**”; “**COOK TIME**”; “**READ**”; “**HOLD TEMP**”; “**DOWN ARROW**”; “**START STOP**”; and “**SAVE**” buttons. The unit will beep once. Press the “**COOK TEMP**” and then the “**HOLD TEMP**” button. The unit will display “**rdy**” and is now reset.

*PRE-PROGRAMED RECIPES

SPECIAL PROGRAMED RECIPES

Program #	Cook Temp	Cook Time	Hold Temp
01	550°F (288°C)	1hr	200°F (93°C)
01	SPECIAL PROGRAMED RECIPES		
02	550°F (288°C)	1hr 15 min	200°F (93°C)
02	SPECIAL PROGRAMED RECIPES		
03	550°F (288°C)	1hr 30 min	200°F (93°C)
03	SPECIAL PROGRAMED RECIPES		
04	550°F (288°C)	1hr 45min	200°F (93°C)
04	SPECIAL PROGRAMED RECIPES		
05	550°F (288°C)	2hr	200°F (93°C)
05	SPECIAL PROGRAMED RECIPES		
06	475°F (246°C)	1hr	200°F (93°C)
06	SPECIAL PROGRAMED RECIPES		
07	475°F (246°C)	1hr 15 min	200°F (93°C)
07	SPECIAL PROGRAMED RECIPES		
08	475°F (246°C)	1hr 30 min	200°F (93°C)
08	SPECIAL PROGRAMED RECIPES		
09	475°F (246°C)	1hr 45 min	200°F (93°C)
09	SPECIAL PROGRAMED RECIPES		
10	475°F (246°C)	2hr	200°F (93°C)
10	SPECIAL PROGRAMED RECIPES		
11	500°F (260°C)	1hr 30 min	200°F (93°C)
11	SPECIAL PROGRAMED RECIPES		
*12	576°F (302°C)	15min	200°F (93°C)
12	SPECIAL PROGRAMED RECIPES		

* Use as pre heat