



# BRUNO

## Instruction and Safety Manual


24-01-01

Thank you very much for purchasing our product this time. In order to use this product safely and correctly, please read this manual thoroughly and understand it before you start using it. Warranty registration information can be found in this manual, so please keep it carefully.

# BIRD HOUSE CLOCK

Bird House Clock


BCW047

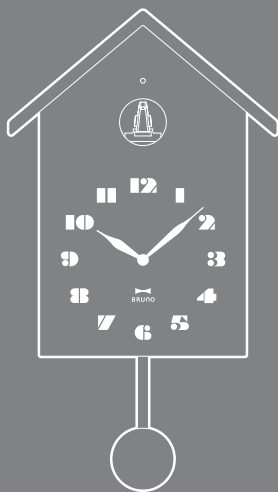

## Safety Precautions

Please read this user manual carefully before you start to use the product and retain it for future reference.

The following symbols will indicate the level of danger and damage that may occur when this product is improperly used or when the following instructions are not followed.

 **Warning** Could result in death or serious injury.


 **Caution** Could result in injury or damage in property.

Please note the below signs for necessary actions in using the product.


 Required Actions


 Prohibited Actions

## About Handling


 Do not drop or give a strong shock.

 Do not disassemble, repair, or modify by yourself.


 Do not place your appliance near children. Do not allow children or persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge to use.


 Do not insert any foreign objects into the holes or gaps of the main body.


 Do not use near a heat source such as a stove or gas hob.


 Do not use in places exposed to direct sunlight or with high humidity.

## About the Battery

 
 Do not put the battery in the fire.

 Store the battery in a place out of reach of infants and young children.


 Remove the batteries if you are not going to use them for a long time.

 Set the battery "+" and "-" correctly.

## 【 Front 】

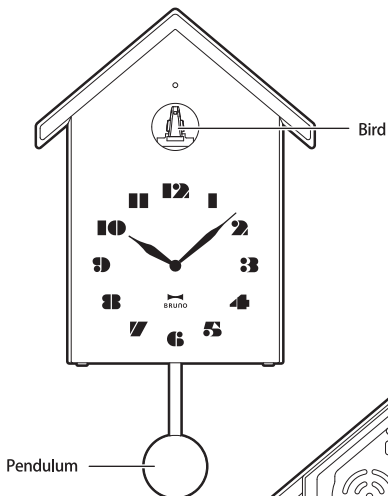

## 【 Back 】

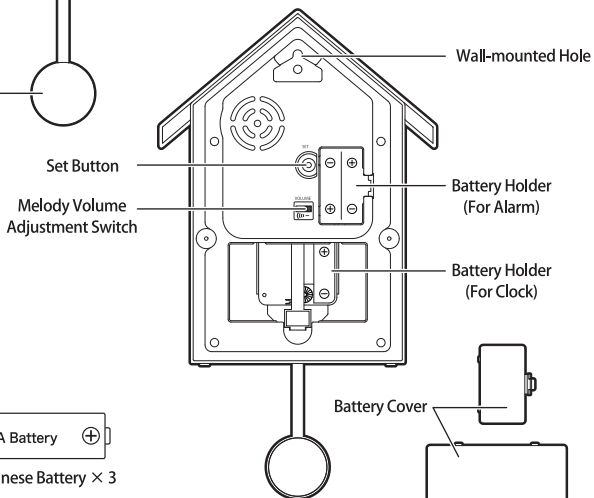 


AA Manganese Battery × 3  
(For clock × 1, For alarm × 2)

## If you are using it for the first time

## ① Remove the pendulum shaft

Move the pendulum shaft in the arrow direction and remove it from the main body.

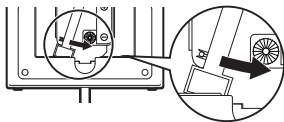


## ② Set the pendulum

Please hook the pendulum onto the tip of the pendulum shaft.

※The side where the hook portion is bent is the surface of the pendulum. Please attach it facing the front of the clock body, as shown in the figure on the right.

※This product can be both hung and placed. If you are using it by placing, you cannot set the pendulum.

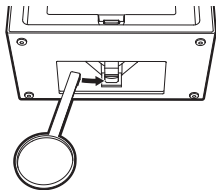

## How to Use a Clock

## ① Battery Set (for clock)

Remove the cover of the battery holder (for clock), and insert the battery (AA manganese battery x 1) according to the + and - directions.

- Please do not use rechargeable batteries, alkaline dry batteries or lithium batteries, etc. Problems may occur such as not working properly or shortening of battery life.
- Please always replace the battery with a new one. Dispose of the old battery removed in the way prescribed by the local government or similar entity in your area.

## ② Setting the time

Turn the knob in the direction of the arrow to set the time, and please set the cover.

- Please do not turn the needle directly with your hand.
- Please do not forcibly move the pendulum, other than gently swinging it.

## Usage of The Alarm

This product features an alarm with bird movements and melody sounds.

The alarm activates every hour starting from 0 minutes after inserting the battery, with 12 cycles of activation followed by a 12-hour pause.

※Due to internal structure specifications, please be aware of a  $\pm 3$  minute deviation in the alarm

### ① Battery Set (for alarm)

Remove the battery holder cover (for the alarm) and insert two AA manganese batteries following the + and - directions.

※ Please install this battery only after setting the time.

※ After battery replacement, the alarm will be reset.

※ Do not insert the batteries for the alarm if you are not going to use the function.

- Please do not use rechargeable batteries, alkaline dry batteries or lithium batteries, etc. Problems may occur such as not working properly or shortening of battery life.
- Please always replace the battery with a new one. Dispose of the old battery removed in the way prescribed by the local government or similar entity in your area

### ② Setting the Alarm

The alarm rings 12 times each hour from the set time and stops after the 12th ring.

Alarm rings 12 times → Alarm stops ringing for 12 times

[Example] If you insert the battery within the 8 o'clock range (8:00-8:59)

→ From 9:00 to 20:00, the time alarm activates 12 times; from 21:00 to 8:00, it pauses for 12 times. This cycle repeats.

#### Change Start Time of Alarm

You can set the alarm start time by pressing the SET button after inserting the battery.

Each press moves the start time one hour earlier than the current time.

Press the SET button firmly with a one-second interval until the desired number of time changes. (Each press of the SET button produces a bird sounds.)


[Example] If the alarm activates from 9:00 to 20:00, pressing the SET button three times will repeat the alarm 12 times from 6:00 to 17:00 and pause it 12 times from 18:00 to 5:00.

[Example 2] If at 08:45, press SET three times (starting from 09:00 as the first alarm), it will then ring 12 times from 6:00 to 17:00 and pause for 12 times from 18:00 to 05:00.

※ Avoid pressing SET during the alarm. Set between 5 and 55 minutes to prevent interference with the signal activation (+/- 3 minutes).

※ If you press the SET button within the 12 hours of the bird rings, each press will result in a bird sound.

※ If settings are wrong, remove and reinsert the battery, then reconfigure.

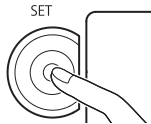


### Adjustment of the alarm clock melody volume

You can adjust the melody volume in 3 levels (High/Low/Mute).

Please adjust the melody volume switch on the back of the main body by moving it left and right.

※In the case of mute, the melody will not sound but the bird will operate.

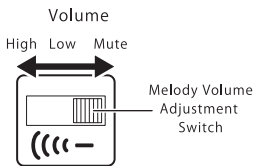


### Installation Method

When mounting, ensure the clock's back fits snugly against the wall or pillar. Confirm hook and screw strength before installation.

#### Hang on thick wooden walls or pillars

Use appropriate-length screws. Screw the hanger in until at least 20 mm remains from the vertical wall surface, ensuring safety during installation.

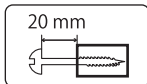

#### Hang on concrete walls or something similar

Please use a commercially available hanger (suspension hardware) that can withstand up to "3 kg" suitable for the wall material and structure.

### Avoid use and storage in places like the ones mentioned below.

- A place where direct sunlight hits.
- Places where the temperature becomes 50°C or above.
- A place where temperatures drop below 0°C.
- A place with a strong magnetic field.
- Places that become hot and humid.
- Places with vibrations, unstable places.
- A place with a lot of dust and dirt.
- Places where a lot of oil is used.
- On vinyl-based material walls, and on things like floor coverings.

### Care Method

- When cleaning the main body, please wipe it with a damp soft cloth.
- When the dirt is severe, please dilute a small amount of neutral detergent in water, apply it to a soft cloth and wipe, and then dry it after wiping.
- Please do not use items such as gasoline, thinner, alcohol, polish powder, various types of brushes, etc. Please ensure that it is not exposed to insecticides and hairsprays, etc. as they may cause discoloration, scratches, and malfunctions.

Symptoms	Problem Causes	Recommended Solutions
Needles, Bird and Pendulum are not moving.	▶ Is the battery installed?	▶ P.3 "Please refer to 'Battery Set'".
	▶ Is the battery terminal or contacts not dirty?	▶ Wipe battery terminals and contacts. Insert the battery, then turn it 2 or 3 times.
	▶ Ensure that the back of the clock adheres horizontally to the wall or pillar.	▶ The back of the clock fits horizontally against the wall or column.
The alarm sound is too low or doesn't ring.	▶ Turned the melody volume to low or mute?	▶ Adjust the volume with the melody volume adjustment switch.
The alarm does not work at the set time.	▶ P.4 Please refer to "Time Alarm Settings" and reset the alarm.	

※If the problems persist, please contact customer service for service.

## PRODUCT SPECIFICATIONS

Operating Temperature	0°C~50°C
Time Accuracy	Avg. Monthly Deviation ±30 seconds ※Under normal temp. use
Battery	AA Manganese Battery × 1 (for clock), × 2 (for alarm)
Battery Life	For clock: Approx. 1 year/ For alarm: Approx.10 months ※ The situation may change depending on how you use it. The included battery's life may be shorter than indicated due to factory installation.
Size	Approx. W200×H255×D103 (mm) (excluding pendulum)
Weight	Approx. 675g (excluding battery)
Material	Polystyrene
Country of Origin	China

※The above specifications are subject to change without notice.

# TERMS AND CONDITIONS

1. If you have followed the instructions on this user manual but still have problem in using the appliance, please contact the local distributor accordingly.
2. Please register your appliance online within 7 days after purchase. Or you must retain the purchase receipt as proof of purchase.
3. You must retain and present the purchase receipt or warranty registration record as proof of purchase when requesting for warranty service.
4. No international warranty is available. Please refer to the local distributor for the list of approved resellers.
5. Warranty is one year, counting from the purchase date as shown on the purchase receipt from authorized dealers.
6. Customers are required to bring in the appliance to service center for service.
7. The warranty is VOID if the product is damaged under the below circumstances:
  - a. not used properly and did not follow the guidelines in this user manual.
  - b. found to have been dismantled without prior authorization.
  - c. damaged due to misuse or negligence.
  - d. damaged due to force majeure like earthquake, thunder, flood, war.
  - e. used for commercial purpose or under abnormal household use situations.
  - f. improper care, like never cleaning the product.
  - g. do not revise this user manual.
  - h. damage originated from cooking oil / ingredients entered into the motor unit.
8. Warranty does not cover consumable parts (e.g. toasting net, double grill pans, grill rack). The consumable parts are available for purchase and please contact the local distributor.

## WARRANTY

Please refer to the local distributor for warranty service details.  
Warranty period is one year and only covers the country of original purchase.  
International warranty is not available.

### HONG KONG AND MACAU

---

**Ace Kitchen Ltd**  
Unit 2205-06, 22/F, Lemmi Centre, 50 Hoi Yuen Road, Kwun Tong, Hong Kong  
Tel: +852 3568 7885 | info@acehomehk.com | www.acehomehk.com  
Mon-Fri 10:00am – 6:00pm (by appointment)

Please complete the warranty registration at the link below within 7 days of purchase.  
<https://warranty.acehomehk.com>

### SINGAPORE

---

**Maison Ace Pte Ltd**  
Vertex Tower B, 33 Ubi Avenue 3, Singapore 408868  
Tel: +65 69628776 | hello@maisonace.com | www.maisonace.com  
Mon-Fri 9:30am - 5:00pm (by appointment)

Please complete the warranty registration within 7 days of purchase:  
[www.maisonace.com](http://www.maisonace.com)

### THAILAND

---

**Lux Ace Trading Co., Ltd.**  
315, 24th/F Chamchuri Square, Phaya Thai Rd., Pathumwan  
Bangkok 10330, Thailand  
Tel: +66 84-269-6952 | hello@luxace.co.th | www.luxace.co.th  
Mon-Fri 10:00am - 6:00pm (by appointment)