



# BRUNO

## Instruction Manual

23-08-01

220-240V

Household Use

# COMPACT MULTI GRILL POT


## Compact Multi Grill Pot

BOE115

Thank you very much for purchasing our products. In order to use this product safely and correctly, please be sure to read this manual thoroughly before using it and ensure you fully understand its contents. This manual comes with a warranty, so please take care to keep it safe. This product is for general household use. Please do not use it for business purposes.

### Table of Contents

Precautions.....	1
Parts.....	4
How to Use.....	5
Troubleshooting.....	9
Specifications.....	10
Warranty Registration....	Back cover

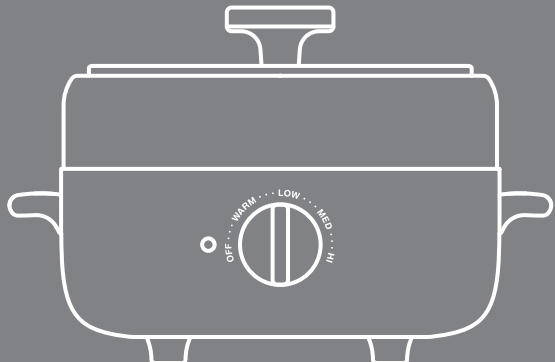

## SAFETY PRECAUTIONS

The precautions shown here are intended to prevent harm or damage by using the product safely and correctly. Since these are important matters regarding safety, please be sure to comply.

### Display Classification



**Warning**

Possibility of death or suffering severe injuries.



**Attention**

Possibility of personal injury and occurrence of property damage.

### Meaning of Symbols



Things which must be done (Obligations)



Things Not To Do (Prohibitions)

## OPERATING ENVIRONMENT



Warning



**Do not place in unstable surfaces, or high places such as on a shelf.**

It can cause leaning, injury, burns, electric shock, and fire due to leakage of electricity.



**Do not use outdoors, in places where water splashes, or on wet surfaces.**

If water enters the interior, it can cause fires due to electric shocks or leaks.



**Do not use only by children or those who need assistance, and do not use within the reach of infants.**

There is a risk of injury, burns, and electric shock.



**If you have pets like dogs or cats indoors, the pets may touch the main unit or power cord. Please be careful not to damage it.**

It can cause fires or malfunctions.



Attention



**Do not use in places like the following.**

Locations other than desks such as beds, tatami mats, rugs etc / Locations where there is a possibility of touching things like curtains / Near things like plastics that can deform with heat / On top of vinyl-based materials, heat-sensitive mats, papers / Sides of a flame, etc can cause fire, electric shock, malfunction, and discoloration.



**Do not use near walls or furniture.**

Steam or heat can damage walls and furniture, causing discoloration or deformation. It can also cause fires or malfunctions.

## POWER SUPPLY



Warning



**Do not touch the power plug or device plug with wet hands.**

It can cause electrical shock.



**Do not damage the power cord, power plug, or appliance plug.**

Please do not damage, process, approach heat appliances, forcibly bend, twist, pull, or put heavy things on it. Using it while it's damaged can cause electric shock, short circuit, and fire.



**Do not use if the power cord is damaged.**

Risk of disconnection, possible electric shock.



**Do not use in anything other than AC 220-240V.**







It can cause electric shock or fire.






**Do not use the power cord while it is bundled up.**

It can cause electric shock, short circuit, and fire.







-  **Do not use outlets that are loose or damaged.**  
It can cause electric shock or fire.
-  **Do not allow metal pieces or debris to adhere to the tip of the power plug.**  
It causes electric shock, short-circuiting, and fire.
-  **In case of product abnormalities, immediately stop using and unplug the power cord.**  
It can cause electric shock or fire.
-  **Insert the power plug firmly all the way to the root.**  
If not inserted correctly, it can cause electric shock or fire.
-  **Unplug the power cord from the outlet when servicing.**  
It can cause injury, burns, electric shock, and fire.
-  **Stop using immediately if the power cord or power plug is damaged or malfunctioning.**  
Please request repair or replacement at the sales outlet or customer consultation desk.








-  **When not in use, remove the power plug from the outlet.**  
It can cause electric shock due to insulation degradation, and fire due to leakage current.
-  **Always unplug by holding the power plug from the outlet.**  
The code is damaged, which can cause electric shock, short-circuiting, and ignition.
-  **Ensure that the temperature control knob is in the OFF position before plugging in and unplugging the power cord.**  
It can cause injuries or malfunctions.

## ABOUT HANDLING



















-  **Do not touch the heating plate during or immediately after use.**  
During use and immediately after use, the heating plate becomes very hot, and there is a risk of burns if touched. Do not wipe the heating plate with a cloth right after use, as it may cause smoke or fire.
-  **Do not disassemble, repair, or modify.**  
It can cause injuries, electric shock, or fire.
-  **Do not get the main body and power cord wet or splash water on them.**  
It can cause electric shock, short circuit, and malfunction.
-  **Do not move away from the main unit while in use.**  
There is a risk of the food catching fire.



-  **Do not apply shock to the main body.**  
Dropping it or hitting it against something can cause malfunction.
-  **Do not use for purposes other than cooking.**  
It can cause injuries or malfunctions.
-  **Do not place pots, grill plates, or steamers on direct fire such as gas stoves or IH cooking heaters.**  
It can cause deformation or fire.
-  **Do not insert objects into or block the ventilation ports of the main unit.**  
It may cause electric shock, short circuit, malfunction, or fire.
-  **Never use without setting the pot, grill plate, or steamer on the main body.**  
Burns, can be the cause of fires.



Attention


-  **Do not cook directly on the heating plate or use anything other than the included pot, grill plate, or steamer.**  
It can cause electric shock or malfunction.
-  **When the bottom of the pot or grill plate is wet with water etc., wipe the bottom thoroughly before use.**  
There's a risk of electric shock or short circuit.
-  **Do not remove the pot, grill plate, or steamer during use.**  
There is a risk of burns.
-  **When opening the lid in dishes such as steamed food, be careful with the steam.**  
There is a risk of burns.
-  **Do not heat an empty pan.**  
This can cause the pot to deform or discolor.
-  **Do not use sharp tools such as metal spatulas, skewers, knives, etc.**  
Coating gets damaged and becomes the cause of deterioration.
-  **Do not heat canned or bottled goods directly.**  
Cans or bottles may explode or overheat, posing a risk of burns or injuries.
-  **Use within the prescribed capacity.**  
Spillage, burns, malfunctions, and fires can be caused.
-  **Be careful not to spill. If you spill, immediately turn the control knob to "OFF". Unplug the power cord and wait until the high temperature area cools down before wiping it clean thoroughly.**  
It can cause electric shock, short-circuit, fire, or ignition.
-  **Do not touch the high temperature parts during use or for a while after use.**  
There is a risk of burns.
-  **Do not subject it to strong impacts such as dropping, or cool it down rapidly by applying water or similar substances while it is still hot immediately after use.**  
It can cause deformation and deterioration.
-  **Do not use pots, grill plates, and steamers on top of the stove.**  
It will cause deformation and deterioration.
-  **Do not leave food or moisture unattended.**  
There is a risk that the surface may corrode or discolor.
-  **When opening the lid, be careful of the steam.**  
There is a risk of burns.
-  **When the lid handle starts to wobble, tighten the screw on the underside of the handle.**  
The handle may come off, risking injury or burns.
-  **After using pots, grill plates or steamers, cool down sufficiently before cleaning.**  
It can cause burns.

#### AVOID USE OR STORAGE IN THE FOLLOWING LOCATIONS


- Places other than desks such as beds, tatami, carpets etc.
- Places where there is a risk of touching curtains etc.
- Near things that can deform with heat such as plastic etc.
- Near an open flame
- Places that have been wet with water
- Places within reach of children and infants
- Places with vibration, unstable places
- High places
- Near walls or furniture




Lid

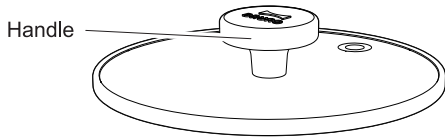


Grill Plate

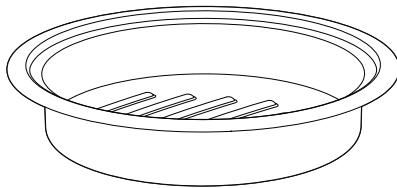


Steamer

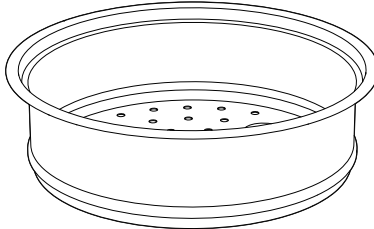

Pot

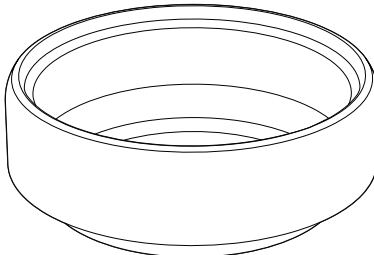

Main body

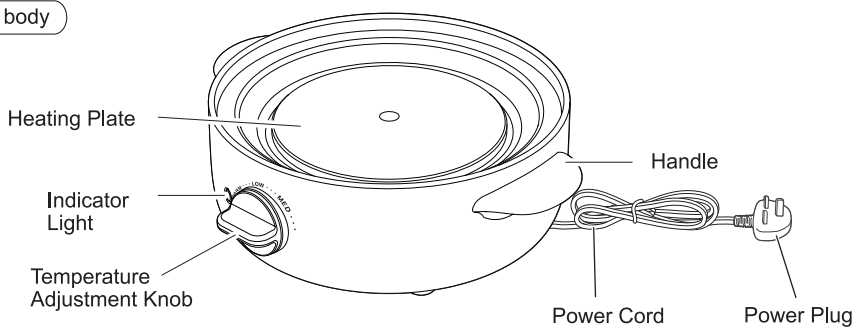

## HOW TO USE

### ●Before using

When using for the first time, please wash the lid, pot, steamer, and grill plate well with kitchen neutral detergent before use.

#### ①Set the pot or grill plate on the main body.


1. Please make sure there are no foreign objects or moisture between the pot or grill plate and the main body.
2. After setting the pot or grill plate, make sure there is no wobbling or tilting.



[Temperature Adjustment Knob]

#### ②Connect the power cord.

1. Please check that the temperature adjustment knob is in the OFF position.
2. Insert the power plug into the outlet.

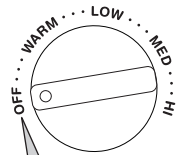


Turn to OFF position

#### ③Cook.

- ※ When using for the first time, smoke or smell may be emitted, but this is not a malfunction. It will disappear with use.
- ※ The clicking sound you hear during use is due to the heat expansion of the heat plate, and is not a malfunction.

### ●Boil and Cook


1. Securely set the pot on the main body.
2. Adjust the temperature control knob to match the desired temperature.
  - ※ Please adjust while checking the heating status of the ingredients. Up to the inside of the ingredients
  - ※ When you want to cook thoroughly, we recommend cooking with the lid on.
3. Please use the lid as needed.
  - ※ Please do not add ingredients exceeding the limit (approx. 0.8L).
  - ※ When removing the lid during use, be aware that the surface of the lid may be hot. Handle with care.

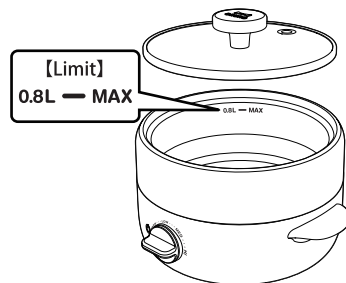

- Please do not use sharp tools such as metal spatulas, skewers, knives, etc.
- The main body, lid, and pot may become hot during use or after use for a while. Please do not touch.
- Please be careful as the stainless pot may discolor if you heat it when it's empty.
- Please keep your eyes on the pot while cooking and be careful not to let it boil over.

## ●Steam

1. Set a steamer in the pot, and add water or hot water according to the cooking time.
  - ※ Please do not put in water (volume) exceeding the MAX line.
  - ※ Adding too much water (or broth) might worsen the quality of the cooked food.
2. Place the ingredients on top of the steamer.
3. Please set the temperature knob to "HI" with the lid on.

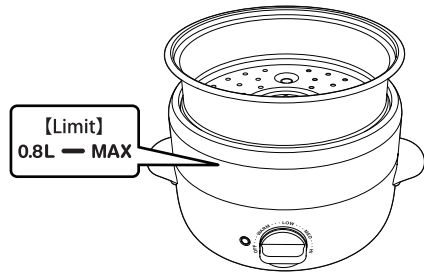


- Please be careful not to dry burn. It could damage the product or food.
- When opening the lid while cooking, please be careful of the steam. There is a risk of burns.
- Please remove the steamer and the pot from the main body after they have cooled down.
- After use or cleaning, some white or light brown powder may stick to the pot. This is due to the lime scale (calcium, iron, etc.) contained in water, and is not discoloration or corrosion of the pot itself. There is no health concern, but you are recommended to wipe them off after use.

## ●Grill

1. Securely set the grill plate to the main body.
2. Adjust the temperature control knob to your desired temperature.
3. Please use the lid as necessary.

- ※ Please adjust while checking the cooking condition of the ingredients.
- ※ When you want to cook the ingredients thoroughly, it is recommended to cook with the lid on.

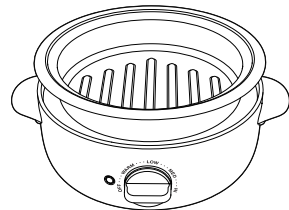



- Please do not use sharp tools such as metal spatulas, knives, skewers, or abrasive detergents and sponges. The coating gets damaged, which can cause peeling and deterioration.
- Please do not drop the plate or subject it to strong impacts. It can cause deformation and peeling of the coating.
- Please do not remove the plate while in use. It can cause burns.
- During and after use, the grill plate, lid, and main body become very hot. Please be careful not to get burned.

## ④ After cooking

1. Turn the temperature adjustment knob to the OFF position.
2. Unplug the power cord.
3. Allow the steamer, pot, or grill plate to cool slightly, then wipe off any burnt bits and seasoning while it's still warm using a soft kitchen paper or similar.
4. Remove the steamer, pot, and grill plate only after they have cooled down sufficiently.

※ Please be careful about burns.

【Temperature Adjustment Knob】

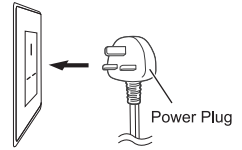
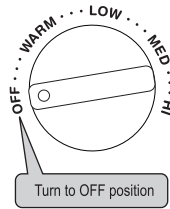


○ When not using for long periods of time, please clean each part and store it after it is thoroughly dried.

## CLEANING INSTRUCTIONS

### Cleaning the Main Body

- Please wipe off light dirt with a cloth dampened with water.
- Please wipe off oil stains with a soft cloth soaked in diluted neutral kitchen detergent.
- After using detergent, please wipe with a tightly wrung cloth.
- Finally, please wipe off the moisture with a dry soft cloth.
- Please remove any food or other items that have gotten into the gaps of the main unit with a brush or similar tool.
- Please do not wash the main body with water.

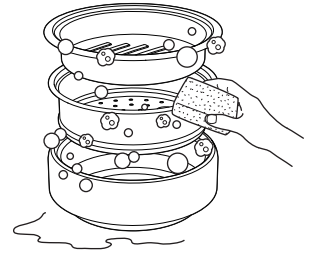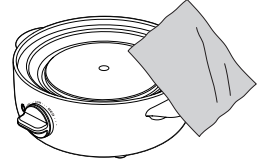

### Cleaning the Steamers, Pots, and Grill Plates

- The lid, steamer, pot, grill plate can be washed thoroughly. After using a neutral kitchen detergent and washing with a soft sponge, Please wash with water and immediately wipe off the moisture with a dry cloth and let it dry well.

### [When the dirt is severely stuck]

1. Please wash with a sponge soaked in a neutral kitchen detergent after slightly dipping in lukewarm water.
2. After washing with water, immediately wipe off the moisture with a dry cloth and make sure it is thoroughly dried.

- Please do not use with strongly acidic or alkaline substances. There is a risk of corrosion.
- If you use ingredients that are prone to color bleeds, such as tomatoes, or those with strong colors, high salt content, and strong acidity, like kimchi and Tabasco, there is a possibility that color bleed may occur.
- Please do not leave food or water unattended.
- Always unplug the power cord before proceeding.
- Please ensure that the main body, lid, steamer, and pot have cooled down sufficiently before proceeding.
- Please use a neutral kitchen detergent for cleaning. Please do not use a detergent with a polishing agent.
- Please do not use gasoline, thinner, alcohol, polishing powder, scrubbing brushes, etc.
- Please do not scrape the surface of steamers, pots, or grill plates with sharp metal objects such as spatulas, forks, or knives.
- Please do not use the dishwasher or the dish dryer.

Symptoms	▶	Check Contents	▶	Counter Measure
The pot, grill plate temperature does not rise.	▶	Is the power plug connected correctly?	▶	Please make sure to securely plug the power plug into the outlet.
	▶	Are you not doing octopus wiring?	▶	Please use a socket rated at 15A or more independently.
	▶	Is the temperature adjustment knob not turned OFF?	▶	Depending on the dish, adjust the temperature dial and align it with the scale.
	▶	Is the pot or grill plate shaking or tilting?	▶	Please make sure to properly set the pot and grill plate.
The food is hard to cook.	▶	Is there any foreign matter attached to the back of the pot, grill plate, or heating plate?	▶	Please remove the foreign object. ※Please perform after it has cooled down.
	▶	Isn't the temperature setting low?	▶	Please adjust to a moderate temperature.
The food gets badly burnt.	▶	Are you taking good care of the grill plate surface?	▶	Please perform maintenance on the grill plate.
	▶	Is the surface coating of the grill plate not peeling off?	▶	It will cause charring. Even if the surface coating peels off, it is harmless to the human body. However, if you are concerned, please consult with the store where you made the purchase or the "Customer Consultation Service".
Smoke is coming out, there is an odor.	▶	Is there any foreign matter adhered to the surface or heater plate of the pot or grill plate?	▶	Please remove any foreign objects. ※ Please do this only after allowing it to cool down sufficiently.
During use, if you hear a "click", It makes a creaking sound.	▶	It is due to the thermal expansion of the heating plate.	▶	This is not a malfunction, so please continue to use it as is.

※ If the issue does not improve even after following the above instructions, please contact our customer service.

## ● Information about replacement parts

\* Each part of this product is sold separately under the replacement part names in the table below.

\* Please contact the local service center for purchase.

Name of Replacement Parts	Model Number	Product Code
Glass Lid for Compact Multi Grill Pot	BOE115-GLASSLID	09991392
Grill Plate for Compact Multi Grill Pot	BOE115-GRILL	09991393
Steamer for Compact Multi Grill Pot	BOE115-STEAM	09991394
Pan for Compact Multi Grill Pot	BOE115-NABE	09991395

If you have followed the instructions on this user manual but still have problem in using the appliance, please contact the local distributor accordingly.

Please register your appliance online within 7 days after purchase. Or you must retain the purchase receipt as proof of purchase.

You must retain and present the purchase receipt or warranty registration record as proof of purchase when requesting for warranty service.

No international warranty is available. Please refer to the local distributor for the list of approved resellers.

Warranty is one year, counting from the purchase date as shown on the purchase receipt from authorized dealers.

Customers are required to bring in the appliance to service center for service.

The warranty is VOID if the product is damaged under the below circumstances:

- a. not used properly and did not follow the guidelines in this user manual.
- b. found to have been dismantled without prior authorization.
- c. damaged due to misuse or negligence.
- d. damaged due to force majeure like earthquake, thunder, flood, war.
- e. used for commercial purpose or under abnormal household use situations.
- f. improper care, like never cleaning the product.
- g. do not revise this user manual.
- h. damage originated from cooking oil / ingredients entered into the main unit.

Warranty does not cover consumable parts (e.g. toasting net, double grill pans, grill rack). The consumable parts are available for purchase and please contact the local distributor.

## SPECIFICATIONS

<b>Power Supply</b>	AC220-240V 50/60Hz
<b>Power Consumption</b>	600W
<b>Product Dimensions</b>	Approximately W230×H195×D200 (mm) (Dimensions when all stacked)
<b>Product Weight</b>	Approximately 1.5kg (including power cord)
<b>Code Length</b>	About 1.2m
<b>Safety Device</b>	Thermostat, Temperature Fuse
<b>Material</b>	Main Unit : Steel Steamer : Stainless steel Pot : Stainless steel Lid : Glass, Stainless steel Grill Plate : Aluminum-plated steel plate (fluororesin coating on the inner surface)
<b>Country of Origin</b>	China

※Please note that the specifications and design of the product may change without prior notice.

# WARRANTY REGISTRATION

Please contact your local distributor for specific details regarding warranty services.  
Please note that international warranty coverage is not available.

## HONG KONG AND MACAU

---

### **Ace Kitchen Ltd**

Unit 2203, 22/F, Lemmi Centre 50 Hoi Yuen Road, Kwun Tong, Hong Kong

Tel: +852 3568 7885 | [info@acehomehk.com](mailto:info@acehomehk.com) | [www.acehomehk.com](http://www.acehomehk.com)

Mon-Fri 10:00am – 6:00pm (by appointment)

Please complete the warranty registration at the link below within 7 days of purchase.

<https://warranty.acehomehk.com>

## SINGAPORE

---

### **Maison Ace Pte Ltd**

Vertex Tower B, #07-10, 33 Ubi Avenue 3, Singapore 408868

Tel: +65 69628776 | [hello@maisonace.com](mailto:hello@maisonace.com) | [www.maisonace.com](http://www.maisonace.com)

Mon-Fri 9:30am - 5:00pm (by appointment)

Please complete the warranty registration at our website: [www.maisonace.com](http://www.maisonace.com)

## THAILAND

---

### **Lux Ace Trading Co., Ltd.**

315, Room#19, 24th/F Chamchuri Square, Phaya Thai Rd., Pathumwan, Bangkok 10330, Thailand

Tel: +66 84-269-6952 | [hello@luxace.co.th](mailto:hello@luxace.co.th) | [www.luxace.co.th](http://www.luxace.co.th)

Mon-Fri 10:00am - 6:00pm (by appointment)