

Instructions and Safety Manual

22-10


Thank you for purchasing this product. Please read this manual carefully before your first use and keep it for future reference. Warranty registration information can be found in this manual.

This product is strictly for household use only and should not be used for commercial purposes.

| Important Safeguards ······ 1 |
|-----------------------------------|
| Parts······ 4 |
| How to Use ····· 5 |
| Cleaning and Maintenance ······ 8 |
| Troubleshooting ······ 10 |
| Product Specifications 12 |
| Terms and Condition ······ 13 |
| Warranty 14 |

HANDY VACUUM CLEANER

BAK808

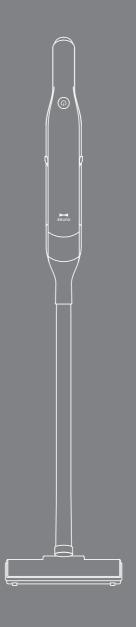

Please read this user manual carefully before you start to use your appliance and retain it for future reference.

The following symbols will indicate the level of danger and damage that may occur when this product is improperly used or when the following instructions are not followed.

♠ DANGER Could result in death or serious injury.

MARNNG Could result in death or serious injury.

♠ CAUTION Could result in injury or damage in property.

Please note the below signs for necessary actions in using the product.

Prohibited Actions

Required Actions

To prevent malfunctions and accidents, please be sure to follow the following items:

- This is a household product and is not designed for commercial use.
- Please do not use it for purposes other than cleaning.
- Please do not place heavy objects on the main unit and the charging cable.
- Do not place your appliance near children. Do not allow children or persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge to use.
- Using this product on a waxed floor may cause scratches on the surface of the floor due to friction, please be careful when using it.
- Please do not use this product without installing the dust bin and metallic mesh filter, in order to
 prevent foreign objects from entering the internal of the main unit and causing malfunction and
 accidents.
- After use, please clean the dust bin and metallic mesh filter as soon as possible.
- Please avoid keeping pets such as cats, dogs or small animals from damaging the main unit or the power cord.

Please do not inhale the items shown in the image below, in order to avoid causing malfunction and accidents:



Glass, needles, blades, and other sharp objects



Water and wet garbage



Pesticides and other chemical substances



A large quantity of sand and powder

♠ CAUTION

Please do not place this product in a hot and enclosed area, as it may cause deformation of the body and damage to the battery, resulting in accidents.

Product Usage

WARNING



Do not disassemble, repair, or modify the product by yourself to avoid injury or electric shock.



Do not put any conductive objects (such as metal objects) on the plug to avoid causing a short circuit of the battery and damage to the product, or even causing a fire.



If the product starts automatically without pressing any buttons when charging, please remove the charging cable immediately to stop charging to avoid fire or electric shock.



During charging, please fully insert the USB plug to prevent short circuit or electric shock accidents.



After charging is complete, please remove the charging cable immediately to avoid accidents such as electric shock or leakage.



Please do not damage or modify the charging cable. Do not twist or pull the USB charging cable to avoid causing damage to the cable, resulting in electric shock or leakage accidents.



Please use a TYPE-C charging cable to charge, and only use a 5V 2A USB power charger to charge. Please dry your hands before charging.



Do not allow children or persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge to use.



Please do not use this product in uneven places or near fragile objects.



When using this product, please do not insert your fingers into the intake port, and do not direct the intake port towards any part of your body, in order to avoid injury.



Do not wash this product under water directly.



Please do not inhale

- High temperature materials (such as cigarette butts, matches, or hot ash, etc.),
- Fine particulate matter (such as lime, cement sawdust, renovation dust, ash, carbon powder, etc.)
- Large and sharp fragments (such as glass, nails, and large needles etc.)
- Dangerous substances (such as solvents, descalers, etc.), chemical substances (such as acidic cleaning agents, etc.)
- Flammable and explosive liquids (gasoline, alcohol-based products) etc.

Product Usage



CAUTION



Do not block the exhaust port with your hands, towels, blankets or any other objects. This will cause the machine to overheat, leading to malfunction or accidents.



Do not block the intake port for long periods of time. This can cause the machine to overheat and result in component failure or accidents.



Please do not use wet metallic mesh filter and HEPA filter to avoid malfunction or accidents



When using or after use, please do not get close to a heat source as it may cause deformation, short circuit or accidents.



Do not hit or strike this product forcefully, otherwise it will cause product damage and malfunction.



After cleaning the dust bin, it must be installed back into the main unit to prevent the motor from being contaminated with dust, leading to abnormal operation of the device.



Please regularly check the TYPE-C USB port. If there is dust accumulation, please clean it in a timely manner to avoid increasing humidity and causing unexpected short circuits



If the charging cable is damaged, please stop using it immediately.



When removing the TYPE-C cable from the device, the charging cable must also be removed from the power source.



Do not turn on the device while it is in the process of charging.



Please do not place the product in high temperature or damp places in order to prevent equipment failure and accidents.

Built-in Battery Safety Information



DANGER



Do not dismantle or modify by yourself.




Do not put into fire or heat up.



Do not hit or strike with force.



Do not use charging cables other than the one provided with this product.

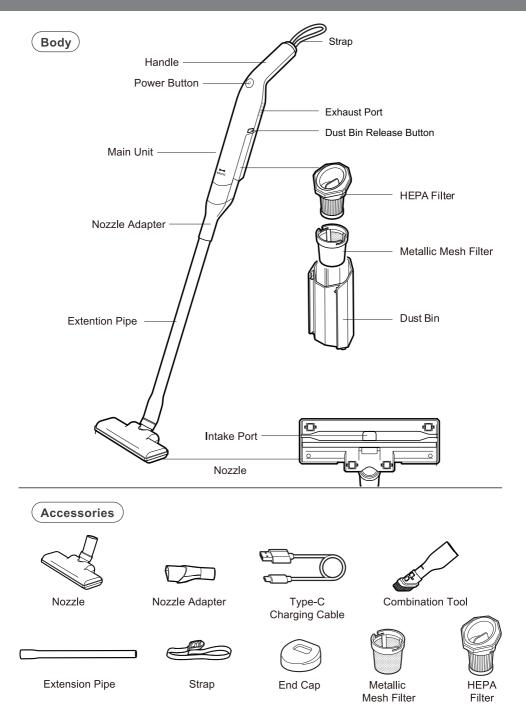

Installing the Vacuum Cleaner and Nozzle

1. Install the nozzle adapter onto the vacuum cleaner. When you hear a "Click" sound, it means the installation is complete.


Attach the extension pipe to the nozzle adapter and then install the nozzle onto the extension pipe. The product installation is complete.

Installation and Removal of Dust Bin

 Align the protruding part of the dust bin to the groove of the vacuum cleaner.

Press and push as shown in the picture, and when you hear a "Click" sound and it is fastened, it indicates that the dust bin is installed successfully.

Press the "PUSH" buttons on both sides of the vacuum cleaner and gently remove the dust bin for cleaning.

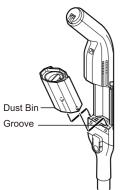





Click

Installation of Strap

1. Thread one end of the strap through the end cap of the vacuum cleaner handle.

2. As shown in the picture, fasten the strap and the installation is complete. Then, put on the end cap to finish the installation.


3. Can be hung with a hook and stand upright on the wall.









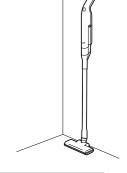





Please make sure to securely fasten the strap to avoid product falling and causing damage to the ground or malfunction of the product.

Remove the Vacuum Cleaner and Nozzle

 - 1. Remove the nozzle adapter.
- 2. Press the button under the nozzle adapter to remove the nozzle adapter.



Installation of Vacuum Cleaner and Accessories

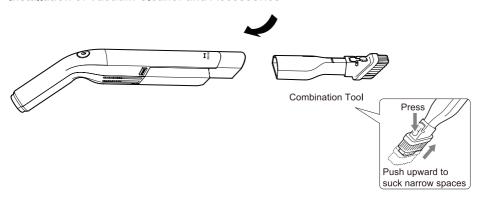

Safety Device

This product is equipped with a safety device to prevent mechanical failures and accidents caused by lithium battery overheating. When the motor is overloaded or overheated, the safety device will activate and the indicator light will continuously flash green. The product will enter the safety mode and stop operation.

1. Conditions for Activating the Safety Device

- When the exhaust port or intake port of the vacuum cleaner is blocked by large items.
- · When inhaling large amounts of sand or powder.
- When the HEPA filter or metallic mesh filter is blocked.
- When the HEPA filter or metallic mesh filter is used for a long time in a wet or dusty state.


2. When the Safety Device is Activated

When the safety mode is activated, the product will stop operation. Please refer to the "Troubleshooting" section or leave the product for about 1 hour to cool down before operating it as usual. If the safety device frequently activates during normal use, please contact customer service.

Before the first use or if not used for a long time, it is necessary to fully charge the device first.

Start Charging

- 1. Insert the Type-C charging plug into the charging port at the back of the main unit. Insert the other end into the power adapter and connect to the power source to start charging.
- 2. When the red light turns on, it indicates that charging is in progress and the charging time is about 3.5 hours. If the battery temperature is too high, the indicator light will continuously flash green. Please unplug the charging cable, cut off the power, and wait for about 1 hour before following the above steps to charge again.

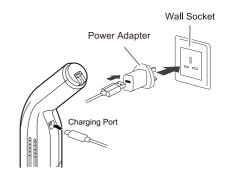


Charging Complete

After the charging is completed, the green light will turn on. Please first unplug the charging cable from the charging port, and then remove the power adapter.

Power On/ Off

- 1. Press the power button to turn on the device (default is low mode), then press the power button again to turn it off.
- 2. When the operation is in progress, press and hold the power button for about 2 seconds to switch to high mode. Press and hold the power button again to switch to low mode.

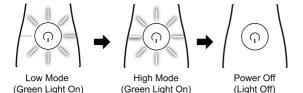

Tips: It is normal for the handle to become hot when in use



∴ CAUTION

- Please do not block the intake port or exhaust port for a long time, which can easily cause the body to heat up and deform, leading to malfunctions and accidents.
- Please do not use this product in the bathroom or in a damp environment, otherwise it may easily lead to accidents such as electric shock or short circuit.

Lithium Battery Safety Information


- The built-in lithium battery is a consumable item, the battery can be charged for around 500 times. Repeated charging will weaken the duration of each use.
- If charges more than that, it may not be possible to charge during use, or the operation time will be shortened even if it is fully charged
- If you need to replace the battery, please do not disassemble it by yourself. Please contact the customer service to make a maintenance appointment.
- If the product is not used for a long time, the battery will discharge naturally and age gradually. In order not to affect the battery's lifespan, please recharge the battery every 3 months on a regular basis.
- Temperature requirements for charging environment: 5~35°C (Please do not charge, use or place this product in a high-temperature environment)

Please do not clean the entire main unit with water directly (except for the metallic mesh filter and dust bin).

Before maintenance or cleaning, please empty the garbage from the dust bin first.


Product Maintenance

- 1. Firstly, separate the main unit and accessories.
- 2. Use a clean, slightly damp soft cloth to wipe off stains from all components.
- 3. Clean the dirt, hair, cotton scraps and other debris from the nozzle.

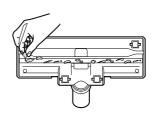


Maintenance of Dust Bin

 Press the "PUSH" buttons on both sides of the main unit and gently remove the dust bin from the main unit.

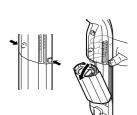

2. Take out the HEPA filter and metallic mesh filter from the dust bin and empty the garbage inside.

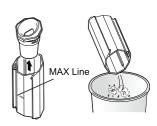

Hold the HEPA filter and turn it counterclockwise to separate it from the metallic mesh filter. The metallic mesh filter can be washed with water.




When cleaning the HEPA filter, please use a soft brush to gently wipe away dust and dirt along the folds of the filter.



5. After cleaning the dust bin and metallic mesh filter, place them in a well-ventilated area to dry. Do not use a hair dryer or expose them to direct sunlight, as the components may become deformed due to high temperatures.

Installing Dust Bin

Place the HEPA filter into the groove of the metallic mesh filter (as shown as below) and turn it clockwise until it is securely fastened. After installation, place the metallic mesh filter back into the dust bin.

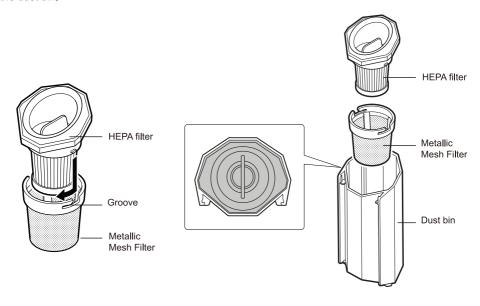

⚠ CAUTION

- It is recommended to clean the dust bin immediately after each use. If the dust accumulation
 exceeds the MAX line, the dust bin must be cleaned; otherwise, it may cause the filter to
 become blocked, reduce suction, or cause the machine to overheat, leading to malfunction
 and accidents.
- Please do not use water to clean the HEPA filter, and do not install and use a damp HEPA filter after washing with water. Otherwise, it may cause malfunction and lead to accidents.
- Filter are recommended to be replaced every 3-6 months, depending on the household environment and frequency of use. It is also recommended to replace the filter if a decrease in suction is noticed.

Before sending the appliance for service, please check the points below:

| Symptoms | ▶ Probable Causes | ▶ Recommended Solutions |
|---|--|--|
| Product cannot operate. | ▶ Is the product charged? | ▶ Please charge the battery. |
| | Is the product running out of battery? | ▶ Please charge the battery. |
| Product cannot charge Indicator light continues to flash. | Using an incorrect power adapter for charging? | Please use a 5V 2A USB power adapter to charge only. |
| | Activated security device. | Please tum off the power and leave it for about 1 hour. Restart it after the main unit has cooled down. |
| | ▶ Is the dust bin full? | Please clean the dust bin. |
| Suction weakened. | Is there any foreign object blocking the nozzle? | ▶ Remove foreign objects from the nozzle. |
| | ▶ Is the filter clogged? | Clean the filter and metallic mesh filter. |
| | Is the metallic mesh filter not installed correctly? | Please install the metallic mesh filter correctly. |
| | Is the product running out of battery? | ▶ Please charge the battery. |
| Dust seeps from the exhaust port. | Is the metallic mesh filter not installed correctly? | Please install the metallic mesh filter correctly. |
| Cannot install dust bin. | Is the metallic mesh filter not installed correctly? | Please install the metallic mesh filter correctly. |
| Excessive noise when in use. | Does the dust bin and filter have too much accumulated dust? | Please clean the dust bin and metallic mesh filter. |
| | Is the intake port blocked by foreign objects? | Please clean the foreign objects from the intake port. |
| Product stops working suddenly when in use. | Activated security device. | Please turn off the power and leave it for about 1 hour. Restart it after the main unit has cooled down. |
| | ls the product running out of battery? | ▶ Please charge the battery. |

XIf the problems persist, please contact customer service for service.

| Output Voltage | DC 11.1V |
|---------------------------|--|
| Input Voltage | DC 5V 2A |
| Built-in Battery | 2200 mAh |
| Power | 100 W |
| Charging Time | Approx. 3.5 hours |
| Continuous Operating Time | Approx. 30 mins (Low Mode) / Approx. 13 mins (High Mode) |
| Dust Bin Capacity | Approx. 150 ml |
| Size | Assembled: Approx. 224 (W) x 100 (D) x 1045 (H) mm Main Unit: 74 (W) x 100 (D) x 442 (H) mm |
| Weight | 0.65 kg / 0.9 kg (Including nozzle) |
| USB Cable Length | About 1 m |
| Country of Origin | China |
| ,g | |

[%]The above specifications are subject to change without notice.

- 1. If you have followed the instructions on this user manual but still have problem in using the appliance, please contact the local distributor accordingly.
- 2. Please register your appliance online within 7 days after purchase. Or you must retain the purchase receipt as proof of purchase.
- 3. You must retain and present the purchase receipt or warranty registration record as proof of purchase when requesting for warranty service.
- 4. No international warranty is available. Please refer to the local distributor for the list of approved resellers.
- 5. Warranty is one year, counting from the purchase date as shown on the purchase receipt from authorized dealers.
- 6. Customers are required to bring in the appliance to service center for service.
- 7. The warranty is VOID if the product is damaged under the below circumstances:
 - a. not used properly and did not follow the guidelines in this user manual.
 - b. found to have been dismantled without prior authorization.
 - c. damaged due to misuse or negligence.
 - d. damaged due to force majeure like earthquake, thunder, flood, war.
 - e. used for commercial purpose or under abnormal hosuehold use situations.
 - f. improper care, like never cleaning the product.
 - g. do not revise this user manual.
 - h. damage originated from cooking oil / ingredients entered into the motor unit.
- 8. Warranty does not cover consumable parts (e.g. toasting net, double grill pans, grill rack). The consumable parts are available for purchase and please contact the local distributor.

Please refer to the local distributor for warranty service details. Warranty period is one year and only covers the country of original purchase.

International warranty is not available.

HONG KONG AND MACAU

Ace Kitchen Ltd

Unit 2205-06, 22/F, Lemmi Centre, 50 Hoi Yuen Road, Kwun Tong, Hong Kong

Tel: +852 3568 7885 | info@acehomehk.com | www.acehomehk.com Mon-Fri 10:00am – 6:00pm (by appointment)

Please complete the warranty registration at the link below within 7 days of purchase. https://warranty.acehomehk.com

SINGAPORE

Maison Ace Pte Ltd

Vertex Tower B, 33 Ubi Avenue 3, Singapore 408868

Tel: +65 69628776 | hello@maisonace.com | www.maisonace.com Mon-Fri 9:30am - 5:00pm (by appointment)

Please complete the warranty registration within 7 days of purchase: www.maisonace.com

THAILAND

Lux Ace Trading Co., Ltd.

315, 24th/F Chamchuri Square, Phaya Thai Rd., Pathumwan Bangkok 10330, Thailand

Tel: +66 84-269-6952 | hello@luxace.co.th | www.luxace.co.th Mon-Fri 10:00am - 6:00pm (by appointment)