
MO-MC-L2 Pure Slim LED Clock 30cm (M) 簡約LED數字鐘 (M)

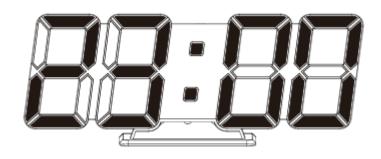

【特點】

- 14毫米的超薄厚度
- 配備遙控器, 方便設定
- 可以擺放在桌面上或者掛在牆上兩種方式可選
- 提供兩種顯示模式(時間顯示、時間/日期/溫度輪播顯示)
- 使用光感器實現自動調節亮度
- 4級亮度調節
- 保存時間設置
- 鬧鐘功能
- 日曆顯示
- 溫度顯示(°C 或°F)

[Features]


- 14mm slim thickness
- Easy setting with a remote control
- Both standing on a table or being hung on the wall are available.
- Two types of display mode available (Time display, Time/Date/Temperature display rotation)
- Automatic brightness control using light sensor
- 4 levels of brightness adjustment
- Time memorizing
- Alarm
- Calendar
- Temperature display (°C or °F)

【成分】

- LED鐘(包括CR2032電池用於時間記憶)
- 遙控器(包括CR2032電池)
- 托架
- 5米USB電線-適配器
- 變壓器
- 說明書

[Composition]

- LED clock (CR2032 battery included for time memory)
- Remote control (CR2032 battery included)
- Cradle
- 5m USB cable -Adaptor
- Adaptor
- Manual

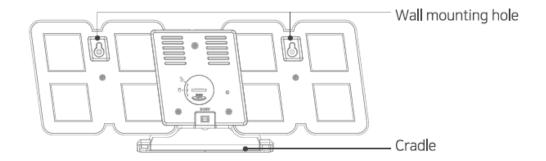

【安裝方式】

連接隨機的USB電線和電源變壓器,然後插入主機背面的電源插座。按您的喜好安裝時鐘。

[How to Install]

Connect the included USB cable and power adaptor, and then plug the cable into the power socket on the back of the main unit. Install the clock in the way you want.

掛起

- 1. 在您想安裝的方裝上掛鉤或釘子。
- 2. 將時鐘背部的螺絲孔掛在牆上掛鉤或釘子上, 裝上時鐘。

座枱

- 1. 將附帶的支架插入主機底部。
- 2. 將其放在一個平坦的表面上使用。


Hanging

- 1. Attach the wall hooks or drive nails in the location you want to install.
- 2. Mount the clock by hanging the screw holes in the back of clock on the wall hooks or nails.

Stand

- 1. Insert the included cradle into the bottom of the main unit.
- 2. Please use it in a flat surface.

【Remote Control Buttons遙控器按鈕】

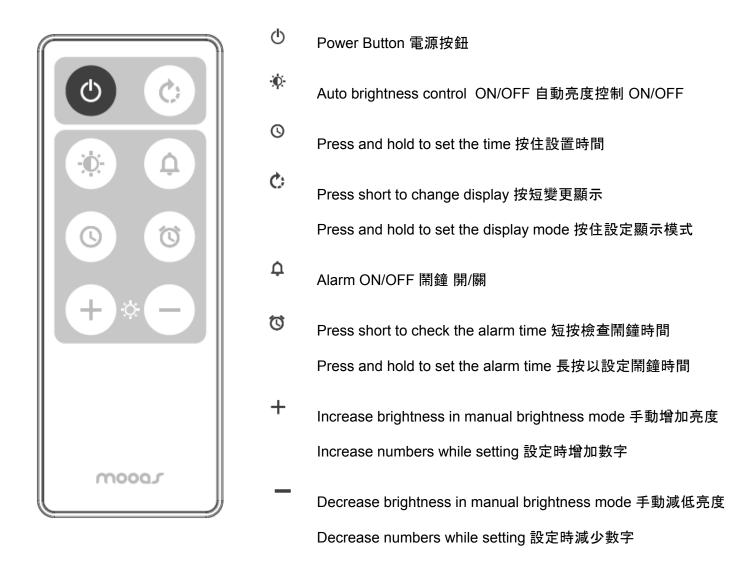

[How to USE 使用方法]

顯示 ON/OFF

- 按 也按鈕以開關顯示。
- 若出現任何問題, 請不要按下電源按鈕, 而是完全斷開並重新連接電源。
- 即使 LED 顯示屏關閉, 鬧鐘聲仍然響起。

Display ON/OFF

- Press button to turn ON/OFF the display.
- If any trouble occurs, do not press the power button but completely disconnect and reconnect the power.
- The alarm sounds even when the LED display is off.

時間/日期/溫度設定

- 1. 按住 ^③ 按鈕設置時間和日期, 順序設置:12/24小時制模式 -> 小時 -> 分鐘 -> 年 -> 月 -> 日 -> °C/°F。
- 2. 預設是24小時制模式, 00:00, 2019/01/01, 和°C。

 
- 3. 按+和-來增加或減少數字,按壓 ③ 確認設置。
- 4. 長按+和-按鈕可以快速增加或減少數字。
- 5. 如果在設置時大約15秒內沒有操作,它會自動結束設置模式並返回到時間顯示。

Time/Date/Temperature Setting


- 1. Press and hold button to set the time and date. Set in order as ;12/24H time mode -> Hour -> Minute -> Year -> Month -> Day -> °C/°F.
- 2. The default setting is 24H mode, 00:00, 2019/01/01, and °C.
- 3. Increase or decrease the numbers by long pressing + and buttons, and press button to confirm the setting.
- 4. Press and hold + and buttons to increase or decrease the numbers guickly.
- 5. If no operation occurred for about 15 seconds while setting, it automatically ends the setting mode and back to the time display.

*注意: 如果您將時間設置為12小時制, 上午的分鐘會顯示為'A', 下午會顯示為'P'。

*Notice: If you set the time in 12H mode, 'A' is displayed in minute part in the morning and 'P' will be displayed in the afternoon.



In the morning 上午

 


In the afternoon 下午

 年份可設定從2000年到2099年。Years can be set from 2000 to 2099.









- -溫度範圍為-9°C ~ 50°C或16°F ~ 122°F。如果溫度超過三位數,則在°F模式下不顯示°F符號。
- -Temperature range is from -9°C \sim 50°C or 16°F \sim 122°F. If temperature exceeds three digits, the symbol °F will not be displayed with the °F mode.

鬧鐘設定

  - 1)按下 🗘 按鈕以啟動/關閉鬧鐘, 預設設定為關閉。
- 2) 在時間顯示模式下, 按下 ♀ 按鈕進入鬧鐘設定模式。
- 3) 在鬧鐘設定模式下, 按下 🗘 按鈕以啟動/關閉鬧鐘。







Alarm OFF 鬧鐘關閉

- 4) 當鬧鐘響起時, 冒號會閃爍。
- 5) 當鬧鐘響起時, 按下任意按鈕即可停止鬧鐘。
- 6) 若鬧鐘響起後沒有任何操作, 鬧鐘持續鳴響2分鐘。

0-10秒:每秒鳴響一次嗶聲。 11-20秒:每秒鳴響兩次嗶聲。 21-30秒:每秒鳴響三次嗶聲。 30秒後,每秒鳴響四次嗶聲。

Alarm Setting

- 1. Press \bigcirc button to turn ON/OFF the alarm. The default setting is Alarm off.
- 2. On the time display, press $\ \ \ \ \ \$ button to enter the alarm set mode.
- 3. On the alarm set mode, press Φ button to turn ON/OFF the alarm.
- 4. The colon blinks when the alarm sounds.
- 5. You can stop the alarm by pressing any button when the alarm sounds.
- 6. If no action is taken when the alarm goes off, the alarm lasts for 2 minutes.
 - 0-10": Beep sounds once every second.
 - 11-20": Beep sounds twice every second.
 - 21-30": Beep sounds three times every second.
 - After 30 seconds, you will hear four beeps every second.

鬧鐘時間設定

- 1. 如果您按下 [©] 按鈕, LED顯示屏會閃爍並顯示鬧鐘時間。
- 2. 按住 🐯 按鈕來設定鬧鐘時間。在設置過程中,相應的數字會閃爍。設置順序:鬧鐘小時 -> 鬧鐘分鐘
- 3. 使用"+"和"-"按鈕來增加或減少數字。長按按鈕可以快速增加或減少數字。
- 4. 按下 Ö 按鈕確認設置,或者若約15秒無操作,則會確認設置並返回時間顯示屏。

Alarm Time Setting

 
- 1. If you press to button, LED display blinks and the alarm time is displayed.
- 2. Press and hold button to set the alarm time. The corresponding number blinks during setup. Sequence: Set Alarm Time -> Alarm Minutes
- 3. Use + and buttons to increase or decrease the number. Press and hold the button to increase or decrease the number quickly.
- 4. Press button to confirm the setting, or if no operation occurred for about 15 seconds, it confirms the setting and back to the time display screen.

顯示設定

 
- 1. 按 以改變顯示模式的順序:時間->日期->溫度
- 2. 長按 佐按鈕來啟用或停用顯示自動旋轉功能。

Display Setting

- 1. Press button to change the display mode. Sequence: Time-> Date -> Temperature
- 2. Press and hold button to enable or disable the display auto rotation function.







時間顯示(5")-> 日期顯示(3")-> 溫度顯示(3")-> 旋轉 Time display(5")-> Date display(3")-> Temperature display(3")-> Rotation

 
使用光源感測器的自動亮度控制

啟用此功能時, 會根據環境的亮度, LED 的亮度將自動調節為1~4個級別。在黑暗的地方, LED 將自動調節為最暗; 而在明亮的地方, LED 將自動調節為最光。(因應環境亮度自動調節為1~4個級別)


- 1)按下 🎾 按鈕來開/關自動亮度控制功能。
- 2)預設為自動亮度控制關閉。
- 3) 如果您關閉自動亮度控制, 亮度會改為先前的設定值。


Automatic brightness control using light sensor When this function is activated, the brightness of LED is automatically adjusted in 1~4 levels according to the ambient brightness. In dark places without light, the LED automatically adjust to the lowest brightness and in bright places the LEDs automatically adjust to the highest brightness. (Automatic adjustment in 1~4 levels according to ambient brightness)


- 1. Press button to turn ON/OFF the automatic brightness control function.
- 2. The default setting is automatic brightness control OFF.
- 3. If you turn off the auto brightness control, the brightness will change to the previous setting value.




    自動亮度控制已啟用 Automatic brightness control ON









自動亮度控制關上 *01、02、03、04 是亮度級別

Automatic brightness control OFF, 01, 02, 03, 04 are the brightness levels

 
易於亮度調整

 
- *易於亮度調整只在自動亮度調整功能被停用時才可用。
 - 1. 您可在時間顯示時按下+和-按鈕來調整LED亮度的4個級別。
 - 2. 按下+按鈕可使LED更亮,按下-按鈕可使LED變暗。
 - 3. 預設為高亮度。
 - 4. 當設置的鬧鐘時間到達時, 若LED顯示熄滅, 鬧鐘聲音會響起並且LED顯示會自動打開。LED亮度保持 先前的設置。

 
Easy brightness adjustment

 
*Easy brightness adjustment works only when the Auto brightness adjustment function is deactivated.

- 1. You can adjust LED brightness in 4 levels by pressing + and buttons in the time display.
- 2. Press + button to make the LED brighter, and press button to make the LED darker.
- 3. The default setting is high level.
- 4. When the set alarm time is reached with the LED display off, the alarm sounds and LED display turns on automatically. LED brightness maintains the previous setting.









High level 高亮度

Medium level 中亮度

Med-Low level中低亮度

Low level 低亮度

冒號淡入/淡出設置

 
當分鐘改變、鬧鐘響起、時間設定變更或者鬧鐘設定變更時, 淡入/淡出效果會出現。

- * 然而, 即使將淡入/淡出效果設置為關閉, 當鬧鐘響起時, 淡入/淡出效果仍會出現。
- 1) 長按 🌣 按鈕開啟/關閉淡入/淡出效果。
- 2) 預設設置為淡入/淡出功能開啟。

Colon Fade IN/OUT setting


The fade in/out effect appears when the minute changes, when the alarm sounds, when the time is set, and when the alarm is set.

- * However, even if the fade in/out effect is set to OFF, the fade in/out effect appears when an alarm sounds.
 - 1. Press and hold button to turn ON/OFF the fade in/out effect.
 - 2. Default setting is Fade IN/OUT function ON.



淡入/淡出 開啟 Fade in/out ON



 

淡入/淡出 關閉 Fade in/out OFF

【注意事項】

- 1. 請勿隨意拆卸或修改時鐘。
- 2. 請勿用力彎曲或拉扯USB線。
- 3. 請勿隨意拉長或剪斷電源線。
- 4. 請使用附帶的電纜。
- 5. 請勿用濕手觸碰電源線,並請注意避免接觸水或潮濕。
- 6. 請勿在易燃物品附近、直射陽光下或加熱設備附近安裝時鐘。
- 7. 請注意不要讓異物進入時鐘和電源線內。
- 8. 長時間不使用時,請拔掉電源線並妥善存放。
- 9. 請放在兒童拿不到的地方。

[Precautions]

- 1. Do not disassemble or modify the clock arbitrarily.
- 2. Do not bend or pull the USB cable with force.
- 3. Do not stretch or cut the power cord arbitrarily.
- 4. Please use it with the included cable.
- 5. Do not touch the power cord with wet hands, and be careful not to expose it to water or moisture.
- 6. Do not install the clock near flammable objects, in direct sunlight, or near heating appliances.
- 7. Be careful not to let foreign objects inside the clock and the power cord.
- 8. When not in use for a long time, unplug the power cord and store it.
- 9. Keep out reach of the children.

【特點】

產品:純瘦超薄LED時鐘30cm(M)

材質:ABS

重量:187g(不含適配器)

尺寸:298.3 x 20.5 x 100.8 mm(長*寬*深)

電源:5V 1A適配器(附贈)

[Features]

Product: Pure Slim LED Clock 30cm (M)

Material: ABS

Weight: 187g (Excluding adaptor)

Size: 298.3 x 20.5 x 100.8 mm (L*W*D)

Power: 5V 1A adaptor (Included)