

56. Extract the crank shaft roller bearing inner race : use tool No. 000170645. This operation can be carried out with the crank shaft fitted on vehicle or as shown in *fig. 23*.

