

customerservice@arnsberg.com www.arnsberg.com

### ASSEMBLY INSTRUCTIONS

## **CANNES** 500100106

#### Parts Included:

- 1) Base
- 2) Tube
- 3) Shade
- 4) Socket
- 5) Socket Ring

Bulb (not included)



#### **CSA / UL Safety Requirements**

CSA/UL requires that these IMPORTANT SAFETY INSTRUCTION be listed:

This portable lamp has a polarized plug (one blade is wider than the other) as a safety feature to reduse the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. Do not alter the plug.


#### **Care Instructions**

Arnsberg suggests using only a micro fiber cleaning cloth to clean this fixture. If required, a slightly damp cleaning cloth may be used to spot clean. Do not use common household cleaners on this fixture, as the final finish may be damaged as a result. Enjoy your new Arnsberg fixture.



www.arnsberg.com

#### **Mounting Instructions**

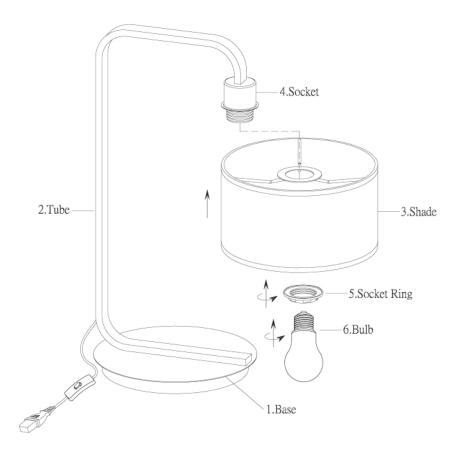

# ASSEMBLY INSTRUCTIONS CANNES 500100106

#### **Assembly Instructions**

- 1. Carefully unpack and layout the parts as shown in the illustration.
- 2. Place the shade (#3) over the socket (#4) and secure the shade with the socket ring (#5).
- 3. Insert the bulb (#6) (not included) into the bulb socket.
- 4. Plug the polarized plug into the outlet.
- 5. Installation is complete. Turn the light switch on to activate the fixture.