

INSTALLATION INSTRUCTIONS

Item#2152-613 (Pendant For Chain Hang)

READ AND SAVE THESE INSTRUCTIONS

WARNING! SHUT POWER OFF AT FUSE OR CIRCUIT BREAKER.

AVERTISSEMENT! COUPER LE COURANT AU NIVEAU DES FUSIBLES OU DU DISJONCTEUR.

PREPARATION (Fig. 1)

1. Shut off power at the fuse box or circuit breaker box and remove the old fixture including the mounting hardware.
2. Carefully unpack your new fixture and lay out all the parts in a clean area. Take care not to misplace any small parts necessary for installation.

ASSEMBLING THE FIXTURE (Fig.1&Fig. 3)

3. Place notch of shade (L) into stem (N) and with nut (K).
4. Place metal washer (J) over all thread (M).
5. Screw acrylic assembly (I) to all thread (M) until tight.
6. Thread all thread (D) into ceiling loop (E) and tighten with nut (Q).
7. Thread the other end of all thread (D) into crossbar (A) and tighten with nut (Q). Note: The length of all thread (D) into the crossbar (A) may be adjusted if necessary.
8. Take crossbar assembly and mount it to junction box (not included) with mounting screws (Size: #8-32N*L0.5"). The side of crossbar marked "GND" must face out.
9. Attach quick link (F1) to the chain loop (H) and chain (G). Quick link must be completely closed when installed. By measuring, determine the correct number of links needed for the desired hanging height. Use a pair of chain pliers to open one end link of chain (G) and discard excess chain. Slide lock collar (R) and canopy (C) over chain (G). Attach quick link (F) to the other end of chain (G). Raise fixture and attach quick link (F) to ceiling loop (E), then close the quick link. Carefully lace fixture wires through chain links and pull until tight. Feed wires through the lock collar, canopy, ceiling loop and all thread, then pull until tight.

CONNECTING THE WIRES (Fig. 2)

10. Connect the electrical wires as shown in fig 2, making sure that all wire connectors are secured. If your junction box has a ground wire (green or bare copper), connect the fixture's ground wire to it. Otherwise, connect the fixture's ground wire directly to the crossbar (A) using the green screw provided. Tuck wire connections neatly into junction box.

COMPLETING THE INSTALLATION (Fig. 1)

11. Raise canopy (C) over ceiling loop (E) and secure with loop collar (R).
12. Install (5) five medium base bulbs (P) up to 60 watts each or CFL or LED equivalent (not included) in accordance with the fixture specification—**DO NOT EXCEED THE MAXIMUM WATTAGE RATING! (NE PAS DEPASSER LA PUISSANCE NOMINALE MAXIMALE!)**

Your installation is now complete. Return power to the junction box and test the fixture.

Note: Illustration (Fig. 1) on this manual is for installation purposes only. It may or may not be identical to the fixture purchased.

Notice: It is important to use proper chain pliers (not included) to OPEN and CLOSE the chain included with this fixture. Do not open them with other tools that may twist or stress the chain links. It is important to use proper chain pliers like the ones shown in the diagram.

Fig.1

Set#A-012

- cross bar*1
- outlet box screw*2
- ground screw*1

HCH2072-613

Shade#SH2152

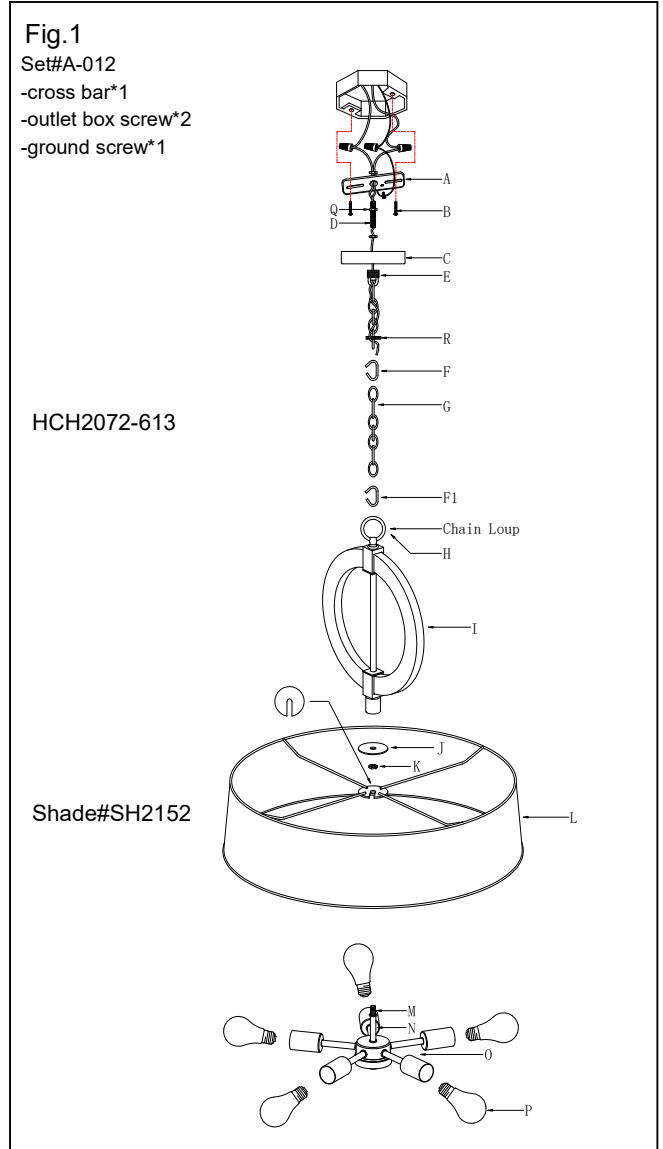


Fig. 2

FIXTURE WIRES
Black or
Smooth



HOUSE WIRES
Black
(Hot)

FIXTURE WIRES
White or
Ribbed



HOUSE WIRES
White
(Neutral)

FIXTURE WIRES
Bare
Copper
(Ground)



HOUSE WIRES
Green
(Ground)

 



Fig.3



a. Hardware Bag:

- A.Cross Bar*1
- B.Outlet Box Screw*2
- C.Canopy *1
- D.All Thread*1
- E.Ceiling Loop*1
- R.Lock Collar*1
- Q.Nut *3

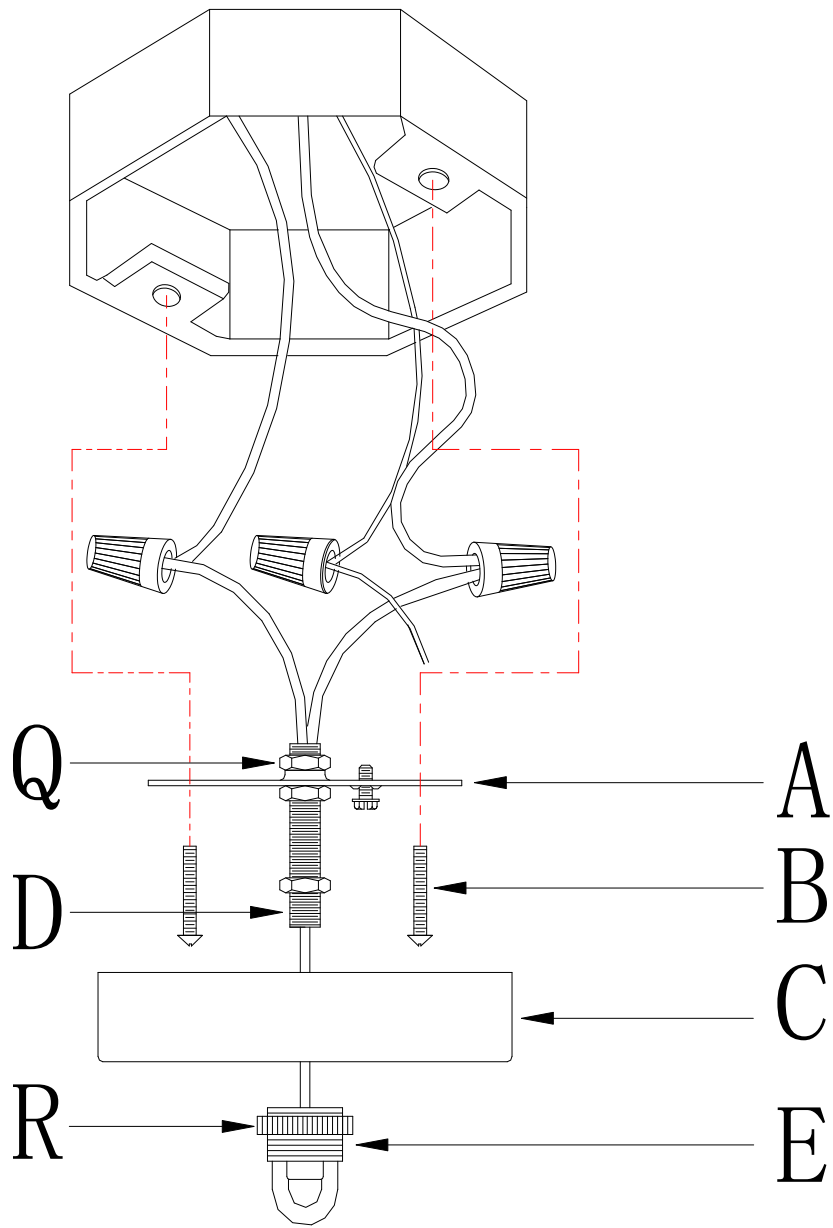