

INSTALLATION INSTRUCTIONS

Item#2663-723 2663-717 (New. 12/30/2022)

READ AND SAVE THESE INSTRUCTIONS

WARNING! SHUT POWER OFF AT FUSE OR CIRCUIT BREAKER.
AVERTISSEMENT! COUPER LE COURANT AU NIVEAU DES FUSIBLES OU DU DISJONCTEUR.

ASSEMBLING THE FIXTURE (Fig. 1)

1. Shut off the power at the fuse box or circuit breaker. If necessary, remove old fixture, including mounting hardware.
2. Carefully remove fixture from carton and check that all parts are included as shown in the illustration.
3. Adjust the arms (I) to proper position. Refer to illustration (L).
4. Screw fixture loop (A) to coupling (B).

MOUNTING THE FIXTURE (Fig. 2)

5. Thread all thread into ceiling loop until snug.
6. Thread the other end of the all thread into crossbar. Note: The length of the all thread into crossbar may be adjusted if necessary.
7. Secure all thread to crossbar with hex nut.
8. Take crossbar assembly and mount it to outlet box (not included) using the mounting screws (Size: #8-32N*L1"). The side of crossbar marked "GND" must face out.
9. By measuring, determine the correct number of links needed for desired hanging height. Using chain pliers, disconnect and discard excess chain.
10. Open one end of chain and connect to fixture loop, then close the chain.
11. Carefully lace fixture wires through chain.
12. Slip lock collar and canopy over chain and allow them to rest on fixture body.
13. Open another end of chain and attach it to the ceiling loop, then close the chain.
14. Carefully feed fixture wires through ceiling loop and all thread and pull until tight.

CONNECTING THE WIRES (Fig. 3)

15. Connect the electrical wires as shown in Fig. 3 making sure that all wire connectors are secured. If your outlet box has a ground wire (green or bare copper), connect the fixture's ground wire to it. Otherwise, connect the fixture's ground wire directly to the crossbar using the green screw provided.
16. Tuck wire connections neatly into outlet box. Raise canopy to ceiling and secure with lock collar.

FINISHING THE INSTALLATION (Fig.1)


17. Place bobeches (K) over candle covers (J).
18. Hang wooden drops (D,M,N,O) onto fixture body in proper position.
19. Thread finial (H) to fixture body and attach wooden drops (O).
20. Install (3) three candelabra base bulbs up to 60 watts each or CFL or LED equivalent (not included) in accordance with the fixture specification—**DO NOT EXCEED THE MAXIMUM WATTAGE RATING! (NE PAS DEPASSER LA PUISSANCE NOMINALE MAXIMALE!)**.

Your installation is now complete. Return power to the outlet box and test the fixture.

Note: Illustration (Fig. 1) on this manual is for installation purposes only. It may or may not be identical to the fixture purchased.


Fig. 1

Code	Wooden Drop For 2663-723	Wooden Drop For 2663-717	QTY/Item
D	WD2669-P1	WD2669-W1	3
M	WD2663-P1	WD2663-W1	3
N	WD2663-P2	WD2663-W2	6
O	WD2663-P3	WD2663-W3	4

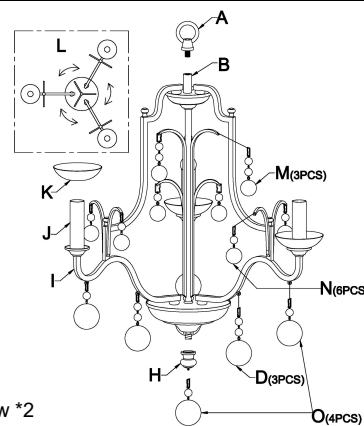


Set# A-010
 -Crossbar
 -Ground screw
 -Mounting Screw *2
 Candle Cover (2663-723)# CCV21080P-737
 Candle Cover (2663-717)# CCV21080P-778

Fig. 2

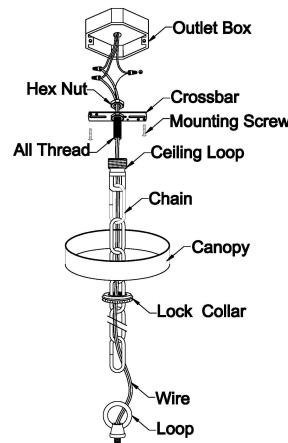

Chain (2663-723)# HCH1072-737
 Chain (2663-717)# HCH1072-778

Fig. 3

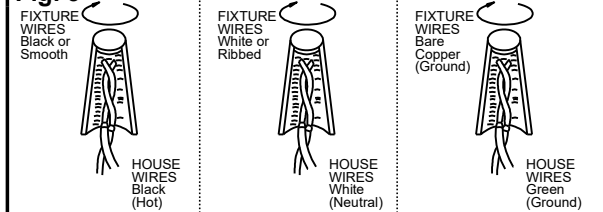

Notice: It is important to use proper chain pliers (not included) To OPEN and CLOSE the chain included with this fixture. Do not open them with other tools that may twist or stress the chain links. It is important to use proper chain pliers like the ones shown in the diagram.

