

INSTALLATION INSTRUCTIONS

For item#2403-680 (New. 2019/11/27)

READ AND SAVE THESE INSTRUCTIONS

WARNING! SHUT POWER OFF AT FUSE OR CIRCUIT BREAKER.

AVERTISSEMENT! COUPER LE COURANT AU NIVEAU DES FUSIBLES OU DU DISJONCTEUR.

PREPARING FOR INSTALLATION (Fig. 1&Fig. 3)

1. Shut off power at the fuse box or circuit breaker and remove the old fixture included the mounting hardware.
2. Carefully unpack your new fixture and lay out all the parts on a clean area. Take care not to lose any small parts necessary for installation.
3. Place the candle cover (G) over socket (H).
4. Install (3) three candelabra base bulbs up to 60 watts **each** or CFL or LED equivalent (not included) in accordance with the fixture specification—**DO NOT EXCEED THE MAXIMUM WATTAGE RATING! (NE PAS DEPASSER LA PUISSANCE NOMINALE MAXIMALE!)**.
5. Lock the metal sheets (E) to the upper and lower discs of the fixture body (C) with the screws (D). Please make sure to line up the upper and lower discs.
6. Pass the **nipple** through the **plate (B)** on the top of the fixture body (C) and secure by using the loop (A).
7. Pass the **nipple** through the **plate (B)** on the bottom of the fixture body (C) and secure **with finial (I)**.
8. Thread the nipple into the ceiling loop until snug.
9. Thread the other end of the nipple into the crossbar until snug. Note: The length of the nipple into the crossbar may be adjusted if necessary.
10. Use the lock washer and hex nut to secure the nipple into the crossbar.
11. Take this crossbar assembly and mount it to ceiling outlet box with mounting screws (Size: #8-32N*L0.5"). The side of crossbar marked with "GND" must face out.
12. Determine the desired hanging height and use a pair of proper chain pliers to remove and discard the excess chain.
13. Open one end of chain and attach it to fixture loop and close the chain. Slip the lock collar and canopy over the chain and allow them to rest on the fixture body. Open the other end of the chain and attach it to ceiling loop and close the chain.
14. Carefully lace the fixture's wires through the chain. Feed the fixture wires through the loop and nipple assembly.

CONNECTING THE WIRES (Fig. 2)


15. At this point, connect the electrical wire as shown in figure 2, making sure that all wire connectors are secured. If your outlet has a ground wire (green or bare copper), connect the fixtures Ground Wire to it. Otherwise, connect the fixture Ground Wire directly to the crossbar using the Green Screw provided. After wires are connected, tuck them carefully inside the outlet box.

COMPLETING THE INSTALLATION (Fig. 1&Fig. 3)

16. Raise the canopy to the ceiling and secure it with lock collar to the fixture ceiling fixture.
- Your installation is now complete. Return power to the outlet box and test the fixture.

Fig. 1

Set# A-010
- Crossbar
- Ground screw
- Mounting Screw*2

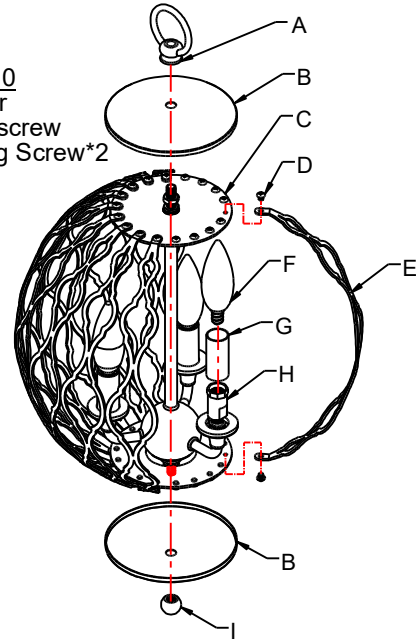

Candle Cover#CCV21048P-248

Fig. 2


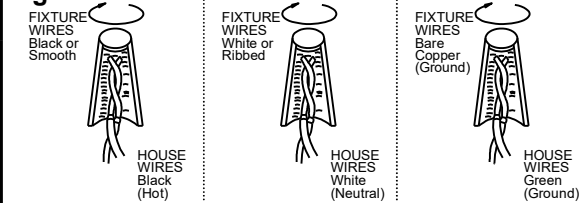


Fig. 3



Chain#HCH2072-66

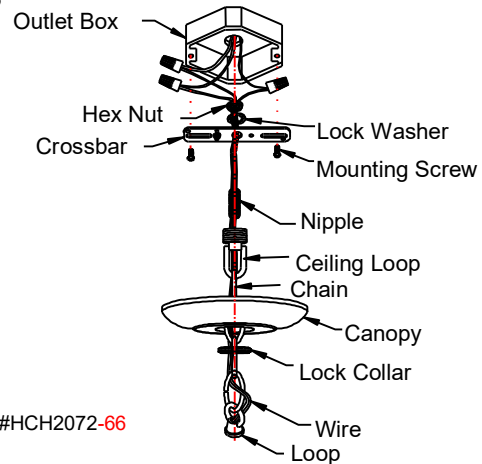

Notice: It is important to use proper chain pliers (not included) To OPEN and CLOSE the chain included with this fixture. Do not open them with other tools that may twist or stress the chain links. It is important to use proper chain pliers like the ones shown in the diagram.

