


ASSEMBLY INSTRUCTIONS FOR YOUR BRUNO WALL SCONCE

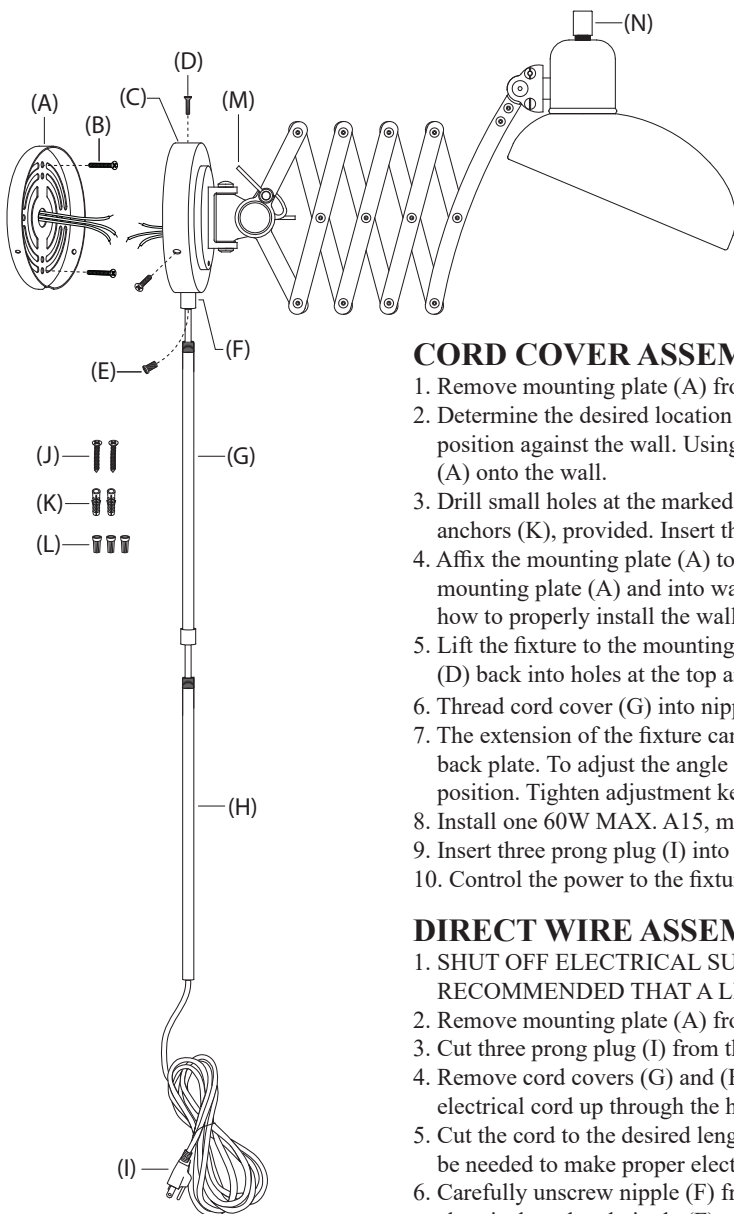

IMPORTANT SAFETY INSTRUCTIONS:

- * These instructions are provided for your safety. It's important that all safety instructions are read before beginning installation of fixture.
- * We **STRONGLY** recommend installation by a licensed electrician.
- * Turn off power at switch before replacing bulbs, making sure fixture has had sufficient time to cool down.
- * Do not connect the electricity until lamp is fully assembled.
- * If you are unsure about your wall type or what mounting method you should use, consult a qualified professional or your local hardware store.

CORD COVER ASSEMBLY INSTRUCTIONS:

1. Remove mounting plate (A) from back plate (C) by removing screws (D).
2. Determine the desired location for the light fixture on the wall. Hold the mounting plate (A) in a level position against the wall. Using a pencil, mark the location of the mounting holes in the mounting plate (A) onto the wall.
3. Drill small holes at the marked locations on the wall. Holes should be sized so they accommodate wall anchors (K), provided. Insert the wall anchors into the drilled holes.
4. Affix the mounting plate (A) to the wall by threading mounting screws (J) through the holes in mounting plate (A) and into wall anchors (K). NOTE: If you are unsure about your wall construction or how to properly install the wall anchors, consult a qualified professional or your local hardware store.
5. Lift the fixture to the mounting location. Slide back plate (C) over mounting plate (A). Thread screws (D) back into holes at the top and sides of back plate (C) to secure the fixture to the mounting surface.
6. Thread cord cover (G) into nipple (F). Thread cord cover (H) into cord cover (G).
7. The extension of the fixture can be adjusted by carefully moving the shade towards or away from the back plate. To adjust the angle of the arm, loosen adjustment key (M). Move the arm into the desired position. Tighten adjustment key (M) to secure the position of the arm.
8. Install one 60W MAX. A15, medium base bulb into the socket.
9. Insert three prong plug (I) into wall outlet.
10. Control the power to the fixture by using the switch (N) on the top of the shade.

DIRECT WIRE ASSEMBLY INSTRUCTIONS:

1. **SHUT OFF ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER. IT IS RECOMMENDED THAT A LICENSED ELECTRICIAN INSTALL THIS FIXTURE.**
2. Remove mounting plate (A) from back plate (C) by removing screws (D).
3. Cut three prong plug (I) from the end of the electrical cord.
4. Remove cord covers (G) and (H) from the electrical cord. From the back side of back plate (C), pull the electrical cord up through the hole in the bottom of the back plate.
5. Cut the cord to the desired length for making an electrical connection. At least six inches of wire will be needed to make proper electrical connection.
6. Carefully unscrew nipple (F) from back plate (C). Thread plug (E) into the hole vacated by the electrical cord and nipple (F).
7. Carefully pull the wiring from wall outlet box. Thread the wires through the center hole in mounting plate (A).
8. Affix mounting plate (A) to wall outlet box with mounting screws (B) provided.
9. Lift fixture to mounting plate and make proper electrical connections described in steps 10 - 12. **A licensed electrician is recommended.**
10. Connect ground (green or silver in color) wire from fixture to ground wire in the outlet box. Fasten wires together with wire nut (L) and tightly wrap the connection with electrical tape.
11. Attach hot wire from fixture (black in color or smooth side of wire) to hot wire from outlet box. Fasten wires together with wire nut (L) and tightly wrap connection with electrical tape.
12. Attach neutral wire from fixture (white in color or ribbed side of wire) to neutral wire from outlet box. Fasten wires together with wire nut (L) and tightly wrap connection with electrical tape.
13. Carefully push wire connections back into wall outlet box. Slide back plate (C) over mounting plate (A).
14. Thread screws (D) into vacant holes at the top and sides of back plate (C) to secure the fixture to the mounting surface.
15. The extension of the fixture can be adjusted by carefully moving the shade towards or away from the back plate. To adjust the angle of the arm, loosen adjustment key (M). Move the arm into the desired position. Tighten adjustment key (M) to secure the position of the arm.
16. Install one 60W MAX. A15, medium base bulb into the socket.
17. Reconnect main electrical supply at the fuse box/circuit breaker and test fixture.