

## **About Material Configuration**

Please note that only TRP materials require material parameter configuration. Because this is the unique material of AtomStack, other materials such as PLA, ABS, PETG, etc. do not need to be configured. You can use the system default Generic material or your own commonly used material configuration.