## CALIBRATING THE WHAMMY

In the unlikely event that the Whammy's expression pedal does not respond properly (such as the note does not bend up or return back to the correct pitch), the Whammy's expression pedal may need to be recalibrated. This calibration procedure is best performed once the unit has reached full operating temperature after at least 15 minutes of use.



## The following steps outline this calibration procedure:

- Disconnect the power from the Whammy™ pedal.
- Rock the expression pedal forward to the toe down position.
- Press and hold the effect on/off footswitch while reconnecting the power.
- Release the footswitch as soon as you see one of the preset LEDs begin flashing, which indicates that you are in pedal calibration mode. After the footswitch is released, the LED will continue flashing.

Note: If the footswitch is held too long, the LED will stop flashing and stay lit. If this happens, repeat the procedure starting back at Step 1.

- Rock the expression pedal fully back (toe up) and then forward (toe down) two or more times.
- Press the effect on/off footswitch again to exit the setup mode.

This completes the expression pedal calibration procedure.



