


SUPPORT I GAS RANGE KRG3080U

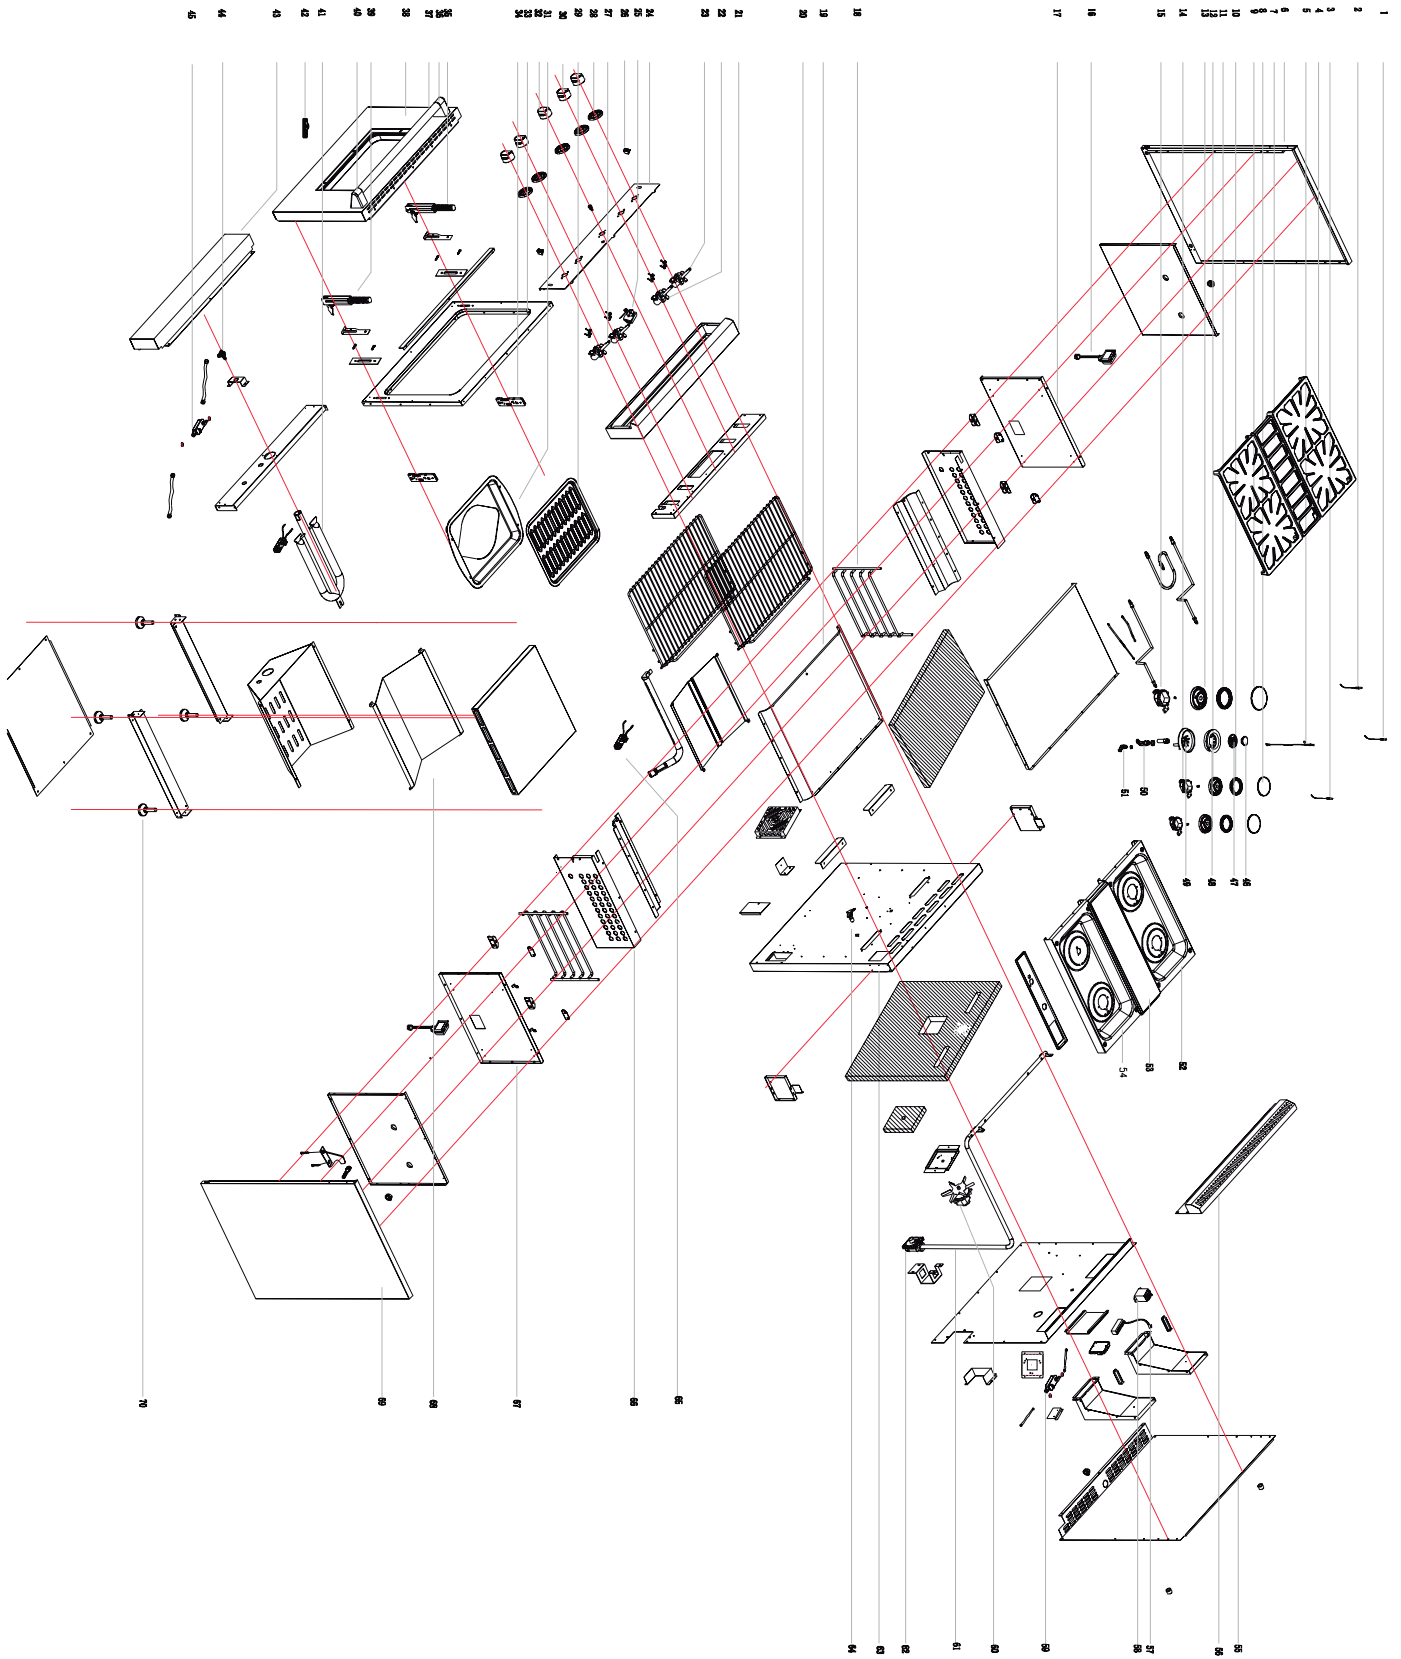

SUPPORT I GAS RANGE KRG3080U



Part Name	Item NO.	Drawing Code
Electrode	10.09.0075-A1	1
Electrode	10.09.0071-A1	2
Electrode	10.09.0072-A0	3
Cooking grate	13.01.0023-A0	4
Electrode	07.10.0162-A0	5
Side Panel,Left	04.02.0517-A0	6
central cooking grate	13.01.0022-A0	7
Burner Cap	10.01.0020-A0	8
Flame Ring	10.01.0021-A0	10
Flame Ring Base	10.01.0022-A0	12
Bottom Cup	10.01.0023-A0	14
Burner Cap(18000BTU)	10.01.0076-A0	9
Flame Ring(18000BTU)	10.01.0077-A0	11
Flame Ring Base(18000BTU)	10.01.0078-A0	13
Bottom Cup(18000BTU)	10.01.0079-A0	15
Oven Lamp	07.04.0007-A0	16
Oven Side Panel,Left	04.06.0389-A0	17
Oven Rack Support	13.03.0019-A0	18
Oven ceiling	04.02.0392-A1	19
Oven Rack	13.03.0012-A2	20
Control Panel support	20.02.0107-A0	21
Main burner valve	09.01.0023-A0	22
12000BTU Single Valve	09.01.0007-A0	23

Control Panel	04.02.0417-A0	24
Oven Thermostat	07.12.0005-A0	25
Fan/Light Switch	07.02.0033-A0	26
Main burner valve	09.01.0020-A0	27
Bezel	14.04.0009-A0	28
Broil Pan Cover	04.06.0077-A1	29
Top Burner Knob	22.99.0039-A0	30
Broil Pan	04.06.0078-A1	31
Thermostat Knob	22.99.0040-A0	32
Door Frame	04.01.0559-A0	33
Door hinge receiver	05.03.0017-A0	34
Door hinge, left	05.03.0039-A0	35
Door Handle Suppor,Left	12.02.0012-A0	36
Door Handle	12.01.0018-A0	37
Door Handle Support,Right	12.02.0013-A0	40
Door Frame,Outer	04.02.0519-A2	38
Door hinge, right	05.03.0040-A0	39
U-shape Burner	10.02.0016-A1	41
Kucht Logo	08.03.0011-A0	42
Kick Panel	04.02.0516-A0	43
U-shape Burner Orifice	22.99.0035-A0	44
Safety Valve	09.04.0006-A0	45
Burner Cap	10.01.0065-A0	46
Flame Ring	10.01.0066-A0	47
Flame Ring Base	10.01.0067-A0	48
Bottom Cup	10.01.0068-A0	49
Main Jet Holder	22.99.0015-A0	50
Simmer Jet Holder	22.99.0016-A2	51

Drip Pan	04.06.0568-A0	52
Drip Cover	04.02.0424-A0	53
Drip Pan	04.06.0423-A0	54
Back Panel	04.04.0525-A0	55
Backsplash	20.02.0108-A0	56
plug	07.06.0008-A0	57
Relay	07.08.0010-A0	58
Safety Valve	09.04.0006-A0	59
Convection Fan	07.03.0006-A0	60
Manifold	11.03.0081-A0	61
Regulator	09.03.0009-A0	62
Oven Back Panel	20.06.0098-A0	63
Broil Orifice	05.05.0037-A0	64
Igniter hot surface, oven	07.01.0053-A0	65
Oven Floor Cover	04.06.0386-A0	66
Oven Side Panel,Right	04.06.0390-A0	67
Flash plate	04.03.0459-A0	68
Right side plate	04.02.0518-A0	69
Adjustable Leg	05.01.0038-A0	70
3080 LP Kit	21.99.0025-A0	71