


# SUPPORT I GAS RANGE KRG3618U

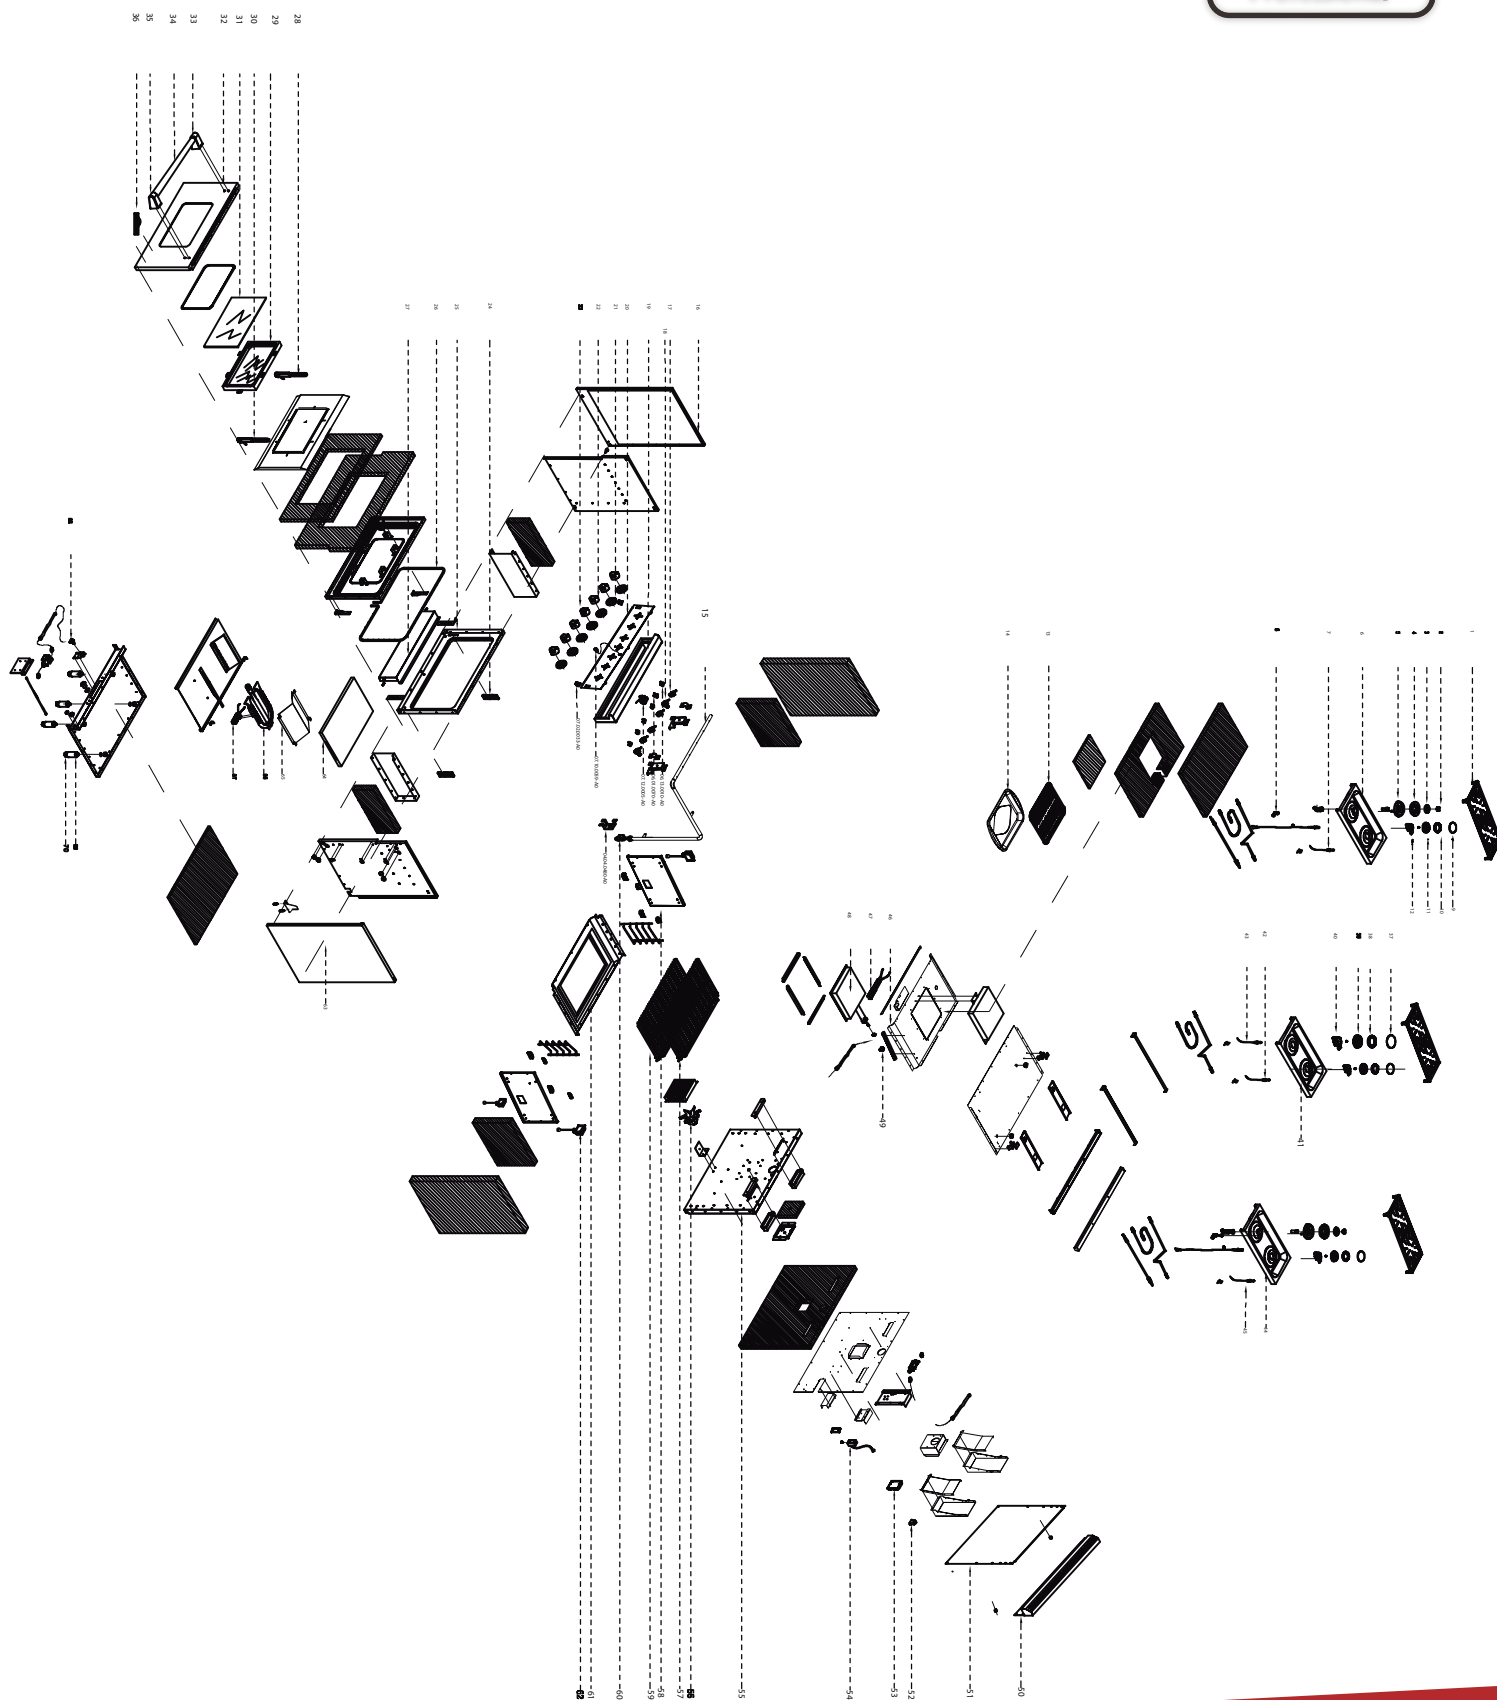

# SUPPORT I GAS RANGE KRG3618U



English Name	Item NO.	Drawing Code
Cooking grate	13.01.0023-A0	1
Burner Cap	10.01.0065-A0	2
Flame Ring	10.01.0066-A0	3
Flame Ring Base	10.01.0067-A0	4
Bottom Cup	10.01.0068-A0	5
Drip Pan	04.06.0423-A0	6
Electrode	07.10.0150-A0	7
Simmer Jet Holder	22.99.0016-A2	8
Burner Cap	10.01.0020-A0	9
Flame Ring	10.01.0021-A0	10
Flame Ring Base	10.01.0022-A0	11
Bottom Cup	10.01.0023-A0	12
Broil Pan Cover	04.06.0077-A1	13
Broil Pan	04.06.0078-A1	14
Mainfold	11.03.0059-A0	15
Oven Side Panel,Left	04.02.0506-A0	16
12000BTU Single Valve	09.01.0007-A0	17
Main burner valve	09.01.0020-A0	18
Control Panel Supporter	20.01.0079-A0	19
Control Panel	04.02.0548-A0	20
Bezel	14.04.0009-A0	21
Top Burner Knob	22.99.0039-A0	22

Thermostat Knob	22.99.0040-A0	23
Door hinge receiver	05.03.0017-A0	24
Oven Frame, Stainless	04.01.0560-A0	25
Gasket	11.05.0014-A0	26
Kick Panel	04.02.0511-A0	27
Door hinge, left	05.03.0029-A0	28
Oven Window	22.99.0006-A0	29
Door hinge, right	05.03.0028-A0	30
Oven Window	15.01.0002-A0	31
Door frame,outer	04.02.0510-A2	32
Door Handle Suppor,Left	12.02.0012-A0	33
Door Handle	12.01.0017-A0	34
Door Handle Support,Right	12.02.0013-A0	35
Kucht Logo	08.03.0011-A0	36
Burner Cap	10.01.0076-A0	37
Flame Ring	10.01.0077-A0	38
Flame Ring Base	10.01.0078-A0	39
Bottom Cup	10.01.0079-A0	40
Drip Pan	04.06.0568-A0	41
Electrode	07.10.0151-A0	42
Electrode	07.10.0111-A1	43

Drip Pan	04.06.0423-A0	44
Electrode	07.10.0112-A1	45
Oven ceiling	04.01.0503-A0	46
Igniter hot surface, broiler burner	07.01.0054-A0	47
Infrared Burner	10.03.0017-A0	48
Broil Orifice	05.05.0011-A0	49
Backsplash	20.01.0082-A0	50
Back Panel	04.04.0107-A1	51
Relay	07.08.0010-A0	52
Igniter	07.07.0049-A0	53
Plug	07.06.0008-A0	54
Oven Back Panel	04.06.0083-A3	55
Convection Fan	07.03.0006-A0	56
Oven rack	13.03.0010-A2	57
Oven Side Panel, Left	04.06.0343-A0	58
Oven Rack Support	13.03.0019-A0	59
Regulator	09.03.0009-A0	60
Oven Floor Cover	04.06.0375-A0	61
Oven lamp	07.04.0007-A0	62
Side Panel, Right	04.02.0507-A0	63
Oven Floor Cover	04.06.0105-A1	64
Flash plate	04.03.0448-A1	65
U-Shape Burner	10.02.0016-A1	66
Igniter hot surface, Oven	07.01.0053-A0	67

U-shape Burner Orifice	22.99.0035-A0	68
Adjustable Leg,Top	05.01.0002-A2	69
Adjustable Leg,Bottom	05.01.0001-A2	70
3618 LP KIT	21.99.0017-A0	71