



# Remote control


## Removing the insulated film.

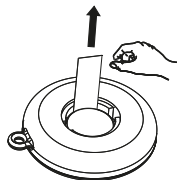

Step 2

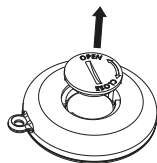


Step 1

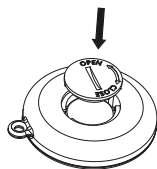

Step 3

## Buttons:

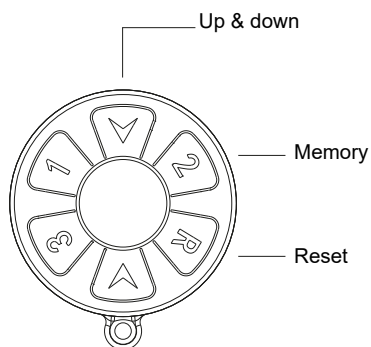

## How to connect the remote control with the operation interface:



### How to set the remote control:

Press button **S** and **O** simultaneously during 2 seconds until M flashes on the display panel, then press Up or DOWN on the remote control. Finally, press UP or DOWN on the control panel, the function of the keys on the remote control are now set. (Keep the display panel at memory surface, refer to instructions for detailed process.)

### Height adjustment:

Cart runs upwards when UP is pressed, and downwards when DOWN is pressed.

### Memory setting:

When memory interface is selected, press button 1, 2 or 3 on the remote control, the cart will now move to the pre-set height accordingly.

### Reset:

Press button R for two seconds, the cart starts to initialize.

### Tips:

- Remote control might not work properly if a mix of old and new batteries are used.
- Keep away from heat.
- Remove the batteries if the remote control will not be used for a long period of time.
- Operate the remote control within 5 meters away from cart without any obstacles between.