


# Yealink

**onedirect**<sup>®</sup>  
Tout pour mieux communiquer

[www.onedirect.fr](http://www.onedirect.fr)

**0800 724 000**  
(Appel gratuit)

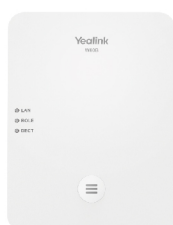

## Yealink W80 DECT IP Multi-Cell System User Guide

Version 83.70  
Feb. 2020

# Copyright

## Copyright © 2020 YEALINK(XIAMEN) NETWORK TECHNOLOGY

Copyright © 2020 Yealink (Xiamen) Network Technology CO., LTD. All rights reserved. No parts of this publication may be reproduced or transmitted in any form or by any means, electronic or mechanical, photocopying, recording, or otherwise, for any purpose, without the express written permission of Yealink (Xiamen) Network Technology CO., LTD. Under the law, reproducing includes translating into another language or format.

When this publication is made available on media, Yealink (Xiamen) Network Technology CO., LTD. gives its consent to downloading and printing copies of the content provided in this file only for private use but not for redistribution. No parts of this publication may be subject to alteration, modification or commercial use. Yealink (Xiamen) Network Technology CO., LTD. will not be liable for any damages arising from use of an illegally modified or altered publication.

## Trademarks

Yealink®, the logo and the name and marks is trademark of Yealink (Xiamen) Network Technology CO., LTD, which are registered legally in China, the United States, EU (European Union) and other countries.

All other trademarks belong to their respective owners. Without Yealink's express written permission, recipient shall not reproduce or transmit any portion hereof in any form or by any means, with any purpose other than personal use.

## Warranty

### (1) Warranty

THE SPECIFICATIONS AND INFORMATION REGARDING THE PRODUCTS IN THIS GUIDE ARE SUBJECT TO CHANGE WITHOUT NOTICE. ALL STATEMENTS, INFORMATION, AND RECOMMENDATIONS IN THIS GUIDE ARE BELIEVED TO BE ACCURATE AND PRESENTED WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED. USERS MUST TAKE FULL RESPONSIBILITY FOR THEIR APPLICATION OF PRODUCTS.

### (2) Disclaimer

YEALINK (XIAMEN) NETWORK TECHNOLOGY CO., LTD. MAKES NO WARRANTY OF ANY KIND WITH REGARD TO THIS GUIDE, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. Yealink (Xiamen) Network Technology CO., LTD. shall not be liable for errors contained herein nor for incidental or consequential damages in connection with the furnishing, performance, or use of this guide.

### (3) Limitation of Liability

Yealink and/or its respective suppliers are not responsible for the suitability of the information contained in this document for any reason. The information is provided "as is", and Yealink does not provide any warranty and is subject to change without notice. All risks other than risks caused by use of the information are borne by the recipient. In no event, even if Yealink has been suggested the occurrence of damages that are direct, consequential, incidental, special, punitive or whatsoever (Including but not limited to loss of business profit, business interruption or loss of business information), shall not be liable for these damages.

## End User License Agreement

This End User License Agreement ("EULA") is a legal agreement between you and Yealink. By installing, copying or otherwise using the Products, you: (1) agree to be bounded by the terms of this EULA, (2) you are the owner or an authorized user of the device, and (3) you represent and warrant that you have the right, authority and capacity to enter into this agreement and to abide by all its terms and conditions, just as if you had signed it. The EULA for this product is available on the Yealink Support page for the product.

## Patent Information

China, the United States, EU (European Union) and other countries are protecting one or more patents of accompanying products and/or patents being applied by Yealink.

## Customer Feedback

We are striving to improve our documentation quality and we appreciate your feedback. Email your opinions and comments to [DocsFeedback@yealink.com](mailto:DocsFeedback@yealink.com).

## Technical Support

Visit Yealink WIKI (<http://support.yealink.com/>) for the latest firmware, guides, FAQ, Product documents, and more. For better service, we sincerely recommend that you use Yealink Ticketing system (<https://ticket.yealink.com>) to submit all your technical issues.

## GNU GPL INFORMATION

Yealink device firmware contains third-party software under the GNU General Public License (GPL). Yealink uses software under the specific terms of the GPL. Please refer to the GPL for the exact terms and conditions of the license.

The original GPL license, source code of components licensed under GPL and used in Yealink products can be downloaded online: [http://www.yealink.com/onepage\\_83.html](http://www.yealink.com/onepage_83.html).

# Table of Contents

<b>Table of Contents</b> .....	<b>5</b>
<b>Getting Started</b> .....	<b>10</b>
Hardware Overview .....	10
W80DM/W80B Hardware .....	10
W56H Hardware .....	11
W53H Hardware .....	12
CP930W Hardware .....	14
DD Phone Hardware .....	16
Power LED Indicator on the W56H/W53H/DD Phone .....	17
Menu on the W56H/W53H .....	17
Main Menu .....	17
Entering the Main Menu .....	18
Accessing the Main Menu Feature .....	19
Submenu .....	19
Accessing a Submenu Feature .....	19
Returning to Idle Screen .....	20
Screen and Icons .....	20
Idle Screen .....	20
W56H/W53H Line Status Screen .....	21
CP930W/DD Phone Calls Screen .....	22
Icons on the Idle Screen .....	22
W56H/W53H Icons on the Calls Screen .....	23
W56H/W53H Icons on the Line Status Screen .....	23
Rechargeable Battery .....	23
Viewing the Power Status .....	24
Entering Characters on the W56H/W53H .....	24
Setting the Input Modes .....	24
Entering Data on the W56H/W53H .....	24
Entering Data on the CP930W/DD Phone .....	25
<b>Registering the Handset</b> .....	<b>26</b>
Registering Handsets at the DECT Manager .....	26
Selecting a System to Connect .....	26
<b>Call Features</b> .....	<b>27</b>
Placing Calls .....	27
Placing External Calls .....	27
Placing an External Call .....	27
Placing Multiple External Calls .....	28
Placing a Call from the Call History .....	28
Placing a Call from the Directory .....	28
Placing a Call with a Speed Dial Key .....	28
Assigning a Speed Dial Number .....	28

Changing a Speed Dial Number .....	29
Deleting a Speed Dial Number .....	29
Calling a Contact Using a Speed Dial Key .....	29
Redial .....	29
Redialing a Number .....	30
Redialing the Last Dialed Number .....	30
Adding a Dialed Number to Local Directory .....	30
Deleting a Redial Record .....	30
Deleting All Redial Records .....	30
Placing an Anonymous Call .....	31
Answering Calls .....	31
Answering a Call .....	31
Answering a Call When in a Call .....	31
Answering a Call Automatically .....	32
Disabling Call Waiting .....	32
Switching Among the Receiver, Handsfree and Headset Modes .....	32
Silencing or Rejecting Incoming Calls .....	32
Silencing a Call .....	32
Rejecting a Call Manually .....	33
Rejecting Anonymous Calls .....	33
Rejecting Calls with Do Not Disturb (DND) .....	33
Rejecting Calls with DND .....	33
Ending Calls .....	33
Muting/Unmuting Audio .....	34
Holding and Resuming Calls .....	34
Holding a Call .....	34
Resuming a Held Call .....	34
Call Forward .....	34
Forwarding Incoming Calls .....	35
Transferring Calls .....	35
Performing a Blind Transfer .....	35
Performing a Semi-Attended/Attended Transfer .....	35
Conference Calls .....	36
Local Conference .....	36
Setting Up a Local Conference Call .....	36
Merging Two Calls into a Conference .....	36
Muting or Unmuting a Conference Call .....	36
Ending a Conference Call .....	37
Network Conference .....	37
Setting Up a Network Conference .....	37
Inviting another Party into an Active Conference Call .....	37
Holding/Resuming a Conference Call .....	37
Ending a Conference Call .....	38
Recording Using an SD Card .....	38
Recording a Call .....	38

Pausing/Resuming a Recording .....	38
Stopping a Recording .....	39
Managing the Recordings .....	39
Listening to a Recording .....	39
Pausing/Resuming a Playback .....	39
Fast Forwarding/Rewinding a Playback .....	40
Deleting a Recorded Call .....	40
Viewing the Available Recording Time .....	40
<b>Advanced Call Features .....</b>	<b>41</b>
Call Park and Call Retrieve .....	41
Parking or Retrieving a Call in the FAC Mode .....	41
Parking a Call in the FAC Mode .....	41
Retrieving a Parked Call in the FAC Mode .....	41
Parking or Retrieving a Call in the Transfer Mode .....	42
Parking a Call in the Transfer Mode .....	42
Retrieving a Parked Call in the Transfer Mode .....	42
Retrieving a Call with a Retrieve Key .....	43
Shared Line .....	43
State Indicator of Shared Line .....	43
Placing Calls on a Shared Line .....	44
Answering Calls on a Shared Line .....	44
Placing a Call on Public Hold .....	44
Placing a Call on Private Hold .....	45
Retrieving a Held Call on a Shared Line .....	45
Barging in an Active Call on a Shared Line .....	45
Pulling a Shared Call on a Shared Line .....	45
Voice Mail .....	45
Setting the Voice Mail Code .....	46
Leaving Voice Mails .....	46
Listening to Voice Mails .....	46
<b>Directory .....</b>	<b>47</b>
Local Directory .....	47
Adding Contacts .....	47
Viewing Contacts .....	47
Editing Contacts .....	47
Deleting Contacts .....	48
Deleting a Contact .....	48
Deleting All Contacts .....	48
Searching for Contacts .....	48
Shared Directory .....	48
Adding Shared Contacts .....	49
Editing Shared Contacts .....	49
Deleting a Shared Contact .....	49
Deleting All Shared Contacts .....	49

Searching for Shared Directory Contacts .....	50
Saving a Shared Contact to the Local Directory .....	50
Blacklist .....	50
Adding a Blacklist Contact .....	50
Viewing Blacklist Contacts .....	50
Editing a Blacklist Contact .....	51
Deleting Blacklist Contacts .....	51
Deleting a Blacklist Contact .....	51
Deleting All Blacklist Contacts .....	51
Remote Phone Book .....	52
Searching for Remote Phone Book Contacts .....	52
Viewing Remote Phone Book Contacts .....	52
Saving a Remote Phone Book Contact to the Local Directory .....	52
<b>Call History .....</b>	<b>53</b>
Call History Icons .....	53
Viewing History Records .....	53
Saving a History Record to Local Directory .....	53
Saving a History Record to Blacklist .....	54
Deleting History Records .....	54
Deleting a Call Record .....	54
Deleting All Call Records .....	54
<b>Customizing Your Phone .....</b>	<b>55</b>
Turning Handset On .....	55
Turning Handset Off .....	55
Changing the Wallpaper .....	55
Setting the Screen Saver .....	56
Changing the Screen Brightness .....	56
Setting the Keypad Light .....	56
Changing the Language .....	56
Time & Date .....	57
Setting the Time and Date Manually .....	57
Changing the Time and Date Format .....	57
Shortcuts .....	57
Supported Shortcuts .....	58
Customizing the Shortcuts .....	58
W56H/W53H Handset Keypad Lock .....	59
Locking Handset Keypad .....	59
Unlocking Your Phone .....	59
DD Phone Lock .....	59
Setting the Phone Lock .....	59
Locking Your Phone Manually .....	60
Unlocking Your Phone .....	60
Changing Your Phone Unlock PIN .....	60
Silent Mode .....	61



---

Switching on Silent Mode .....	61
Switching off Silent Mode .....	61
<b>Audio Settings .....</b>	<b>62</b>
Adjusting the Volume .....	62
Setting the Ring Tone .....	62
Setting the Ring Tone for the External Calls .....	62
Setting the Advisory Tone .....	62
<b>Maintaining Your Phone .....</b>	<b>64</b>
Investigating Warnings .....	64
Resetting the Handset .....	64
<b>Appendix .....</b>	<b>65</b>
Appendix A- Menu Structure .....	66
For W56H/W53H .....	66
For CP930W .....	67
For DD Phone .....	68
Appendix B - Input Modes and Characters on W56H/W53H .....	68

# Getting Started

Before you use your phone, take some time to get familiar with its features and user interface.

**Note:** This guide mainly takes W56H as an example. Due to different LCD specifications and parameters, the graphics displayed on the other handsets may be different.

## Topics

[Hardware Overview](#)

[Menu on the W56H/W53H](#)

[Screen and Icons](#)

[Rechargeable Battery](#)

[Entering Characters on the W56H/W53H](#)

## Hardware Overview

Understanding the phone hardware helps you easily use the phone's features.

### Topics

[W80DM/W80B Hardware](#)

[W56H Hardware](#)


[W53H Hardware](#)

[CP930W Hardware](#)

[DD Phone Hardware](#)

[Power LED Indicator on the W56H/W53H/DD Phone](#)


## W80DM/W80B Hardware

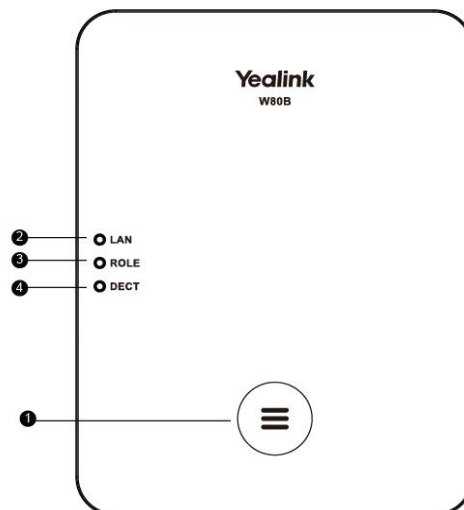

No.	Item	Description
1	Device Key	Long press for 20 seconds to reset the device to factory configurations.

No.	Item	Description
2	LAN LED	<ul style="list-style-type: none"> <li>Indicates the power status.</li> <li>Indicates the LAN connection status.</li> </ul>
3	ROLE LED	Indicates the device role.
4	DECT LED	For W80B, indicates the connection status to the DECT manager (DM).


## W56H Hardware

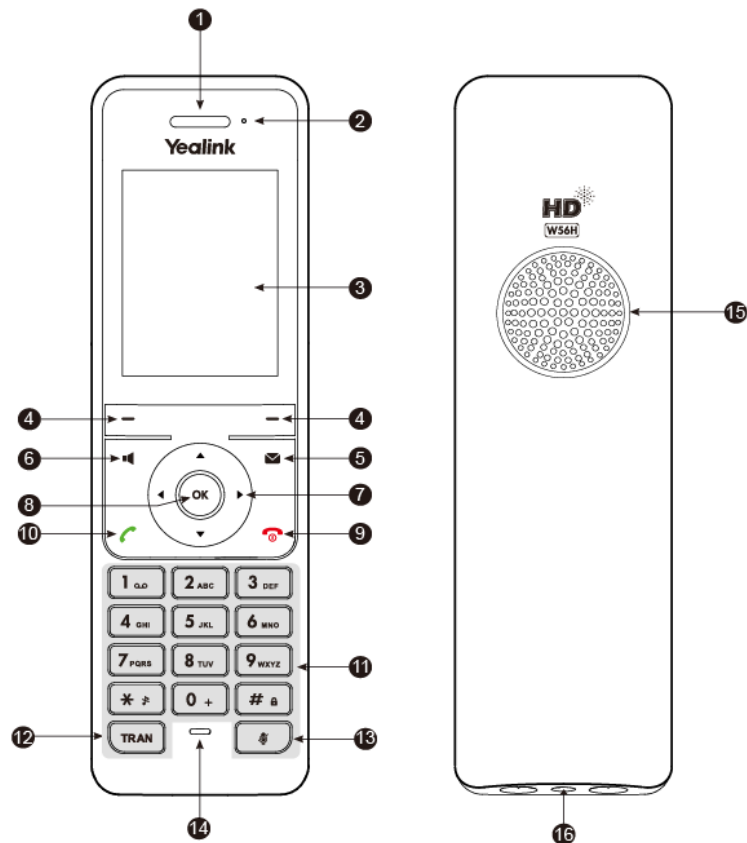

	Item	Description
1	Receiver	Receives audio in receiver mode.
2	Power LED indicator	Indicates call status, message status, and charging status.
3	Phone Screen	Shows information.
4	Soft Keys	Access the function directly. It depends on the operating situation.
5	Message Key	Accesses the voice mail or missed call.
6	Speakerphone Key	<ul style="list-style-type: none"> <li>Switches among the receiver, headset, and handsfree modes.</li> <li>Answers an incoming call.</li> <li>Places a call in handsfree mode.</li> </ul>
7	Navigation Keys	Scroll through information or options on the screen.


	Item	Description
8	OK Key	Confirms actions or enters the main menu.
9	On-hook Key/Power Key	<ul style="list-style-type: none"> <li>• Press briefly to return to the previous screen.</li> <li>• Long press to return to the idle screen.</li> <li>• Press to turn the handset on.</li> <li>• Long press on the idle screen to turn the handset off.</li> <li>• Cancels actions or ends a call.</li> <li>• Rejects an incoming call.</li> </ul>
10	Off-hook Key	<ul style="list-style-type: none"> <li>• Answers an incoming call.</li> <li>• Enters the redial calls list.</li> <li>• Places a call in receiver or headset mode.</li> </ul>
11	Keypad	Provides digits, letters and special characters.
12	TRAN Key	Transfers a call to another party.
13	Mute Key	Toggles mute feature on or off.
14	Microphone	Picks up audio.
15	Speaker	Outputs audio in handsfree mode.
16	3.5mm Headset Jack	Connects a standard 3.5mm headset.

## W53H Hardware

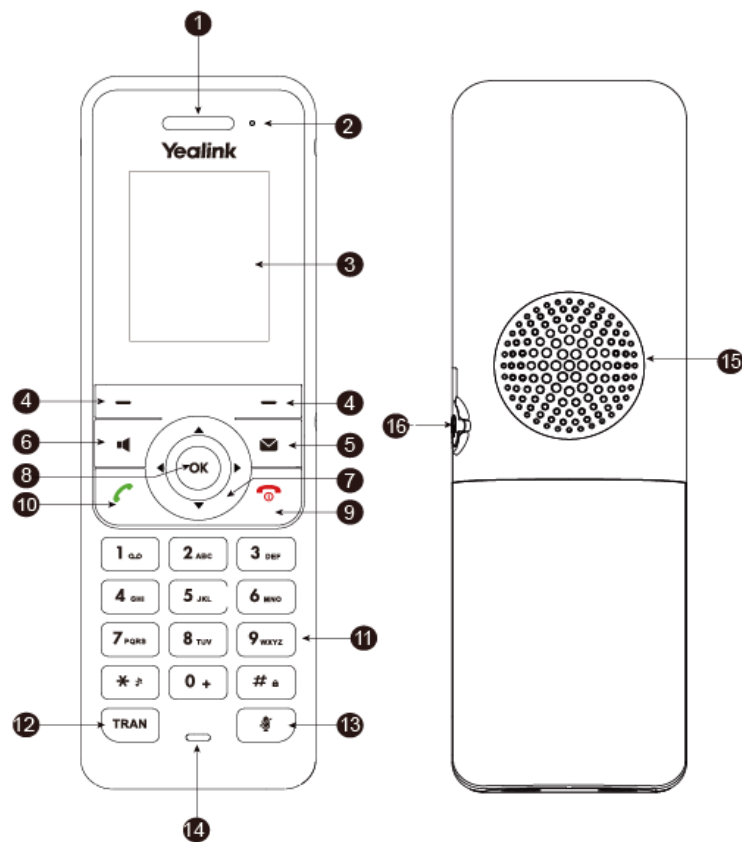




	<b>Item</b>	<b>Description</b>
1	Receiver	Receives audio in receiver mode.
2	Power LED indicator	Indicates call status, message status, and charging status.
3	Phone Screen	Shows information.
4	Soft Keys	Access the function directly. It depends on the operating situation.
5	Message Key	Accesses the voice mail or missed call.
6	Speakerphone Key	<ul style="list-style-type: none"> <li>• Switches among the receiver, headset, and handsfree modes.</li> <li>• Answers an incoming call.</li> <li>• Places a call in handsfree mode.</li> </ul>
7	Navigation Keys	Scroll through information or options on the screen.
8	OK Key	Confirms actions or enters the main menu.
9	On-hook Key/Power Key	<ul style="list-style-type: none"> <li>• Press briefly to return to the previous screen.</li> <li>• Long press to return to the idle screen.</li> <li>• Press to turn the handset on.</li> <li>• Long press on the idle screen to turn the handset off.</li> <li>• Cancels actions or ends a call.</li> <li>• Rejects an incoming call.</li> </ul>
10	Off-hook Key	<ul style="list-style-type: none"> <li>• Answers an incoming call.</li> <li>• Enters the redial calls list.</li> <li>• Places a call in receiver or headset mode.</li> </ul>
11	Keypad	Provides digits, letters and special characters.
12	TRAN Key	Transfers a call to another party.
13	Mute Key	Toggles mute feature on or off.
14	Microphone	Picks up audio.
15	Speaker	Outputs audio in handsfree mode.
16	3.5mm Headset Jack	Connects a standard 3.5mm headset.

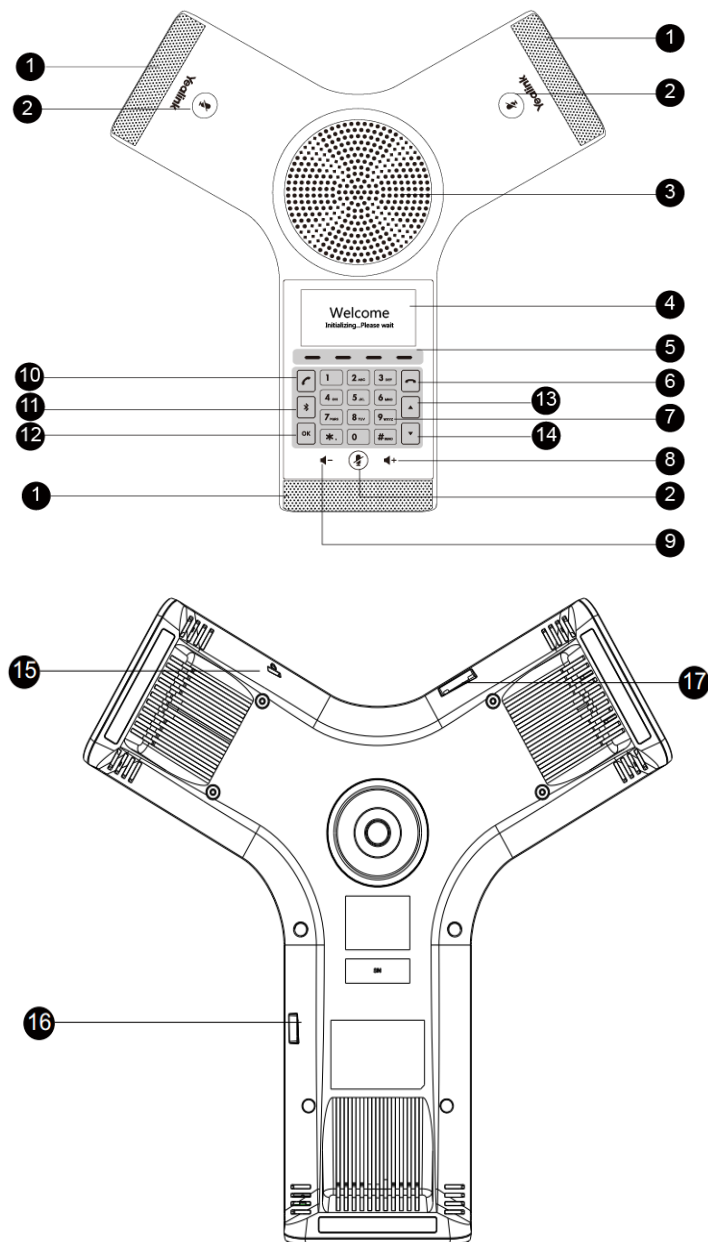
## CP930W Hardware

 

NO.	Item	Description
1	Three Internal Microphones	Provide 20-feet (6 meters) and 360-degree sound pickup.
2	Mute Touch Key	<ul style="list-style-type: none"> <li>•Toggles mute feature.</li> <li>•Indicates phone and call status.</li> </ul>
3	Speaker	Provides speakerphone audio output.
4	LCD Screen	Shows information about calls, messages, soft keys, time, date and other relevant data.

NO.	Item	Description
5	Soft Keys	Labeled automatically to identify their context-sensitive features.
6	On-hook Key	Ends a call, returns to the idle screen or turns off the phone.
7	Touch Keypad	Provides the digits, letters, and special characters in context-sensitive applications. It is possible to open a menu option directly by tapping the number button that corresponds to the position of the option in the menu.
8	Volume Key(+)	Increases the volume of the speaker, ringer or media.
9	Volume Key(-)	Decreases the volume of the speaker, ringer or media.
10	Off-hook Key	Enters the dialing screen, places a call or answers a call.
11	Bluetooth Key	Enters the Bluetooth setting screen.
12		Confirms actions or answers incoming calls.
13		<ul style="list-style-type: none"> <li>• Scrolls through the displayed information upwards.</li> <li>• Accesses the Intercom list screen when the phone is idle.</li> </ul>
14		<ul style="list-style-type: none"> <li>• Scrolls through the displayed information downwards.</li> <li>• Views the Directory list when the phone is idle.</li> </ul>
15	Security Slot	Allows you to connect a universal security cable to your phone so you can lock down your phone. The phone will not be removed after locked.
16	Micro USB Port	Allows you to connect a PC and turn your phone into an external speaker and microphone for your PC.
17	Micro SD Slot	Allows you to connect an SD card to record calls and play recordings on the phone.

## DD Phone Hardware

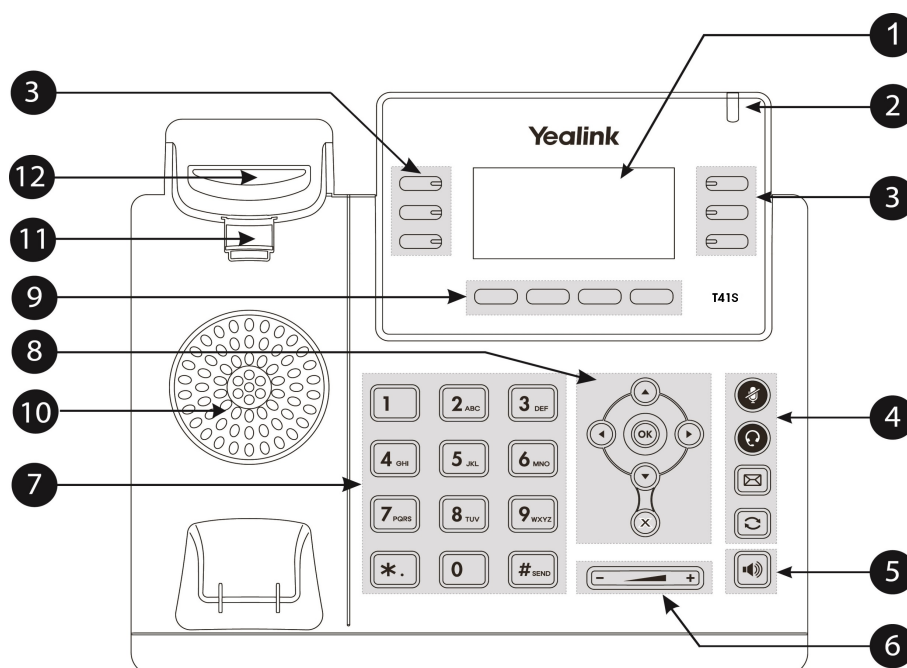

NO.	Item	Description
1	Phone Screen	Shows a screen with backlight that enables you to view menus and data.
2	Power LED Indicator	Indicates call status, message status and system status.
3	Line Keys	Access your phone outgoing lines and features.
4	HEADSET Key	Toggles the headset on or off. The LED indicator glows green when the headset is activated.
	MUTE Key	Toggles the microphone on or off. The LED indicator glows green when the mute feature is activated.
	MESSAGE Key	Accesses your voice messages.
	REDIAL Key	Redials a previously dialed number.
5	Speakerphone Key	Toggles the speakerphone (hands-free) mode on or off. The LED indicator glows green when the speakerphone is activated.
6	Volume Key	Adjust the volume of the handset, headset, speaker.
7	Keypad Keys	Allow you to enter numbers, letters, and special characters. If a menu item has an index number, you can use the keypad keys to select the item.
8	Navigation Keys	<ul style="list-style-type: none"> <li>• Scroll through information or options displayed on the screen.</li> <li>• Access History and Directory respectively.</li> </ul>



NO.	Item	Description
	OK Key	Confirms actions or answers incoming calls.
	Cancel Key	Cancels actions or rejects incoming calls.
9	Soft Keys	Access the function displayed on the screen above the soft keys. The soft keys change depending on what you are doing at the time.
10	Speaker	Provides ringer and speakerphone audio output.
11	Reversible Tab	Secures the handset in the handset cradle when the phone is mounted vertically. For more information on how to adjust the reversible tab, refer to <a href="#">Yealink Wall Mount Quick Installation Guide for Yealink IP Phones</a> .
12	Hookswitch	Connects or disconnects the phone from the phone line. The hookswitch is automatically activated when a user lifts the handset from the cradle to get a dial tone.

## Power LED Indicator on the W56H/W53H/DD Phone

LED Status	Description
Solid red	The handset is charging.
Fast flashing red (300ms)	The handset is ringing.
Slowly flashing red (1s)	The handset receives a voice mail or has a missed call.
Off	The handset is powered off. The handset is idle. The handset is fully charged. (W56H/W53H only)

## Menu on the W56H/W53H

The handset provides a variety of features that are grouped into the menu.

### Topics


[Main Menu](#)








[Submenu](#)

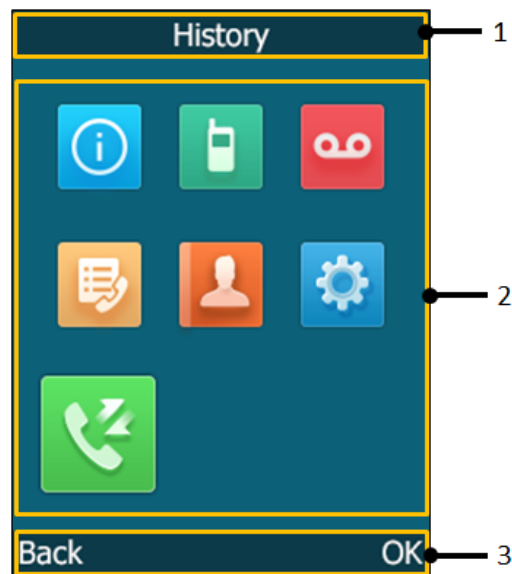[Returning to Idle Screen](#)

### Main Menu

 The main menu is the top menu, which consists of seven menu items: Status, Intercom, Voice Mail, Call Features, Directory, Settings, and History.



No.	Description
1	Menu item you selected.
2	<p>Menu icon:</p> <ul style="list-style-type: none"> <li> : Status—To view the status information of DM, handset, and line.</li> <li> : Intercom—Not available in the multi-cell system.</li> <li> : Voice Mail—To set and view voice mail(s).</li> <li> : Call Features—To access the features of Call Forward, Do Not Disturb, Call Waiting, Anon.Call Rejection, and Anonymous Call.</li> <li> : Directory—To access the directory and manage the contacts.</li> <li> : Settings—To personalize the setting of your handset.</li> <li> : History—To access the call history list.</li> </ul>
3	Soft key label.

## Topics

[Entering the Main Menu](#)

[Accessing the Main Menu Feature](#)

## Entering the Main Menu

You can enter the main menu to view the features.

### Procedure

1. Press the OK key when the handset is idle.

*The main menus are displayed on the screen as icons.*

## Accessing the Main Menu Feature

After entering the main menu, you can use the navigation keys to access the desired menu.

### Procedure

1. Press the OK key when the handset is idle.  
*The main menus are displayed on the screen as icons.*
2. Press the navigation keys to select a different menu icon.  
*The name of the associated menu appears on the top of the screen.*
3. Press **OK** to open the selected menu.

**Note:** You can only access **Status** and **Settings** if the handset is not registered to a base station.


### Related Topic

[Appendix A- Menu Structure](#)

## Submenu

The functions in the submenus are displayed as lists. You can open the submenu to access a function.

For example, if you select the **Settings** menu, the submenu is displayed below:

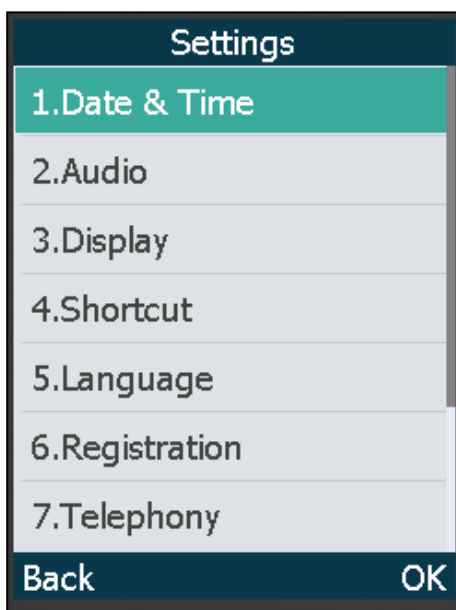

### Topic

[Accessing a Submenu Feature](#)

## Accessing a Submenu Feature

After entering a certain menu, you can use the navigation keys to access the desired submenu.

### Procedure

1. Press the up and down navigation keys to highlight the desired submenu.
2. Press **OK** to open the submenu.
3. Press the On-hook key or **Back** to return to the previous screen.

## Returning to Idle Screen

### Procedure

1. Long press the On-hook key to quickly exit the menu and return to the idle screen.

## Screen and Icons

The user screens and icon indicators can help you navigate and understand the important information on the phone's status.

### Topics

[Idle Screen](#)

[W56H/W53H Line Status Screen](#)

[Icons on the Idle Screen](#)


[CP930W/DD Phone Calls Screen](#)


[W56H/W53H Icons on the Calls Screen](#)

[W56H/W53H Icons on the Line Status Screen](#)

## Idle Screen

The idle screen is made up of the signal strength, battery status, status bar, handset name, and soft keys. The time & date is displayed in the middle of the screen.

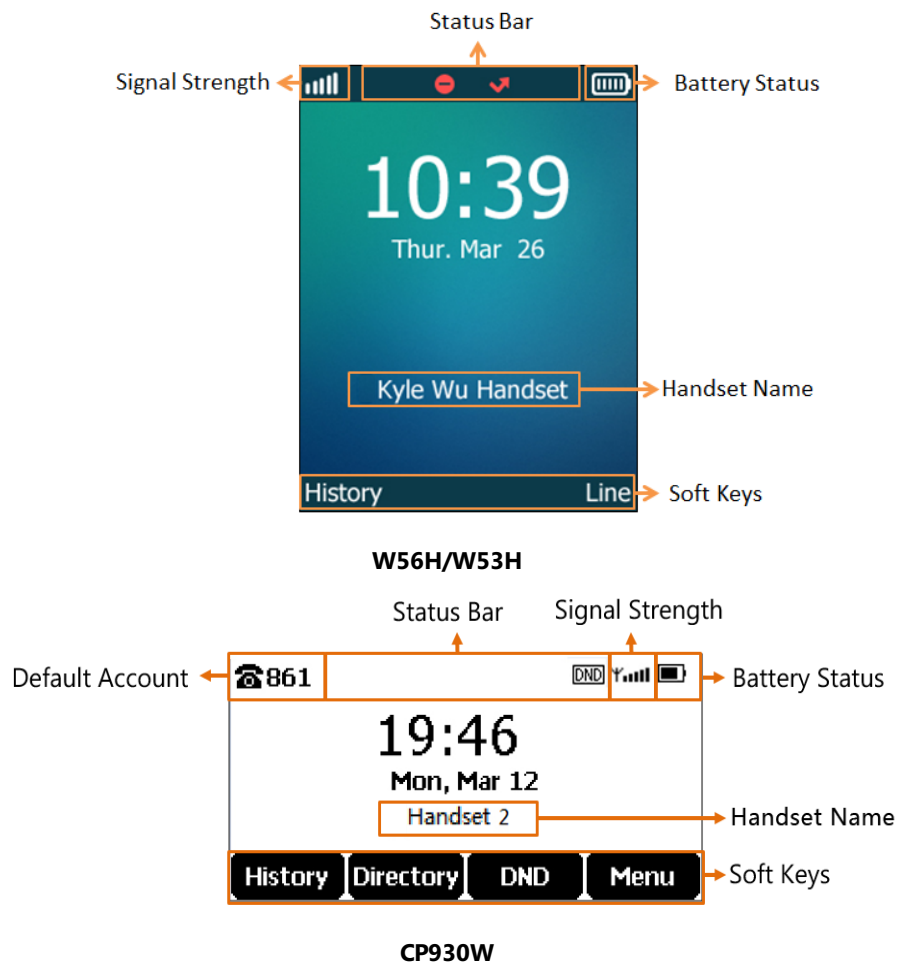

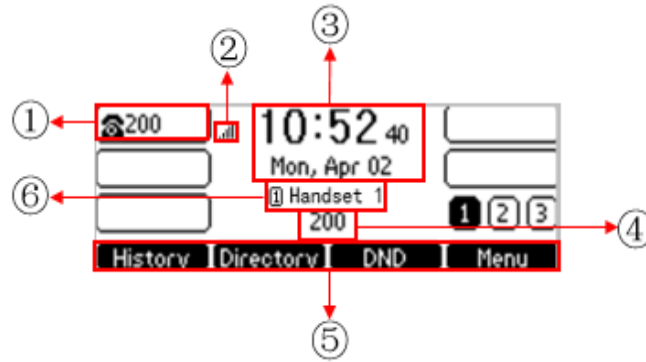

DD Phone

- **Default Account:** Indicates the local name or number.
- **Signal Strength:**

Weak to strong:

No reception:
- **Battery Status:**

Low to full:

Need Charging:
- **Status Bar:** Displays the feature status icons. The status icons are displayed when features are activated.
- **Handset Name:** Displays the registered handset name.
- **Soft Keys:** The soft key labels on the screen directly above the soft keys show the functions available at that particular moment.


**Related Topic**

[Icons on the Idle Screen](#)

**W56H/W53H Line Status Screen**

The line status screen is made up of the line and line status.

When the handset is idle, you can press **Line** to enter the line status screen. The line status screen is displayed below:

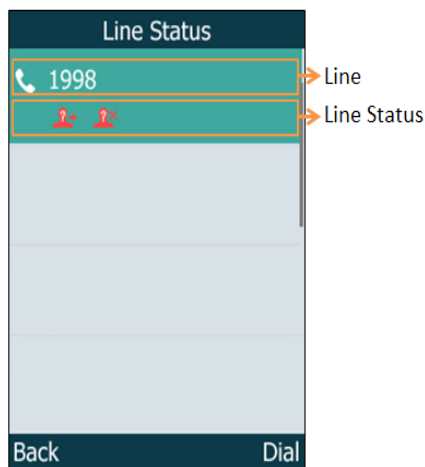


- **Line:** Display the corresponding line (display user name by default).
- **Line Status:** Display the icon of line status. The icon indicates the corresponding feature assigned to the line.

### Related Topic

[W56H/W53H Icons on the Line Status Screen](#)

## CP930W/DD Phone Calls Screen

All of your active and held calls are displayed on the calls screen.

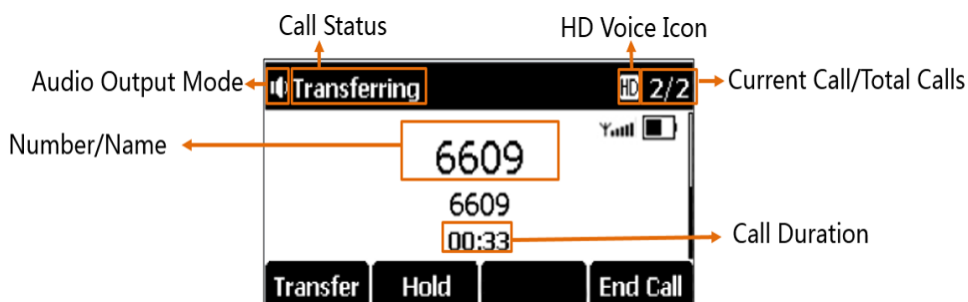

## Icons on the Idle Screen




By viewing the icons on the idle screen, you can easily get the current phone status, such as message status.

### W56H/W53H:



 





Icons	Description	Icons	Description
	The ringer volume is 0 and the phone is in the silent mode.		The phone has new voice mails.
	The phone has turned the Call Forward feature on.		The phone has turned the Do Not Disturb (DND) feature on.
	The keypad is locked.		

### CP930W:

Icons	Description	Icons	Description
	The ringer volume is 0 and the phone is in the silent mode.		The phone has turned the DND feature on.
	The phone has turned the Call Forward feature on.		The phone has new voice mails.
	The keypad is locked.		The phone failed to register to a base station.
	The phone is in the Speakerphone (hands-free) mode.		The Bluetooth-enabled mobile phone is paired and connected to the phone.
	The phone has registered to a base station successfully.		The SD card is connected to the phone.
	The phone has enabled the Bluetooth feature.		The battery is not inserted into the phone.








Icons	Description	Icons	Description
	The phone is Recording a call or a conference.		The phone has missed calls.
	The recording is paused.		

**DD Phone:**

Icons	Description	Icons	Description
	Speakerphone (hands-free) mode	<b>DND</b>	Do Not Disturb (DND)
	Call Forward		Voice Mail
	Handset mode		Missed Calls
	Headset mode		Phone Lock
	Ringer volume is 0		





### W56H/W53H Icons on the Calls Screen

By viewing the icons in the calls screen, you can easily get the current call status, such as audio output mode status.

Icons	Description	Icons	Description
	Receiver Mode On		Headset Mode On
	Handsfree Mode On		Contact
	Call Hold		Call Mute
	Conference Call		

### W56H/W53H Icons on the Line Status Screen

Each icon in the line status screen indicates the corresponding feature assigned to the line.

Icons	Description	Icons	Description
	Call Forward		Do Not Disturb (DND)
	Anonymous call rejection is enabled		Anonymous call is enabled

## Rechargeable Battery

The phone comes with a charged battery, but it may need recharging to full capacity depending on how long it has been in storage.

A fully-charged battery provides talk time of about 24 hours or 15 days of standby time.

**Topics**

[Viewing the Power Status](#)

## Viewing the Power Status

When the phone is idle, you can check the battery's remaining capacity.

### Procedure

1. Navigate to **Menu > Status > Power Status**.

*The screen shows the remaining talk time and standby time.*

## Entering Characters on the W56H/W53H

You can enter and edit data in the corresponding field using the handset keypad. The input modes are selectable.

### Topics

[Setting the Input Modes](#)

[Entering Data on the W56H/W53H](#)

[Entering Data on the CP930W/DD Phone](#)

## Setting the Input Modes

The handset provides you with 12 input modes, and different input mode provides different characters.

The default input modes are Abc, 123, ABC and abc. You can enable the input modes used frequently and switch among them if needed.

### Procedure

1. Navigate to **OK > Settings > Display > Input Method**.
2. Select the desired input mode, and then press **Change**.

## Entering Data on the W56H/W53H

In corresponding input mode, you can press the keypad repeatedly to view the character (or numbers) options and press more times to highlight the desired character (or number), the available characters under each key are displayed at the left bottom of the phone screen.

The following table describes how to enter different characters using the keypad keys:

If you want to	Then you can
Switch among input modes.	Press <b># a</b> to switch among input modes. The current input mode is displayed at the right bottom of the phone screen.
Enter letters.	Press a key one or more times (depending on what input mode you're in) to enter the possible characters that are displayed on the keypad key.
Enter special characters.	Press <b>* #</b> to enter the space character or the following special characters: _ ' " = / \ ^ ; : , . - + * # \$ % & @ ? ! ; i ( ) { } [ ] < > ¥ £ \$   ~ ¢ Press <b>0 +</b> : <ul style="list-style-type: none"> <li>• If it is in the uppercase (ABC), uppercase and lowercase (Abc) or lowercase (abc) input modes, it will provide space character and the following special characters: . , ? ! 0</li> <li>• If it is in the numeric (123) input mode, it will only provide the digit 0.</li> <li>• Long press the key to enter the character +.</li> </ul>
Delete the text.	Press <b>←</b> or <b>→</b> to position the cursor to the right of the text you want to delete, and then press <b>Del</b> to delete one character at a time or long press to delete all characters.



**Related Topics**

[Setting the Input Modes](#)

[Appendix B - Input Modes and Characters on W56H/W53H](#)

## Entering Data on the CP930W/DD Phone

The following table describes how to enter different characters using the keypad keys.

Task	Action
Switch input modes	Press the <b>ABC</b> , <b>abc</b> , <b>Abc</b> , <b>2aB</b> , or <b>123</b> soft key to switch the input modes.
Enter alphas	Select <b>ABC</b> , <b>abc</b> , <b>2aB</b> , or <b>Abc</b> mode. On the DD phones, press the keys labeled with letters until your desired letter appears. On the CP930W, press a keypad key repeatedly to view the character options and stop when the letter you want to enter is displayed in the field. Wait one second, and then enter the next letter.
Enter numbers	Select <b>123</b> mode, press the corresponding keys.
Enter special characters	Select <b>ABC</b> , <b>abc</b> , <b>2aB</b> , or <b>Abc</b> mode, press * key or # key one or more times to enter one of the following special characters: * key: *,'!\-()@/:_+&%=<> £ \$¥¤[]{}~^i;\${#"  # key: # In <b>123</b> mode, you can press the * key to choose the following special characters: .*/@[].
Insert space	Select <b>ABC</b> , <b>abc</b> , <b>2aB</b> , or <b>Abc</b> mode, press the <b>0</b> key.
Move cursor	Press ◀ or ▶ to position the cursor.
Delete one or more characters	On the DD phones, position the cursor to the right of the character, and select the <b>Delete</b> soft key. On the CP930W, press the <b>Delete</b> soft key.

## Registering the Handset

You need to register your handset to the DECT manager (DM) if you want to use the basic functions of the DECT multi-cell system.

### Topics

[Registering Handsets at the DECT Manager](#)

[Selecting a System to Connect](#)

## Registering Handsets at the DECT Manager

After your system administrator has set the DM to the registration mode via the web user interface, you can register handsets to the DM.

### Procedure

1. Do one of the following:
  - Press the **Reg** soft key on the handset to register quickly.
  - Press **OK** > **Register Handset** and then select the desired base to register the handset.
  - Press **OK** > **Settings** > **Registration** > **Register Handset** and then select the desired base to register the handset.

*After registration, the handset prompts "Handset Subscribed".*

**Note:** The default base PIN is 0000.

## Selecting a System to Connect

You can connect the handset to a desired system manually, or allow the handset to connect the registered system with the greatest signal strength automatically.

### Procedure

1. Navigate to **OK** > **Settings** > **Registration** > **Select Base**.  
*The phone screen displays all systems that the handset is registered to and the **BestBase** option.*
2. Select the desired system or **BestBase**, and then press **Select**.

## Call Features

You can use the phone to place and answer calls, ignore incoming calls, transfer a call to someone else, conduct a conference call and perform other basic call features.

### Topics

[Placing Calls](#)  
[Answering Calls](#)  
[Switching Among the Receiver, Handsfree and Headset Modes](#)  
[Disabling Call Waiting](#)  
[Silencing or Rejecting Incoming Calls](#)  
[Ending Calls](#)  
[Muting/Unmuting Audio](#)  
[Holding and Resuming Calls](#)  
[Call Forward](#)  
[Transferring Calls](#)  
[Conference Calls](#)  
[Recording Using an SD Card](#)

## Placing Calls

After the handset is registered successfully, you can use your handset to place an external call.

The handset can keep 2 calls at one time at almost, one (associated with the audio) active and the other one on hold.

### Topics

[Placing External Calls](#)  
[Placing a Call from the Call History](#)  
[Placing a Call from the Directory](#)  
[Placing a Call from the Shared Directory](#)  
[Placing a Call with a Speed Dial Key](#)  
[Redial](#)  
[Placing an Anonymous Call](#)

## Placing External Calls

You can place external calls on the handset. External calls based on the public telephone network require the SIP lines.

### Topics

[Placing an External Call](#)  
[Placing Multiple External Calls](#)

## Placing an External Call

You can use the phone to place an external call.

### Procedure

1. Do one of the following:
  - Enter the desired number using the keypad.
  - Press the Speakerphone key to enter the pre-dialing screen.  
Enter the desired number using the keypad.

2. Press OK, Speakerphone key or Off-hook key to dial out.

## Placing Multiple External Calls

When you are in a call, you can hold your current call and place a new call.

### Procedure

1. Select **New Call**.
2. Enter the contact number.
3. Press the OK key.

**Note:** You can select **Options > Directory**, and then select a contact from the directory to dial out.

## Placing a Call from the Call History

You can place calls to contacts from the History list, which contains the calls that were recently placed, answered, or missed.

### Procedure

1. Press **History** or navigate to **OK > History**.  
*The phone screen displays all call records.*
2. Highlight a contact and select the Off-hook key.

## Placing a Call from the Directory

You can place a call to a contact directly from your directory.

### Procedure

1. Navigate to **OK > Directory**.
2. Select the desired directory.
3. Highlight the desired contact and select the Off-hook key.  
If the selected contact has multiple numbers, highlight the desired number, and select **OK**.

### Related Topic

[Searching for Contacts](#)

## Placing a Call with a Speed Dial Key

You can quickly dial a number by using a speed dial key without entering the directory.

### Topics

[Assigning a Speed Dial Number](#)

[Changing a Speed Dial Number](#)

[Deleting a Speed Dial Number](#)

[Calling a Contact Using a Speed Dial Key](#)

## Assigning a Speed Dial Number

You can assign a contact number as a speed dial number to the digit key. A maximum of 8 speed dial numbers are allowed.

### Before You Begin

The assigned number should exist in the directory.

### Procedure

1. Navigate to **OK > Settings > Telephony > Speed Dial**  
*The phone screen displays all available speed dial keys (2-9).*
2. Select the desired digit key, and then press **Assign**.
3. Select the desired contact from the directory.
4. Press **OK** to assign the number to the selected Speed Dial key.  
*If the selected contact has multiple numbers, select the desired number, press **OK**.*

## Changing a Speed Dial Number

You can change the current speed dial number to a new desired one.

### Before You Begin

The assigned number should exist in the directory.

### Procedure

1. Navigate to **OK > Settings > Telephony > Speed Dial**.
2. Select an assigned Speed Dial key.
3. Press **Options**, and then select **Change**.
4. Select a contact number from the directory.
5. Press **OK** to change the assigned speed dial number.

## Deleting a Speed Dial Number

When you no longer use the speed dial number, you can delete it.

### Procedure

1. Navigate to **OK > Settings > Telephony > Speed Dial**.
2. Select the desired Speed Dial key.
3. Press **Options**, and then select **Clear Key**.

## Calling a Contact Using a Speed Dial Key

After you have assigned the speed dial number, you can place a call to a contact directly by pressing it.

### Procedure

1. Long press the Speed Dial key (digit key 2-9) when the handset is idle.  
*The number assigned to this Speed Dial key is dialed out.*

## Redial

The redial list stores the last twenty dialed phone numbers. When the memory of the redial list is full, the handset will automatically erase the oldest one when a new number is dialed. You can redial a call from the redial list.

### Topics

- [Redialing a Number](#)
- [Redialing the Last Dialed Number](#)
- [Adding a Dialed Number to Local Directory](#)
- [Deleting a Redial Record](#)
- [Deleting All Redial Records](#)

## Redialing a Number

The handset keeps a record of all the placed calls. You can call the recently dialed phone number.

### Procedure

1. Press the Off-hook key when the handset is idle to access the redial list.
2. Select a record.
3. Press the Off-hook key or Speakerphone key to dial out.

**Tip:** Before placing an external call, you can press **Options > Edit Before Call** to edit the phone number.

## Redialing the Last Dialed Number

You can quickly redial the last dialed number by the Off-hook key.

### Procedure

1. Press the Off-hook key twice when the handset is idle.

*A call to your last dialed number is attempted.*

## Adding a Dialed Number to Local Directory

You can add a dialed external call number to the Local Directory or update the number for an existing contact.

### Procedure

1. Press the Off-hook key when the handset is idle to access the redial list.
2. Select the desired record.
3. Press **Options**, and then select **Add To Local > New Entry**.
4. Select the type you want to add the number to.
5. Edit the corresponding fields.
6. Press **Save**.

**Tip:** You can select **Add To Local > Update Existing** to add the number to an existing contact or update the existing contact information.

## Deleting a Redial Record

You can delete any record from the redial list.

### Procedure

1. Press the Off-hook key when the handset is idle to access the redial list.
2. Select a record.
3. Press **Options**, and then select **Delete**.

## Deleting All Redial Records

You can delete all redial records at once.

### Procedure

1. Press the Off-hook key when the handset is idle to access the redial list.
  2. Press **Options > Delete All**.
- The phone prompts whether to delete all records.*
3. Press **Yes**.

---

## Placing an Anonymous Call

You can hide your name and number when you place a call. As a result, the callee receives an anonymous call without caller identity.

### Before You Begin

Contact your system administrator to find out if this feature is available on your phone.

### Procedure

1. Navigate to **OK > Call Features > Anonymous Call**.
2. Turn on **Local Anonymous**.
3. Place a call.

*The callee is prompted with an incoming call from anonymity.*

*If the callee enables anonymous rejection feature, you may be prompted that the callee does not accept calls from an anonymous number.*

### Related Topic

[Rejecting Anonymous Calls](#)

## Answering Calls

When you receive a call, you can choose to answer it manually or automatically.

### Topics

[Answering a Call](#)

[Answering a Call When in a Call](#)

[Answering a Call Automatically](#)

## Answering a Call

When you receive an incoming call, the phone rings and the screen displays the information of the incoming call. You can choose to answer the incoming call.

### Procedure

1. Do one of the following:
  - Press the Off-hook key or **Accept** or **Answer**.
  - Press the Speakerphone key .
  - If a headset is connected, press **Accept**.

### Related Topic

[Switching Among the Receiver, Handsfree and Headset Modes](#)

## Answering a Call When in a Call

You can answer a call when there is already an active call on your phone.

When you are in an active call and an incoming call arrives on the phone, a call waiting tone beeps, and the incoming call information is displayed.

### Procedure

1. On the W56H/W53H, press the down navigation key to select the incoming call.
2. Select **Answer**.

*The active call is placed on hold, and the incoming call becomes active.*

**Note:** You can disable the call waiting feature to reject the incoming call automatically during a call.

#### Related Topic

[Disabling Call Waiting](#)

## Answering a Call Automatically

When the handset is placed in the charger, you can simply answer the incoming calls by picking up the handset from the charger without pressing the Off-hook key.

It is only applicable to W56H/W53H.

#### Procedure

1. Navigate to **OK > Settings > Telephony > Auto Answer**.
2. Press **Change** to select the **Auto Answer** check box (the default status is checked).

## Disabling Call Waiting

If the call waiting feature is disabled, when there is already a call, the new incoming call will be rejected automatically.

#### Procedure

1. Navigate to **OK > Call Features > Call Waiting**.
2. Select **Disabled** from the **Status** field.

## Switching Among the Receiver, Handsfree and Headset Modes

You can place a call using the following call modes:

- Receiver mode—pressing the Off-hook key to dial out.
- Handsfree mode—pressing the Speakerphone key to dial out.
- Headset mode—connecting a standard 3.5mm headset.

## Silencing or Rejecting Incoming Calls

When you receive an incoming call, you can choose to silence or reject the call instead of answering.

#### Topics

[Silencing a Call](#)

[Rejecting a Call Manually](#)

[Rejecting Anonymous Calls](#)

[Rejecting Calls with Do Not Disturb \(DND\)](#)

## Silencing a Call

You can silence a call to stop your phone from ringing. Even if you silence the call, the incoming call notification continues to be displayed on your phone.

#### Procedure



1. Select **Silence**.

## Rejecting a Call Manually

You can reject a call manually, and the call may be sent to voice mail. The rejected calls are displayed in the Received Calls list in your History list.

### Procedure

1. Select the On-hook key.

## Rejecting Anonymous Calls

You can reject incoming calls from the callers who have hidden their identities. As a result, your phone will not ring and you will not be notified of an attempted call.

### Procedure

1. Navigate to **OK > Call Features > Anon.Call Rejection**.
2. Turn on **Anonymous Rejection**.
3. Select **Save**.

### Related Topic

[Placing an Anonymous Call](#)

## Rejecting Calls with Do Not Disturb (DND)

You can enable DND to reject all incoming calls automatically when you do not want to be interrupted.

**Note:** Check with your system administrator to find out if the DND feature is available on your phone.

### Topics

[Rejecting Calls with DND](#)

## Rejecting Calls with DND

You can activate DND for specific lines. The phone will reject all incoming calls automatically.

### Procedure

1. Navigate to **OK > Call Features > Do Not Disturb**.
2. Select **Enabled** from the **Status** field.
3. Select **Save**.

*The status bar displays the DND icon.*

You can press the **Line** soft key when the handset is idle to check the line status.

## Ending Calls

You can end the current call at any time.



### Procedure

1. Press .

## Muting/Unmuting Audio

You can mute the microphone during an active call so that the other party cannot hear your discussion with your colleagues.

### Procedure

1. Press the mute key during a call to turn off the microphone.  
*The call is muted, and the mute icon  is displayed on the phone screen.*
2. Press the mute key again to unmute.  
*The mute icon  disappears from the phone screen.*

## Holding and Resuming Calls

You can place an active call on hold and resume the call when you are ready. When you place a call on hold, the held party may hear the music played by its server.

### Topics

[Holding a Call](#)

[Resuming a Held Call](#)

## Holding a Call

You can place an active call on hold on your phone.

### Procedure

1. Press **Options** during a call, and then select **Hold**.

**Note:** When you have multiple calls on the phone and the current call is held, you can press the up or down navigation key to swap to the active call.

## Resuming a Held Call

You can view and resume a held call on the phone.

### Procedure

1. Press **Resume**, the Speakerphone key or Off-hook key.  
If multiple calls are placed on hold, select the desired call first.

**Note:** When you have multiple calls on the phone and the current call is active, you can press the up or down navigation key to swap to the held call.

## Call Forward

You can enable call forward feature on a per-line basis. The handset will forward incoming calls of the line to another party.

There are three forwarding types:

- **Always Forward:** Incoming calls are immediately forwarded. There is no prompt on the phone screen when the line receives an incoming call. The incoming call is logged in the **Received** list.
- **Busy Forward:** Incoming calls are forwarded when the line is busy.
- **No Answer Forward:** Incoming calls are forwarded if not answered after a period of time.

### Topic

## Forwarding Incoming Calls

### Forwarding Incoming Calls

When you are not available to handle calls, you can forward incoming calls to a specific contact.

#### Procedure

1. Navigate to **OK > Call Features > Call Forward**.
2. Select the desired forwarding type.
3. Select **Enabled** from the **Status** field.
4. Enter the destination number in the **Target** field.
5. If you select the **No Answer Forward**, select the desired ring time to wait before forwarding from the **After Ring Time** field.
6. Select **Save**.

*The status bar displays the forward icon, and the incoming calls will be forwarded to the destination number according to your setting.*

**Note:** Local call forward settings may be overridden by the server settings. For more information, contact your system administrator.

### Transferring Calls

During a call, you can transfer the call to another contact.

You can use one of three ways:

- **Blind Transfer:** Transfer a call directly to the third party without consulting.
- **Semi-Attended Transfer:** Transfer a call when receiving ringback.
- **Attended Transfer (Consultative Transfer):** Transfer a call with prior consulting.

#### Topics

[Performing a Blind Transfer](#)

[Performing a Semi-Attended/Attended Transfer](#)

### Performing a Blind Transfer

You can transfer a call to another contact immediately without consulting with her/him first.

#### Procedure

1. Select **Options > Transfer**, or the TRAN key.
2. Enter the number you want to transfer to.
3. Press TRAN or **Transfer** to complete the transfer.

### Performing a Semi-Attended/Attended Transfer

You can transfer a call to another contact immediately when receiving ringback or after consulting with her/him first.

#### Procedure

1. Select **Options > Transfer**, or the TRAN key during a call.
2. Enter the number you want to transfer to.
3. Press the OK key, Off-hook key or Speakerphone key.

4. Do one of the following:
  - When you hear the ringback tone, press the TRAN key or **Transfer** to finish a semi-attended transfer.
  - After the contact answers the call, press the TRAN key or **Transfer** to finish an attended transfer (consultative transfer).

## Conference Calls

The phone supports creating a conference with other two external parties and multi-way network conference.

During the conference, follow these tips:

- Mute your microphone when you are not speaking, especially in noisy environments.
- Avoid tapping or rustling papers near the microphone.
- Speak in your normal voice without shouting.

### Topics

[Local Conference](#)

[Network Conference](#)

## Local Conference

You can initiate a three-way (including yourself) conference calls with your contacts on the phone.

### Topics

[Setting Up a Local Conference Call](#)

[Muting or Unmuting a Conference Call](#)

[Ending a Conference Call](#)

## Setting Up a Local Conference Call

You can set up a local conference call with up to two contacts.

### Procedure

1. Place a call to the first party.
2. When the first party answers the call, select **Options** > **Conference** to place a new call.  
*The active call is placed on hold.*
3. Dial the second party's number.
4. When the second party answers the call, select **Conf.** to invite two parties to join the conference.

## Merging Two Calls into a Conference

You can invite a held call into a conference call with the active call.

### Procedure

1. Place two calls on the phone.
2. Select the desired call for a conference and ensure that the call is active.
3. Select **Options** > **Conference**.

## Muting or Unmuting a Conference Call

When you mute the local microphone during a conference call, other participants can hear each other except you.

### Procedure

1. Press the MUTE key to mute the conference.

2. Press the MUTE key again to unmute the conference.

## Ending a Conference Call

You can end the current conference call at any time.

### Procedure

1. Press the On-hook key or **End**.

*If any party in the conference ends the call, the other parties remain connected.*

## Network Conference

If your system administrator has set a network conference feature on your phone, you can initiate a conference with two or more contacts.

### Topics

[Setting Up a Network Conference](#)

[Inviting another Party into an Active Conference Call](#)

[Holding/Resuming a Conference Call](#)

[Ending a Conference Call](#)

## Setting Up a Network Conference

You can set up a network conference with two or more contacts.

### Procedure

1. Place a call to the first party.
2. Select **Options** > **Conference**.  
*The active call is placed on hold.*
3. Dial the second party's number.
4. When the second party answers the call, select **Conf.** to add the second party to the conference.
5. Select **Conf.** to place a new call.  
*The conference call is placed on hold.*
6. Enter the number of the new party, and then press the OK key.
7. When the new party answers the call, select **Conf.** to add the new party to the conference.
8. Repeat steps 5 to 7 until you add all parties.

**Note:** The procedures for setting up a network conference call on specific servers may be different. Contact your system administrator for more information.

## Inviting another Party into an Active Conference Call

Any party in the conference call can invite other party into an active conference call.

### Procedure

1. Select **New Call**.
2. Enter the desired number and dial out.
3. When the new party answers the call, press **Options**, and then select **Conference**.

*The new party is joined the conference call.*

## Holding/Resuming a Conference Call

Any party in the conference call can place himself/herself on hold, but other parties can continue the conference call normally.

**Note:** The conference call will only be held when all parties in the conference call place themselves on hold.

#### Procedure

1. Press **Options** > **Hold**.
2. Select **Resume** to resume the held conference call.

### Ending a Conference Call

You can end the current conference call at any time.

#### Procedure

1. Press the On-hook key or **End**.

*If any party in the conference ends the call, the other parties remain connected.*

## Recording Using an SD Card

By default, you can record your calls into an SD card so that you can listen to them later.

For more information on how to attach an SD card, please refer to the Quick Start Guide for your phone on [Yealink Support](#).

#### Topics

[Recording a Call](#)

[Pausing/Resuming a Recording](#)

[Stopping a Recording](#)

[Managing the Recordings](#)

[Viewing the Available Recording Time](#)

## Recording a Call

You can record the important parts during an active call.

**Important:** Before call recording, especially those involving PSTN, it is necessary to know about the rules and restrictions of call recording in the country where you are.

It is also very important to inform all the call parties that you are recording and ask for their consent before recording the conversation.

#### Before You Begin

#### Procedure

1. During a call, select **More** > **StartREC**.

*The phone screen displays a recording icon and recording duration.*

## Pausing/Resuming a Recording

When you do not want the current sensitive information to be recorded, you can pause the recording.

After pausing, you can resume it at any time and the recording continues and will be saved in the same file.

#### Procedure

1. Select **PauseREC** to pause a recording.

*The pause recording icon appears on the phone screen and the duration stops counting.*

2. Select **Re REC** to resume a recording.

**Note:** If you hold the call during the recording, none of the parties will be recorded until you resume the call.

## Stopping a Recording

You can stop recording a call before the call ends. The recording also stops when the active call ends. The recording will be saved as a "\*.aac" file in the SD card automatically.

### Procedure

1. Do one of the following:

- Select **StopREC**.

*The recording icon and recording duration disappears. The screen prompts a message that the call is recorded successfully.*

- Select **End Call**.

*The recording icon and recording duration disappears, and the phone returns to the idle screen. The screen prompts a message that the call is recorded successfully.*

## Managing the Recordings

After stopping recording, you can manage the recordings on your phone. Make sure the is still inserted in the phone.

### Topics

[Listening to a Recording](#)

[Pausing/Resuming a Playback](#)

[Fast Forwarding/Rewinding a Playback](#)

[Deleting a Recorded Call](#)

### Listening to a Recording

You can browse and play back the recordings on your phone.

**Tip:** You can also play back the recordings on a PC using an application capable of playing the "\*.aac" file.

### Procedure

1. Navigate to **Menu > Record > Browse Audio**.

*The phone screen shows all recorded files (filename and file size) in the **Browse Audio** list. The filename consists of the recording time & date, the other party's number/IP address/name (or the first person's number/IP address/-name you called).*

2. Highlight the desired file, and select **Play**.

*The length of the recording and a progress bar are displayed as the recording plays.*

### Related Topic

[Adjusting the Volume](#)

### Pausing/Resuming a Playback

When you are playing a recording, you can pause it manually to take note.

### Procedure

1. Select **Pause** to pause the playback. The **Play** soft key appears on the phone screen.

2. Select **Play** to restart the playback.

## Fast Forwarding/Rewinding a Playback

While a recording plays, you can fast forward or rewind the playback at any time.

### Procedure

- Select ►► to skip forward the playback. Tap once to skip forward 1 minute.
- Select ◀◀ to rewind the playback. Tap once to rewind 1 minute.

## Deleting a Recorded Call

You can delete the recordings when you need additional space on your SD card or the recordings are useless.

### Procedure

1. Navigate to **Menu > Record > Browse Audio**.
2. Highlight the desired recording, and select **Delete**.  
*(missing or bad snippet)delete the audio.*
3. Select **Yes**.

## Viewing the Available Recording Time

To avoid the recording failed due to timeout, you can view the storage space of the SD card, and check the available recording time before recording.

### Procedure

1. Navigate to **Menu > Record > Storage Space**.



# Advanced Call Features

By using the advanced features, your handset would perform more functions that make your work more efficient.

## Topics

[Call Park and Call Retrieve](#)  
[Shared Line](#)  
[Voice Mail](#)

If you require additional information or assistance with your new phone, contact your system administrator.

## Call Park and Call Retrieve

You can park a call, and then retrieve the call either from your phone or another phone. After parked, the call is placed on hold, you can continue the conversation after retrieving it.

**Note:** Call park is not available on all servers. Check with your system administrator to find out if it is available on your phone.

## Topics

[Parking or Retrieving a Call in the FAC Mode](#)  
[Parking or Retrieving a Call in the Transfer Mode](#)  
[Retrieving a Call with a Retrieve Key](#)

## Parking or Retrieving a Call in the FAC Mode

You can park the call to the local extension or the desired extension through dialing the park code.

## Topics

[Parking a Call in the FAC Mode](#)  
[Retrieving a Parked Call in the FAC Mode](#)

## Parking a Call in the FAC Mode

You can park a call in the FAC mode directly. When you park a call to the local extension or the desired extension, the call is held in the same network on your phone.

## Before You Begin

Your system administrator has set call park in the FAC mode.

## Procedure

1. During a call, select **Options > Call Park**.  
*The phone will dial the call park code which is pre-configured.*
2. Do one of the following:
  - If you want to park the call against the local extension, press the # key.
  - If you want to park the call against the desired extension, enter the extension (for example, 4606) where you want to park the call and press the # key.

*If the call is parked successfully, you will hear a voice prompt that the call is parked.*

## Retrieving a Parked Call in the FAC Mode

You can retrieve a parked call in the FAC mode from any phone within your network.

### Before You Begin

Your system administrator has set call park in the FAC mode. There is a call parked on the extension. Get the park retrieve code from your system administrator.

### Procedure

1. Dial the park retrieve code.
2. Follow the voice prompt to retrieve:
  - Press the # key on the phone where the call is parked.
  - Enter the desired extension followed by # (for example, 4606#) on any phone.

### Related Topic

[Retrieving a Call with a Retrieve Key](#)

## Parking or Retrieving a Call in the Transfer Mode

You can park the call to the shared parking lot through a blind transfer.

For some servers, the system will return a specific retrieve park number (park retrieve code) after parking successfully.

### Topics

[Parking a Call in the Transfer Mode](#)

[Retrieving a Parked Call in the Transfer Mode](#)

## Parking a Call in the Transfer Mode

You can park a call in the transfer mode directly. When you park a call to the shared parking lot, the call is held on your phone.

### Before You Begin

Your system administrator has set call park in the Transfer mode.

### Procedure

1. During a call, select **Options** > **Call Park**.  
*The call will be directly transferred to the shared parking lot.*

## Retrieving a Parked Call in the Transfer Mode

You can retrieve a parked call in the transfer mode from any phone in the same network.

### Before You Begin

Your system administrator has set call park in the Transfer mode. There is a call parked on the shared parking lot.

### Procedure

1. Dial the park retrieve code.  
*The phone will retrieve the parked call from the shared parking lot.*

**Tip:** When the phone is idle, you can use a Retrieve key to retrieve a parked call directly.

### Related Topic

[Retrieving a Call with a Retrieve Key](#)

## Retrieving a Call with a Retrieve Key

You can easily use a retrieve key to retrieve a parked call quickly.

### Before You Begin

Check with your system administrator if the FAC or Transfer mode is set on your phone, and if the call park feature has set for your phone.

### Procedure

1. Navigate to **OK > Settings > Shortcut**.
2. Select the desired shortcut key, and then press **Change**.
3. Select **Retrieve**, and then press **OK**.

When there is a call parked on the extension or the shared parking lot, you can press the Retrieve key on the idle screen, and the handset will dial the configured park retrieve code.

## Shared Line

Yealink phone supports using Shared Call Appearance (SCA) to share a line. So that this line can be registered on more than one phone at the same time.

Your system administrator can set your phone to use the shared line.

### Topics

[State Indicator of Shared Line](#)

[Placing Calls on a Shared Line](#)

[Answering Calls on a Shared Line](#)

[Placing a Call on Public Hold](#)

[Placing a Call on Private Hold](#)


[Retrieving a Held Call on a Shared Line](#)

[Barging in an Active Call on a Shared Line](#)




[Pulling a Shared Call on a Shared Line](#)

## State Indicator of Shared Line

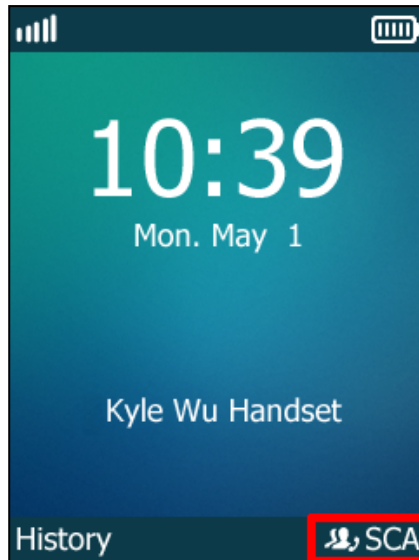If your system administrator assigns the shared line to your handset, the SCA with an icon is displayed on the right soft key.



The following table shows the icon associated with the shared line:

Icons	Description
	The shared line is idle.
	The shared line is dialing, in conversation or placed on private hold.
 (Flashing)	The shared line receives an incoming call or is placed on public hold.

## Placing Calls on a Shared Line

You can place one or multiple calls on a shared line.

The phone places a call on the first shared line automatically. You can press **SCA** to select the desired shared line.

### Related Topic

[Placing Calls](#)

## Answering Calls on a Shared Line

You can answer one or two calls on the shared line.

When an incoming call arrives on the shared line, all the registered phones will ring simultaneously, and the call can be answered on any one of the phones.

### Related Topic

[Answering Calls](#)

## Placing a Call on Public Hold

You can place a call on public hold that any shared line phone can retrieve the held call.

### Procedure

1. During a call, select **Options** > **Hold**.

## Placing a Call on Private Hold

You can place a call on private hold that only you on shared line can retrieve the held call.

### Procedure

1. Press **Options** > **Private Hold**.

*Then the call is held on your phone, and the other phones registered with shared line show the call is in the busy state. Other users on the shared line cannot resume your held call.*

## Retrieving a Held Call on a Shared Line

If you place a call on hold on a shared line, you can resume this call at any time. When the shared line key shows a call that is in a held state, you can resume the held call remotely from other user's phone.

### Before You Begin

There is at least one call placed on public hold on the shared line.

### Procedure

1. Press **SCA**, and then select the held call.
2. Press **Resume**.

## Barging in an Active Call on a Shared Line

In the SCA scenario, you can barge into an active call on the shared line. After you barge into a call, the call turns into a three-party conference.

**Note:** Only one user can barge into an active call on the shared line at a time.

### Before You Begin

There is at least one active call on the shared line.

### Procedure

1. Press **SCA**, and then select an active call.
2. Select **BargeIn** (Barge In) to interrupt the active call.

## Pulling a Shared Call on a Shared Line

In the SCA scenario, both you and other users can pull an existing call from another shared phone that is active or held.

### Before You Begin

There is an active or held call on the shared line. Contact your system administrator for the call pull feature access code.

### Procedure

1. Enter the call pull feature access code (for example, \*11).
2. Press OK, Speakerphone key or Off-hook key.

## Voice Mail

Voice Mail feature allows you to leave voice mails for someone or listen to your voice mail messages on your IP phones.

This feature is set up on the server-side and not all servers support this feature.

### Topics

[Setting the Voice Mail Code](#)

[Leaving Voice Mails](#)

[Listening to Voice Mails](#)

## Setting the Voice Mail Code

If you want to connect to the message center, you need to set the voice mail code on your phone.

### Procedure

1. Navigate to **OK > Voice Mail > Set Voice Mail**.  
On the CP930W, navigate to **Menu > Message > Set Voice Mail Code**.  
On the DD phone, navigate to **Menu > Message > Voice Mail > Set Voice Mail Code**.
2. Select **Enabled** from the **Status** field.
3. Enter voice mail code in the **Number** field.
4. Select **OK**.

## Leaving Voice Mails

You can leave a voice mail to someone who is busy or inconvenient to answer the call.

### Procedure

1. Follow the voice prompts to leave a voice mail.
2. Hang up to complete the voice mail.

## Listening to Voice Mails

You can listen to your voice mails on the handset directly.

### Before You Begin

You need to set the voice mail code in advance.

### Procedure

1. Navigate to **OK > Voice Mail > Play Message** or press **Message** key.  
On the CP930W, navigate to **Menu > Message > Play Message**.  
On the DD phone, navigate to **Menu > Message > Voice Mail > View Voice Mail**.  
*The handset dials out the voice mail code using the selected line automatically.*
2. Follow the voice prompt from the system server to listen to your voice mails.

### Related Topic

[Setting the Voice Mail Code](#)

---

# Directory

The phone provides several types of phone directories, which can be customized by your system administrator.

## Topics

[Local Directory](#)  
[Shared Directory](#)  
[Blacklist](#)  
[Remote Phone Book](#)

## Local Directory

You can store up to 100 contacts in the handset's Local Directory, as well as add, edit and delete a contact.

## Topics

[Adding Contacts](#)  
[Viewing Contacts](#)  
[Editing Contacts](#)  
[Deleting Contacts](#)  
[Searching for Contacts](#)

## Adding Contacts

When you add a contact to your Local Directory, you can choose how much information you want to enter for your contact. You are required to enter a contact name at least for each new contact.

## Procedure

1. Navigate to **OK > Directory**.  
On the CP930W, select **Directory** or navigate to **Menu > Directory > Local Directory**.
2. Select **Options > New Contact**.
3. Enter your contact's information.
4. Select **Save**.

## Viewing Contacts

You can view the local contacts from the Local Directory on your phone.

## Procedure

1. Navigate to **OK > Directory**.
2. Use the navigation keys to look through the contacts.  
On the CP930W, select **Directory** navigate to **Menu > Directory > Local Directory**.  
*The contact names are displayed in alphabetical order.*

## Editing Contacts

You can update your contacts' information.

## Procedure

1. Navigate to **OK > Directory**.  
On the CP930W, select **Directory** navigate to **Menu > Directory > Local Directory**.

2. Highlight the desired contact, and select **Options** > **Edit**.
3. Edit the contact information.
4. Select **Save**.

## Deleting Contacts

You can delete one or all contacts from the Local Directory.

### Topics

[Deleting a Contact](#)

[Deleting All Contacts](#)

## Deleting a Contact

You can delete any contact from the Directory.

### Procedure

1. Navigate to **OK** > **Directory**.  
On the CP930W, navigate to **Menu** > **Directory**.
2. Select the desired contact.
3. Select **Options** > **Delete**.  
*(missing or bad snippet) delete this contact.*
4. Select **Yes**.

## Deleting All Contacts

You can delete all contacts from the Directory.

### Procedure

1. Navigate to **OK** > **Directory**.  
On the CP930W, navigate to **Menu** > **Directory**.
2. Select **Options** > **Delete All**.  
*(missing or bad snippet) delete all contacts.*
3. Select **Yes**.

## Searching for Contacts

In the Local Directory, you can enter search criteria to find your desired contact quickly.

### Procedure

1. Navigate to **OK** > **Directory**.  
On the CP930W, enter your search criteria directly by tapping the keypad..
2. Enter your search criteria in the search field.

## Shared Directory

All handsets that are registered on the same DM can share the contacts with each other. You can store up to 100 contacts in your phone's shared directory.

Check with your system administrator to find out if this feature is available on your phone.

It is not applicable to DD phones.



## Topics

[Adding Shared Contacts](#)  
[Viewing Shared Contacts](#)  
[Editing Shared Contacts](#)  
[Deleting a Shared Contact](#)  
[Deleting All Shared Contacts](#)  
[Searching for Shared Directory Contacts](#)  
[Saving a Shared Contact to the Local Directory](#)  
[Placing a Call from the Shared Directory](#)

## Adding Shared Contacts

When you add a contact to your Shared Directory, you can choose how much information you want to enter for your contact. You are required to enter a contact name at least for each new contact.

### Procedure

1. Navigate to **OK > Directory > Shared Directory**.  
On the CP930W, navigate to **Menu > Directory > Shared Directory** or tap **Directory > Shared Directory**.
2. Select **Options > New Contact**.
3. Enter the shared contact's information.
4. Select **Save**.

## Editing Shared Contacts

You can modify or add more information to your contacts.

### Procedure

1. Navigate to **OK > Directory > Shared Directory**.  
On the CP930W, navigate to **Menu > Directory > Shared Directory** or tap **Directory > Shared Directory**.
2. Highlight a contact and then select **Options > Edit**.
3. Edit the shared contact information.
4. Select **Save**.

## Deleting a Shared Contact

You can delete any contact from the Shared Directory.

### Procedure

1. Navigate to **OK > Directory > Shared Directory**.  
On the CP930W, navigate to **Menu > Directory > Shared Directory** or tap **Directory > Shared Directory**.
2. Highlight a contact and then select **Options > Delete**.  
*The phone prompts whether to delete the contact.*
3. Select **Yes** to delete.

## Deleting All Shared Contacts

You can delete all contacts from the Shared Directory.

### Procedure

1. Navigate to **OK > Directory > Shared Directory**.  
On the CP930W, navigate to **Menu > Directory > Shared Directory** or tap **Directory > Shared Directory**.

2. Highlight a contact and then select **Options > Delete All**.

*The phone prompts whether to delete all contacts.*

3. Select **Yes** to delete.

## Searching for Shared Directory Contacts

In the Shared Directory, you can enter search criteria to find your desired contact quickly.

### Procedure

1. Navigate to **OK > Directory > Shared Directory**.

On the CP930W, navigate to **Menu > Directory > Shared Directory** or tap **Directory > Shared Directory**.

2. Enter the name or number you are looking for in the search field.

*The contacts will be displayed in the result list.*

## Saving a Shared Contact to the Local Directory

You can move a shared contact to the Local Directory. The shared contacts added to the Local Directory will not disappear, even after your system administrator disabled the Shared Directory feature.

### Procedure

1. Navigate to **OK > Directory > Shared Directory**.

On the CP930W, navigate to **Menu > Directory > Shared Directory** or tap **Directory > Shared Directory**.

2. Highlight a contact, and select **Options > Add To Local > New Entry**.

3. (Optional.) Edit the contact's information.

4. Select **Save**.

## Blacklist

Incoming calls from the Blacklist are rejected automatically. You can store up to 30 contacts in the blacklist to block unwanted callers.

### Topics

[Adding a Blacklist Contact](#)

[Viewing Blacklist Contacts](#)

[Editing a Blacklist Contact](#)

[Deleting Blacklist Contacts](#)

## Adding a Blacklist Contact

You can add a blacklist contact on the phone to prevent someone from calling you.

### Procedure

1. Navigate to **OK > Settings > Telephony > Blacklist**.

On the DD phone, navigate to **Menu > Directory > Blacklist**.

On the CP930W, navigate to **Menu > Settings > Basic Settings > Blacklist**.

2. Select **New Entry** or **Options > New Entry**.

3. Enter the blacklist contact's information.

4. Select **Save**.

## Viewing Blacklist Contacts

You can view the blacklist contacts from the Blacklist on your phone.

### Procedure

1. Navigate to **OK > Settings > Telephony > Blacklist**.
2. Use the navigation keys to look through the blacklists.  
On the DD phone, navigate to **Menu > Directory > Blacklist**.  
On the CP930W, navigate to **Menu > Settings > Basic Settings > Blacklist**.

## Editing a Blacklist Contact

You can update your blacklist contacts' information.

### Procedure

1. Navigate to **OK > Settings > Telephony > Blacklist**.  
On the DD phone, navigate to **Menu > Directory > Blacklist**.  
On the CP930W, navigate to **Menu > Settings > Basic Settings > Blacklist**.
2. Highlight the desired blacklist contact, and select **Options > Edit**.
3. Edit the blacklist contact information.
4. Select **Save**.

## Deleting Blacklist Contacts

You can delete one or all blacklist contacts. If a contact is removed from the blacklist, you can answer the call from the contact normally.

### Topics

[Deleting a Blacklist Contact](#)

[Deleting All Blacklist Contacts](#)

## Deleting a Blacklist Contact

If you want to answer a call from a specific contact, you need to remove it from the Blacklist.

### Procedure

1. Navigate to **OK > Settings > Telephony > Blacklist**.  
On the DD phone, navigate to **Menu > Directory > Blacklist**.  
On the CP930W, navigate to **Menu > Settings > Basic Settings > Blacklist**.
2. Select the desired blacklist contact.
3. Select **Options > Delete**.

## Deleting All Blacklist Contacts

You can delete all contacts from the Blacklist when you are ready to answer calls from them again.

### Procedure

1. Navigate to **OK > Settings > Telephony > Blacklist**.  
On the DD phone, navigate to **Menu > Directory > Blacklist**.  
On the CP930W, navigate to **Menu > Settings > Basic Settings > Blacklist**.
2. Select **Options > Delete All**.  
*(missing or bad snippet)delete all contacts.*
3. Select **Yes**.

## Remote Phone Book

If the Remote Phone Book feature has been enabled by your system administrator, you can access your corporate directory directly from your phone.

### Topics

[Searching for Remote Phone Book Contacts](#)

[Viewing Remote Phone Book Contacts](#)

[Saving a Remote Phone Book Contact to the Local Directory](#)

## Searching for Remote Phone Book Contacts

In the Remote Phone Book, you can enter search criteria to find your desired contact quickly.

### Procedure

1. Navigate to **OK > Directory**.  
On the CP930W/DD phone, navigate to **Menu > Directory > Remote Phone Book**.
2. Select the desired remote phone book.
3. Enter your search criteria in the search field.

## Viewing Remote Phone Book Contacts

You can view the contact list of the remote phone book on your phone.

### Procedure

1. Navigate to **OK > Directory**.
2. Select the desired remote phone book.
3. Use the navigation keys to look through the remote phone book contacts.  
On the CP930W/DD phone, navigate to **Menu > Directory > Remote Phone Book**.

## Saving a Remote Phone Book Contact to the Local Directory

You can save any remote phone book contact to the Local Directory, to conveniently call this contact when you cannot access the remote phone book.

### Procedure

1. Navigate to **OK > Directory**.  
On the CP930W/DD phone, navigate to **Menu > Directory > Remote Phone Book**.
2. Select the desired remote phone book.
3. Highlight the desired contact, and then select **Options > Add To Local > New Entry**.
4. Edit the corresponding fields.
5. Select **Save**.

**Tip:** You can select **Add To Local > Update Existing** to update the existing contact information.

## Call History

The call history list includes Missed Calls, Placed Calls and Received Calls, and each list holds 100 entries.

### Topics

[Call History Icons](#)

[Viewing History Records](#)

[Saving a History Record to Local Directory](#)




[Saving a History Record to Blacklist](#)

[Deleting History Records](#)




## Call History Icons

The call history icon in the Call History indicates the corresponding call history types.

### W56H/W53H:

Icon	Description
	Received Calls
	Missed Calls
	Placed Calls

### CP930W/DD phone:

Icon	Description
	Received Calls
	Missed Calls
	Placed Calls

## Viewing History Records

The history record saves the call information such as the caller's name and number, local line and call duration.

### Procedure

1. Press **History** or navigate to **OK > History**.
2. Select the desired list.
3. Select the desired entry.
4. Select **Options > Detail**.

## Saving a History Record to Local Directory

To identify someone's call the next time, you can save a history record to the Local Directory.

### Procedure

1. Select **History** or navigate to **OK > History**.
2. Select the desired list.

3. Highlight the desired entry, and select **Options > Add To Local > New Entry**.
4. Edit the contact information.
5. Select **Save**.

**Tip:** You can select **Add To Local > Update Existing** to update the existing contact information.

## Saving a History Record to Blacklist

You can prevent someone from calling you again by saving a history record to the blacklist.

### Procedure

1. Select **History** or navigate to **OK > History**.  
*The phone displays all call records.*
2. Select the desired list.
3. Highlight the desired entry, and then select **Options > Add To Blacklist**.  
*(missing or bad snippet) add it or not.*
4. Select **Yes**.

## Deleting History Records

You can delete one or all call records from the call history list.

### Topics

[Deleting a Call Record](#)

[Deleting All Call Records](#)

## Deleting a Call Record

You can delete any call record from the call history list.

### Procedure

1. Press **History** or navigate to **OK > History**.
2. Select the desired list.
3. Highlight the desired entry, and select **Options > Delete**.

## Deleting All Call Records

You can delete all call records from the call history list.

### Procedure

1. Press **History** or navigate to **OK > History**.
2. Select the desired list.
3. Select **Options > Delete All**.  
*(missing or bad snippet)delete all the records.*
4. Select **Yes**.

---

# Customizing Your Phone

---

You can make your phone more personalized by customizing various settings.

## Topics

[Turning Handset On](#)  
[Turning Handset Off](#)  
[Changing the Wallpaper](#)  
[Setting the Screen Saver](#)  
[Changing the Screen Brightness](#)  
[Setting the Keypad Light](#)  
[Changing the Language](#)  
[Time & Date](#)  
[Shortcuts](#)  
[W56H/W53H Handset Keypad Lock](#)  
[Silent Mode](#)

## Turning Handset On

The handset will be turned on automatically when the battery is inserted into the handset. You can also turn the handset on manually.

It is only applicable to W56H/W53H/CP930W.

### Procedure

1. Do one of the following:
  - Press the On-hook key. The handset screen lights up.  
On the CP930W, long tap the On-hook key. The mute touch key glows red and then the handset screen lights up.
  - Place the handset to the charging cradle.

## Turning Handset Off

The handset will be turned off automatically when the battery runs out. You can also turn the handset off manually.

It is only applicable to W56H/W53H/CP930W.

### Procedure

1. Long press the On-hook key when the handset is idle.  
*On the CP930W, a message prompts whether to power off the device.*
2. On the CP930W, select **Yes**.

**Note:** You can not turn the CP930W off when the phone is charging.

## Changing the Wallpaper

You can change the wallpaper that is displayed on the idle screen.

It is only applicable to W56H/W53H.

#### Procedure

1. Navigate to **OK > Settings > Display > Wallpaper**.
2. Press the navigation keys to select the desired image.
3. Press **Save**.

## Setting the Screen Saver

The screen saver is designed to protect your phone screen by filling it with an analog clock.

When the screen saver is enabled, an analog clock will be activated and appear on the phone screen if the handset is idle for approximately 10 seconds.

It is only applicable to W56H/W53H.

#### Procedure

1. Navigate to **OK > Settings > Display > Screen Saver**.
2. Press **Change**.

## Changing the Screen Brightness

For W56H/W53H, the handset backlight in charger or out of charger can be configured independently.

When in charger/out of charger is enabled, the backlight will be turned off after the handset is idle for about 30 minutes when the handset is or not in the charging cradle. When an incoming call arrives, a key is pressed or the handset status changes, the backlight is automatically turned on.

For CP930W, the backlight automatically turns off, when the phone is charging and inactive for a specified time.

#### Note

When the CP930W is not in charging, its backlight will be turned off after the phone is inactive for about 30 seconds.

#### Procedure

1. Navigate to **OK > Settings > Display > Display Backlight**.  
On the CP930W, navigate to **Menu > Settings > Basic Settings > Display > Display Backlight**.
2. On the W56H/W53H, select the desired value from the **In Charger** or **Out Of Charger** field.
3. Select **Save**.

## Setting the Keypad Light

You can enable the keypad light to illuminate the keypad keys when any key is pressed.

It is only applicable to W56H/W53H.

#### Procedure

1. Navigate to **OK > Settings > Display > Keypad LED**.
2. Press **Change**.

## Changing the Language

Your phone supports several languages that you can choose to use on the phone.

Contact your system administrator to find out exactly which languages are supported on your phone.



**Procedure**

1. Navigate to **OK > Settings > Language**.  
On the CP930W/DD phone, navigate to **Menu > Settings > Basic Settings > Language**.
2. Select the desired language.  
*(missing or bad snippet) change the language.*
3. Select **Yes**.  
*The phone language is changed to the selected one.*

## Time & Date

You can set the time and date manually. The time and date formats are also variable.

**Topics**

[Setting the Time and Date Manually](#)

[Changing the Time and Date Format](#)

### Setting the Time and Date Manually

If your phone cannot obtain the time and date automatically, you can set it manually.

**Before You Begin**

Check with your system administrator to find out if the manual mode has been enabled.

**Procedure**

1. Navigate to **OK > Settings > Date & Time**.  
On the CP930W, navigate to **Menu > Settings > Basic Settings > Time & Date**.  
On the DD phone, navigate to **Menu > Settings > Basic Settings > Time & Date > Manual Settings**.
2. Edit the date and time.
3. Select **Save**.  
*The time and date set on the handset will be changed accordingly.*

### Changing the Time and Date Format

You can set the phone to display the time in 12-hour format or 24-hour format. You can also change the date format, including the options to display the day (D), month (M), and year (Y).

**Note:** Your system administrator can customize the date format.

**Procedure**

1. Navigate to **OK > Settings > Display > Time Format** or **Date Format**.  
On the DD phone, navigate to **Menu > Settings > Basic Settings > Time & Date**.  
On the CP930W, navigate to **Menu > Settings > Basic Settings > Display > Time Format** or **Date Format**.
2. Select the desired time format or date format.
3. Select **Change/Save**.

## Shortcuts

Shortcuts allow you to quickly and directly access the feature without scrolling through the menu when the phone is idle. For example, press the down navigation key to access Directory. You can configure six shortcuts on the phone in

total.

It is only applicable to W56H/W53H.

**Topics**





[Supported Shortcuts](#)

[Customizing the Shortcuts](#)

## Supported Shortcuts

By default, the handset provides a certain access feature for a certain shortcut, you can change it to make your phone more personalized.

The following table lists the default access feature of the desired shortcut, and the available access features for all short-cuts:

Shortcut	Default Access Feature	Available Access Features
Left Softkey	History	History Missed Received
Right Softkey	Line Status	Redial Speed Dial Menu
	Intercom (not available in the multi-cell system)	Line Status Default Line
	Directory	Call Forward Do Not Disturb Directory
	Volume-	Local Directory Remote Directory
	Volume+	Volume- Volume+ Status

## Customizing the Shortcuts

You can customize the function of the shortcuts to make your handset more personalize.

**Procedure**

1. Navigate to **OK > Settings > Shortcut**.
2. Select the desired shortcut, and then press **Change**.  
*The feature currently assigned to the selected key is highlighted and followed by a left arrow.*
3. Select the desired feature, and then press **OK**.

## Related Topic

[Supported Shortcuts](#)

# W56H/W53H Handset Keypad Lock

To prevent accidental use of the handset, the keypad can be locked manually by long pressing the # key. When the keypad is locked, incoming calls will still ring on your phone, but only the emergency numbers can be dialed out.

## Topics

[Locking Handset Keypad](#)

[Unlocking Your Phone](#)

## Locking Handset Keypad

When you temporarily do not use your handset, you can lock it manually.

### Procedure

1. Long press the # key when the handset is idle until the phone prompts you the handset is locked.

*The lock icon appears in the status bar.*

## Unlocking Your Phone

When you need to use the locked handset, you can unlock it manually.

### Procedure

1. Long press the # key when the locked handset is idle until the phone prompts you the handset is unlocked.

*The lock icon disappears from the status bar.*

# DD Phone Lock

Phone lock helps you protect your phone from unauthorized use.

## Topics

[Setting the Phone Lock](#)

[Locking Your Phone Manually](#)

[Unlocking Your Phone](#)

[Changing Your Phone Unlock PIN](#)

## Setting the Phone Lock

You can manually lock the phone or wait a specified time to automatically lock the phone.

What unauthorized users can do depends on the settings of the phone lock type.

The phone supports the following phone lock types:

- **Menu key:** it prevents unauthorized users from accessing the menu, changing the personal settings for your phone.
- **Function key:** it only allows users to use the keypad for placing a call, answering or rejecting an incoming call and ending a call, and it prevents unauthorized users from other operations.
- **All keys:** it only allows users to use the keypad for dialing an emergency number or authorized numbers that set up by your system administrator, answering or rejecting an incoming call and ending a call, and it prevents unauthorized users from other operations. The phones only support All Keys type of phone lock.

**Note:** The Volume key always available when you lock the phone.

### Procedure

1. Navigate to **Menu > Settings > Basic Settings > Phone Lock**.
2. Enter the desired PIN (default PIN: 123) in the **Unlock PIN** field.
3. Select **OK**.
4. Select **Enabled** from the **Lock Enable** field.
5. Select the desired type from the **Lock Type** field.
6. Enter the desired interval (0 - 3600 seconds) in the **Auto Lock** field.  
If the value is set to 0, the phone will not be automatically locked.
7. Select **Save**.

## Locking Your Phone Manually

You can lock the phone manually before the phone is automatically locked.

### Before You Begin

Make sure that the phone lock is set.

### Procedure

1. Long press # key when the phone is idle.  
*The lock icon appears on the phone screen.*

### Related Topic

[Setting the Phone Lock](#)

## Unlocking Your Phone

You can use an unlock PIN to unlock the phone.

If you forget the unlock PIN, you can enter the administrator password to unlock your phone, and then automatically access the PIN change screen.

### Procedure

1. Press any locked key, the phone prompts you to enter an unlock PIN.
2. Enter the desired PIN (default: 123) in the **Unlock PIN** field.
3. Select **OK**.

*The lock icon disappears from the phone screen.*

## Changing Your Phone Unlock PIN

The default unlock PIN is "123". For security reasons, you should change the default unlock PIN as soon as possible.

### Procedure

1. Navigate to **Menu > Settings > Basic Settings > Change PIN**.
2. Enter your old and new unlock PIN respectively.  
The unlock PIN length must be within 15 digits.
3. Select **Save**.

## Silent Mode

You can enable the silent mode if you do not want to be disturbed. The handset will not ring when receiving an incoming call, but the phone will still display the incoming call information.

It is only applicable to W56H/W53H.

### Topics

[Switching on Silent Mode](#)

[Switching off Silent Mode](#)

## Switching on Silent Mode

You can silence an incoming call by switching on silence mode to stop your phone from ringing.

### Procedure

1. Long press the \* key until the phone prompts "All Ring Tones Off".

*The silent icon  appears in the status bar.*

**Note:** When the silent mode is activated, the phone will not play any advisory tones.

### Related Topic

[Setting the Advisory Tone](#)

## Switching off Silent Mode

If you want to resume the incoming ring, you can switch off silent mode.

### Procedure

1. Long press the \* key until the phone prompts "All Ring Tones On".

## Audio Settings

You can change the basic audio settings on your phone.

### Topics

[Adjusting the Volume](#)


[Setting the Ring Tone](#)

[Setting the Advisory Tone](#)

## Adjusting the Volume

You can adjust the volume of the ringer, media, and audio during a call.

### Procedure

1. Press the left or right navigation key.  
On the CP930W, press the Volume touch key.  
On the DD phone, press the Volume key  .

## Setting the Ring Tone

Ring tones are used to indicate the incoming calls.

### Topics

[Setting the Ring Tone for the External Calls](#)

## Setting the Ring Tone for the External Calls

You can select a unique ring tone for the external calls so that you can identify callers when the phone rings.

### Procedure

1. Navigate to **OK > Settings > Audio > Ring Tones > Melodies**.  
On the CP930W/DD phone, navigate to **Menu > Settings > Basic Settings > Sound > Ring Tones**.
2. Select the desired ring tone.  
*The ring tone is played automatically.*
3. Select **Save**.

## Setting the Advisory Tone

Advisory tones are the acoustic signals of your handset, which inform you of different actions and states.

You can configure the following advisory tones independently:

- **Keypad Tone:** plays when you press any key on the keypad.
- **Touch Tone:** plays when you tap the keys (except the touch keypad).
- **Confirmation:** plays when a setting is changed or the handset is placed in the charger cradle.
- **Low Battery:** plays when the battery's remaining capacity is low and the handset needs charging.

**Note:** If the silent mode is activated, the advisory tones will not play, but you can still see the alert of low battery on the phone screen.

### Procedure

- 1.** Navigate to **OK > Settings > Audio > Advisory Tones**.  
On the CP930W/DD phone, navigate to **Menu > Settings > Basic Settings > Sound > Advisory Tones**.
- 2.** Select the desired value from the **Keypad Tone** field.
- 3.** On the CP930W, select the desired value from the **Touch Tone** field.
- 4.** Select the desired value from the **Confirmation** field.
- 5.** Select the desired value from the **Low Battery** field.
- 6.** Select **Save**.

# Maintaining Your Phone

When your phone cannot operate properly, you need to investigate or troubleshoot issues along with other tasks that your administrator may ask you to perform.

## Topics

[Investigating Warnings](#)

[Resetting the Handset](#)

## Investigating Warnings

When the default password is used on the phone, you can view the warning details about the issue from **Status** screen.

### Procedure

1. Navigate to **OK > Status > DM**.

On the CP930W/DD phone, navigate to **Menu > Status > DM (DM Status)**.

*The warning detail is displayed in the **Warning** field.*

## Resetting the Handset

You can reset individual settings that you have configured on the handset.

Except the settings of directory, call history, voice mail, and the handset registration, the handset will reset all customized settings to factory after the resetting.

### Procedure

1. Navigate to **OK > Settings > System Settings > Handset Reset**.

On the CP930W/DD phone, navigate to **Menu > Settings > Advanced Settings (default PIN: 0000) > Handset Reset**.

*The phone prompts whether to reset the handset.*

2. Select **Yes**.




# Appendix

## Topics

[Appendix A- Menu Structure](#)


[Appendix B - Input Modes and Characters on W56H/W53H](#)

## Appendix A- Menu Structure For W56H/W53H

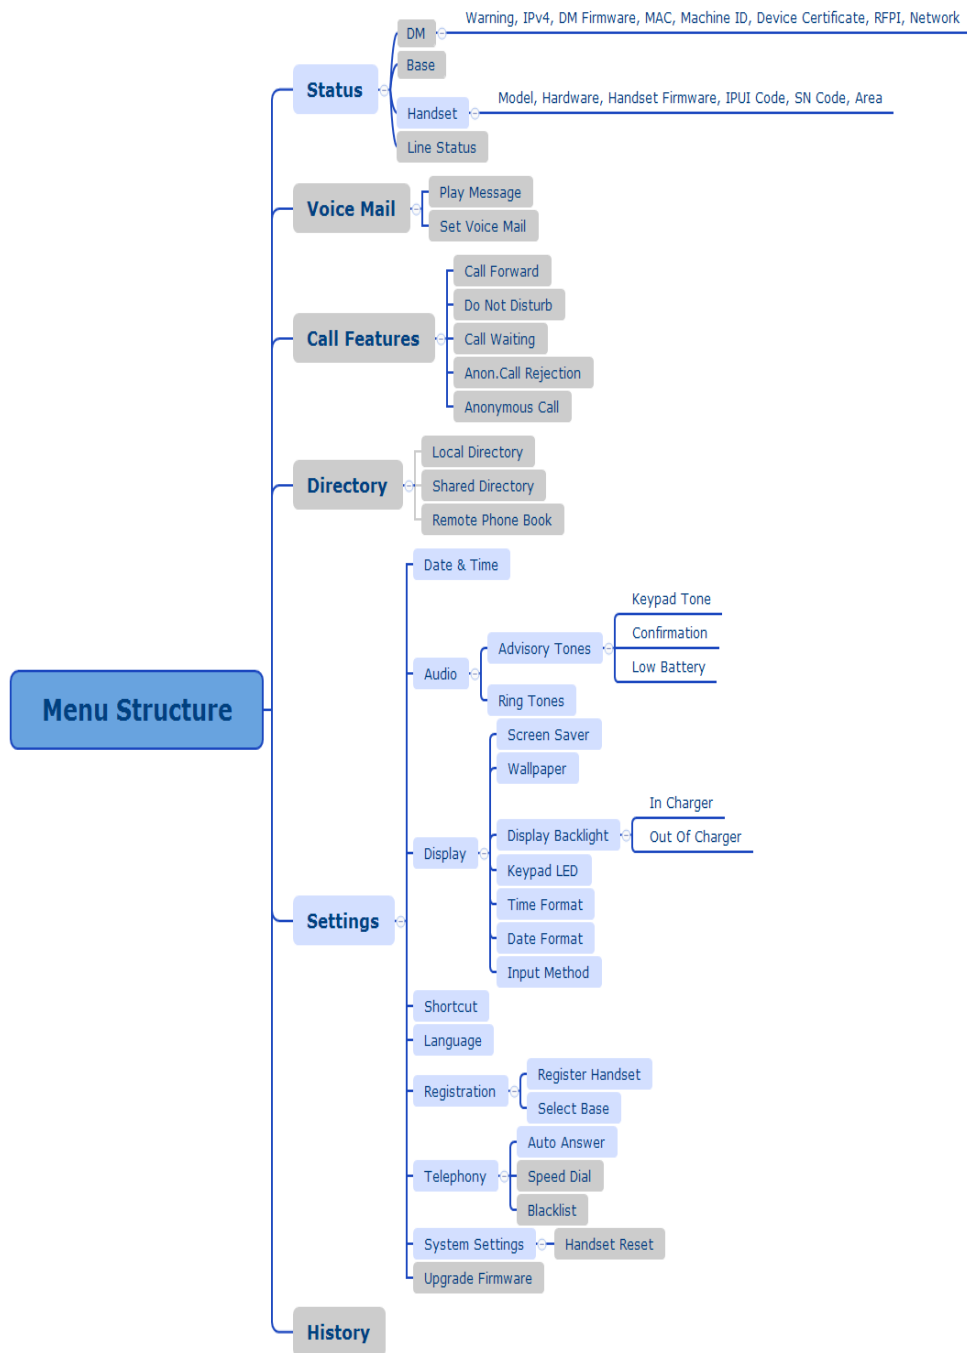


**Note:** The menus in the gray box are not available when the handset is not registered to a base station.

For CP930W

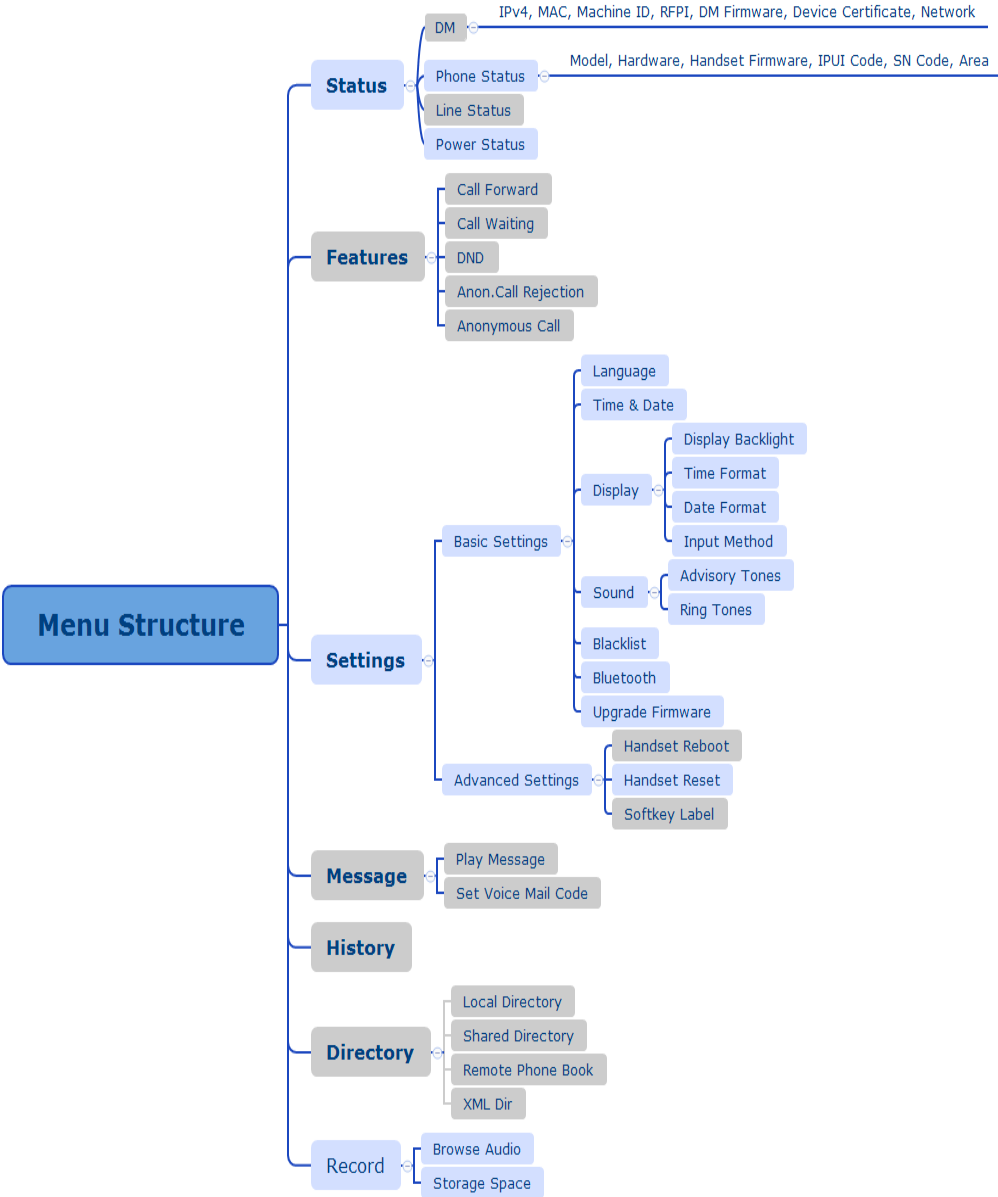

**Note:** The menus in the gray box are not available when the handset is not registered to a base station.

## For DD Phone

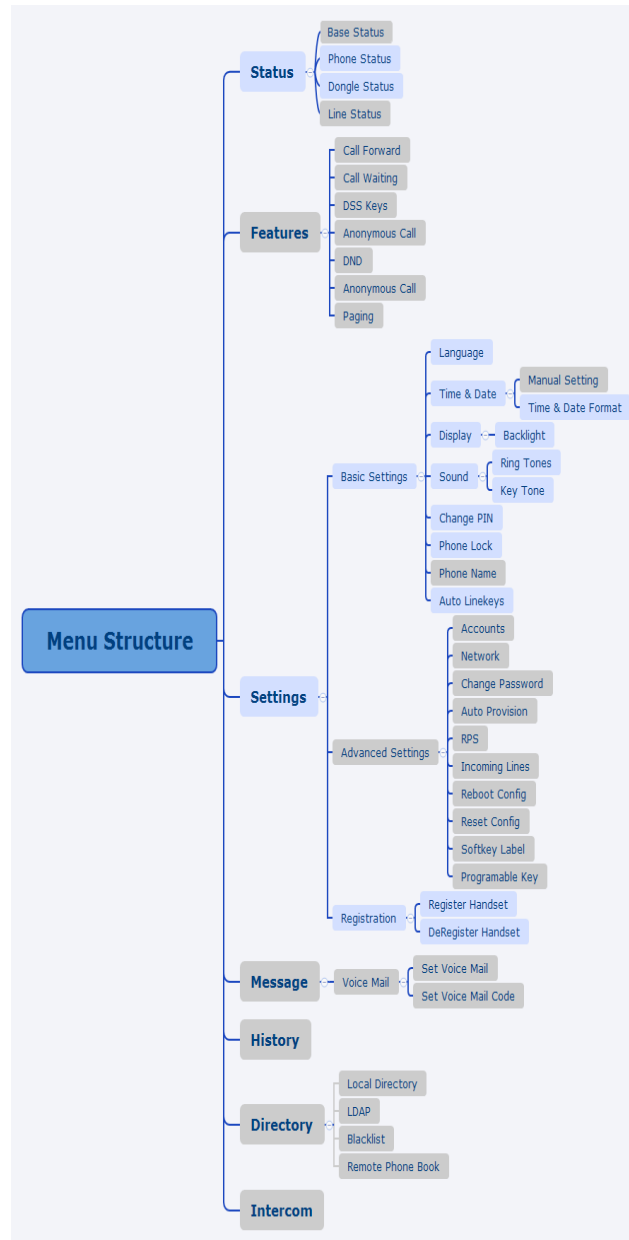

**Note:** The menus in the gray box are not available when the handset is not registered to a base station.

## Appendix B - Input Modes and Characters on W56H/W53H

	Abc (initials in capitals)	123	ABC	abc	ABГ	AÄÅ	aää	SŠŞ	ssš	абв	АБВ	αβκ
<b>1</b>	1	1	1	1	1	1	1	1	1	1	1	1
<b>2</b> <sub>abc</sub>	ABCabc2	2	ABC2	abc2	ABГ2	AÄÅÄÄÄÄÆBC Ç2	aääääääæbc ç2	AÄÅABCČĈ2	aääabcčć2	АБВГ2	абвг2	αβκ
<b>3</b> <sub>def</sub>	DEFdef3	3	DEF3	def3	ΔEZ3	DEÉÉÉËËËF3	deèèèèèèf3	DĎĎĎĎĎF3	dd'eééëëf3	ДЕЖЗ-дежз3	δεζ3	αβκ

