



**VILLANDRY**

INSTRUCTION MANUAL



## Moonphase

Thank you for purchasing this VILLANDRY watch. The following instructions are provided to help familiarize yourself with the proper operation and care of your watch.

To ensure correct use, please read and follow the instructions carefully.

## Movement: RONDA 706.1



## MOONPHASE SETTING

1. Pull the crown out to position 1.
2. Turn the hands forward by turning the crown, until the full moonphase position appears

## SET THE DAY OF THE WEEK AND DATE

1. Turn the crown until the time of 06.00 am appears.  
(= beyond the blocked time period).
2. Using the quick-change correction, set the date with pusher A, and the day of the week of the last full moon with pusher B (see table). Then using the crown, move the hands forwards until the current date appears.

## TIME SETTING

1. Pull the crown out to position 1.
2. Turn the crown until the current time is displayed (remember the 24-hour cycle).
3. Push crown back into position 0.

Quick-change correction for date:

Press pusher A, until the current date is displayed (remember the blocking period).

Quick-change correction for the day of the week:

Press pusher B, until the current day of the week is displayed (remember the blocking period).

## FULL MOON DATES

	2019	2020	2021	2022	2023	2024
JAN	21	10	28	18	07	25
FEB	19	09	27	16	05	24
MAR	21	09	28	18	05	24
APR	19	08	27	16	06	24
MAY	18	07	26	16	05	23
JUN	17	05	24	14	04	22
JULY	16	05	24	13	03	21
AUG	15	03	22	12	1/31	19
SEP	14	02	21	10	29	18
OCT	13	01/31	20	09	28	17
NOV	12	30	19	08	27	15
DEC	12	30	19	08	27	15

## PRECAUTIONS AND PREVENTIVE MEASURES

### Temperature

Do not expose your watch to sudden temperature changes (exposure to sunlight followed by immersion in cold water) or extreme temperatures [over 60°C (140°F) or below 0°C (32°F)].

### Magnetic Fields

Do not expose your watch to intense magnetic fields such as loudspeakers, portable telephones, computers, refrigerators, and other electromagnetic appliances.

### Shocks

Avoid thermal or other shocks as it may harm your watch. In the event of a violent shock please contact VILLANDRY.

### Care and Checks

Clean the case and bracelet regularly using a soft cloth to prevent any corrosion caused by perspiration. To clean all water-resistant watches use a toothbrush and soapy water, and then dried with soft cloth.

## Water Resistance

This watch is rated to 10ATM / 100M / 330 FT.

Water resistance of watches is rated based on laboratory pressure tests comparable to a swimmer or diver sitting still at that pressure level. However, many water-based activities involve a lot of movement and other environmental changes. These exceptions to how the watch was rated may challenge or defeat the water protection features of a water-resistant watch. The water resistance of a watch cannot permanently be guaranteed. It may be affected by the aging of gaskets or by accidental shock to the crown.

Never activate the time-setting crown and the pushers while the watch is underwater and make sure that the crown has been pushed/screwed down tightly after every operation. Do not under any circumstances open the watch yourself.

We do not recommend subjecting our watches to hot tub or jacuzzi use.

## International Warranty

VILLANDRY guarantees this watch for a period of TWENTY FOUR (24) MONTHS from the original date of purchase, with the exception of loss, theft, and damages resulting from ill treatment.

Any modification to your watch by the addition of non-original parts, or the substitution of parts with non-original parts will void your warranty.