

# P30 Shallow Ceiling Plate

KANSA  
LIGHTING

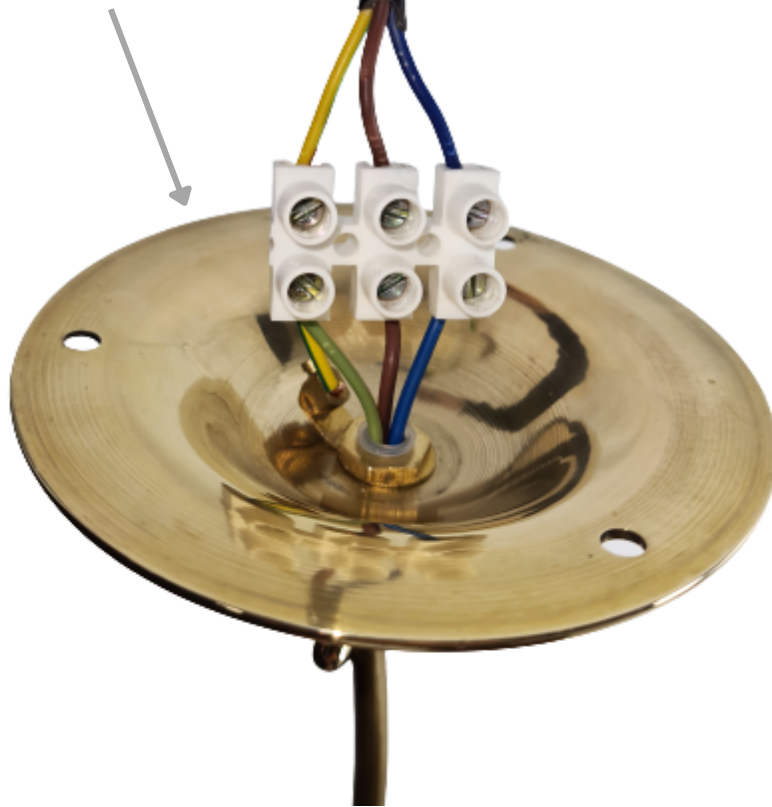


Figure 1

## FITTING INSTRUCTIONS WITH P30 – NO CROSSBAR

- ❖ 1. This fitting should only be connected by a competent person, if in any doubt please employ a qualified electrician.
- ❖ 2. Switch off the electricity at the mains.
- ❖ 3. Remove the existing ceiling rose from the ceiling.
- ❖ 4. Thread the cable through the new ceiling plate then make the appropriate terminal connections using a connecting block (not supplied). Refer to figure 1.
- ❖ 5. When all the connections have been completed, lift the ceiling plate to the ceiling and secure it with the side screws. The screws used in the previous rose may be suitable. Plugs will need to be used if fixing to concrete or masonry.
- ❖ NB. We do not supply screws as the type and length of screw required is dependent upon your type of ceiling or connector blocks. If you have difficulty, we may be able to supply screws with the appropriate coloured heads depending upon your specification and the material of your ceiling.
- ❖ 6. Only use LED lamps with these types of fittings to ensure lamps do not overheat (see the label on the lamp itself for details).
- ❖ 7. To clean, use a dry, soft cloth, a glass cleaner may need to be used for more stubborn marks on the glass. Do not use abrasive cleaning agents on the metalwork.