

# REPLACEMENT PARTS LIST

## K & F Series

Two-Stage Condensing and Non-Condensing Furnaces  
with Fixed Speed and Variable Speed Blowers

NON-CONDENSING GAS  
FURNACES (80%+ AFUE)



**\*G7TA & \*G7TA-1  
Upflow / Horizontal Furnace**



**\*G7TK & \*G7TK-1  
Downflow Furnace**

CONDENSING GAS FURNACES  
(95.1% & 96% AFUE)



**\*G7TC & \*G7TC-1 Upflow / Horizontal Furnace  
and \*G7TE-1 Upflow Only Furnace**



**\*G7TL, \*G7TL-1, & \*G7TN-1  
Downflow Furnace**

<b>80+ AFUE</b>	*G7TA Upflow / Horizontal, Fixed Speed - Replacement Parts List.....	2
	*G7TA Upflow / Horizontal, Variable Speed - Replacement Parts List.....	3
	*G7TK Downflow, Fixed Speed - Replacement Parts List.....	4
	*G7TK Downflow, Variable Speed - Replacement Parts List.....	5
	*G7TA-1 Upflow / Horizontal, Fixed Speed - Replacement Parts List.....	6
	*G7TA-1 Upflow / Horizontal, Variable Speed - Replacement Parts List.....	7
	*G7TK-1 Downflow, Fixed Speed - Replacement Parts List.....	8
	*G7TK-1 Downflow, Variable Speed - Replacement Parts List.....	9
	*G7TA / *G7TA-1 Upflow / Horizontal - Component Location.....	10
	*G7TK / *G7TK-1 Downflow - Component Location.....	11
	<b>95.1% AFUE</b>	G7TC Upflow / Horizontal, Fixed Speed - Replacement Parts List.....
*G7TC Upflow / Horizontal, Variable Speed - Replacement Parts List.....		13
*G7TL Downflow, Fixed Speed - Replacement Parts List.....		14
*G7TL Downflow, Variable Speed - Replacement Parts List.....		15
*G7TC-1 Upflow / Horizontal, Fixed Speed - Replacement Parts List.....		16
*G7TC-1 Upflow / Horizontal, Variable Speed - Replacement Parts List.....		17
*G7TL-1 Downflow, Fixed Speed - Replacement Parts List.....		18
*G7TL-1 Downflow, Variable Speed - Replacement Parts List.....		19
*G7TC / *G7TC-1 Upflow / Horizontal - Component Location.....		20
*G7TL / *G7TL-1 Downflow - Component Location.....		21
<b>96% AFUE</b>	*G7TE-1 Upflow, Fixed Speed - Replacement Parts List.....	22
	*G7TE-1 Upflow, Variable Speed - Replacement Parts List.....	23
	*G7TN-1 Downflow, Fixed Speed - Replacement Parts List.....	24
	*G7TN-1 Downflow, Variable Speed - Replacement Parts List.....	25
	*G7TE-1 Upflow Only - Component Location.....	26
*G7TN-1 Downflow - Component Location.....	27	

\*Model description may be prefixed with an alphanumeric character

DESCRIPTION	060-23A	080-24B	100-24B	100-35C	120-35C	140-45D
Blower Assembly	904872	904873	904955	904874	904874	904875
Blower Control Board	920920	920920	920920	920920	920920	920920
Blower Housing	297200R	297207R	297207R	297209R	297209R	297209R
Blower Limit Switch	626581R	626581R	626581R	626581R	626581R	626581R
Blower Motor	921650	921650	921651	921651	921651	921652
Blower Motor Choke	Not Used	Not Used	Not Used	622340R	622340R	622340R
Blower Wheel	667375R	667374R	667374R	667280R	667280R	667280R
Burner Assembly	904834	904835	904836	904836	904837	904833
Burner Tube Manifold	664228R	664229R	664230R	664230R	664231R	664232R
Collector Pan (w Gasket)	904812	904813	904814	904815	904981	904982
Door Set	904767	904768	904768	904769	904769	904770
Door Switch	632125R	632125R	632125R	632125R	632125R	632125R
Flame Sensor	632484R	632484R	632484R	632484R	632484R	632484R
Furnace Control Board	920916	920916	920916	920916	920916	920916
Fuse (Not Shown)	632261R	632261R	632261R	632261R	632261R	632261R
Gas Valve	624652R	624652R	624652R	624652R	624652R	624652R
Heat Exchanger	904779	904780	904781	904783	904868	904785
High Temp Hose (Not Shown)	263967R	263967R	263967R	263967R	263967R	263967R
Ignitor Assembly (Nitride)	1017743S	1017743S	1017743S	1017743S	1017743S	1017743S
Ignitor Assembly (Units produced before 01/01/2018)	1025459R	1025460R	1025461R	1025461R	1025462R	1025463R
Ignitor Bracket	299261R	299261R	299261R	299261R	299261R	299261R
Inducer Gasket (Not Shown)	689988R	689988R	689988R	689988R	689988R	689988R
Inducer Motor	904797	904797	904797	904797	904797	904797
Inshot Burner	661134R	661134R	661134R	661134R	661134R	661134R
Main Air Limit Switch	626567R	626566R	626566R	626562R	626566R	626566R
Motor Mount Kit	904867	904907	904907	904907	904907	904951
Orifice (Natural Gas)	661045R	661045R	661045R	661045R	661045R	661045R
Pressure Switches	632514R	632514R	632514R	632515R	632515R	632515R
Roll-Out Limit Switch	626559R	626560R	626560R	626560R	626560R	626559R
Set of Wires (Not Shown)	M0036011R	M0036011R	M0036011R	M0036013R	M0036013R	M0036013R
Top Panel	295911R	295912R	295912R	295913R	295913R	295914R
Transformer	622341R	622341R	622341R	622341R	622341R	622341R

Please specify the correct Model No., Serial No, and part number(s) when ordering parts from the nearest authorized dealer or service center.

**FOR COMPONENT LOCATIONS, SEE PAGE 10.**

DESCRIPTION	060-VA	080-VB	100-VC	120-VC	140-VD
Blower Assembly	904876	904877	904878	904878	904879
Blower Control Board (For units produced prior to 8/31/2012)	920918	920918	920918	920918	920918
Blower Control Board (For units produced on or after 9/1/2012)	922016	922016	922016	922016	922016
Blower Housing	297200R	297207R	297209R	297209R	297209R
Blower Limit Switch	626581R	626581R	626581R	626581R	626581R
Blower Motor	921650	921650	921651	921651	921652
Blower Motor Choke	Not Used	Not Used	622340R	622340R	622340R
Blower Wheel	667375R	667374R	667280R	667280R	667280R
Burner Assembly	904834	904835	904836	904837	904833
Burner Tube Manifold	664228R	664229R	664230R	664231R	664232R
Collector Pan (w Gasket)	904812	904813	904815	904981	904982
Door Set	904767	904768	904769	904769	904770
Door Switch	632125R	632125R	632125R	632125R	632125R
Flame Sensor	632484R	632484R	632484R	632484R	632484R
Furnace Control Board	920916	920916	920916	920916	920916
Fuse (Not Shown)	632261R	632261R	632261R	632261R	632261R
Gas Valve	624652R	624652R	624652R	624652R	624652R
Heat Exchanger	904779	904780	904783	904868	904785
High Temp Hose (Not Shown)	263967R	263967R	263967R	263967R	263967R
Ignitor Assembly (Nitride)	1017743S	1017743S	1017743S	1017743S	1017743S
Ignitor Assembly (Units produced before 01/01/2018)	1025459R	1025460R	1025461R	1025462R	1025463R
Ignitor Bracket	299261R	299261R	299261R	299261R	299261R
Inducer Motor	904797	904797	904797	904797	904797
Inducer Gasket (Not Shown)	689988R	689988R	689988R	689988R	689988R
Inshot Burner	661134R	661134R	661134R	661134R	661134R
Main Air Limit Switch	626567R	626566R	626562R	626566R	626566R
Motor Mount Kit	904867	904907	904907	904907	904951
Orifice (Natural Gas)	661045R	661045R	661045R	661045R	661045R
Pressure Switches	632514R	632514R	632515R	632515R	632515R
Roll-Out Limit Switch	626559R	626560R	626560R	626560R	626559R
Set of Wires (Not Shown)	M0036011R	M0036011R	M0036013R	M0036013R	M0036013R
Top Panel	295911R	295912R	295913R	295913R	295914R
Transformer	622341R	622341R	622341R	622341R	622341R

Please specify the correct Model No., Serial No, and part number(s) when ordering parts from the nearest authorized dealer or service center.

**FOR COMPONENT LOCATIONS, SEE PAGE 10.**

DESCRIPTION	060-23A	080-24B	100-24B	100-35C	120-35C	140-45D
Blower Assembly	904872	904873	904873	904874	904874	904875
Blower Control Board	920920	920920	920920	920920	920920	920920
Blower Housing	297200R	297207R	297207R	297204R	297204R	297209R
Blower Limit Switch	626581R	626581R	626581R	626581R	626581R	626581R
Blower Motor	921650	921650	921651	921651	921651	921652
Blower Motor Choke	Not Used	Not Used	Not Used	622340R	622340R	622340R
Blower Wheel	667375R	667374R	667374R	667280R	667280R	667280R
Burner Assembly	904834	904835	904836	904836	904837	904833
Burner Tube Manifold	664228R	664229R	664230R	664230R	664231R	664232R
Collector Pan (w Gasket)	904903	904813	904905	904983	904981	904984
Combustion Tube	299291R	299291R	299291R	299291R	299291R	299291R
Door Set (Not Shown)	904767	904768	904768	904769	904769	904770
Door Switch	632125R	632125R	632125R	632125R	632125R	632125R
Flame Sensor	632484R	632484R	632484R	632484R	632484R	632484R
Furnace Control Board	920916	920916	920916	920916	920916	920916
Fuse (Not Shown)	632261R	632261R	632261R	632261R	632261R	632261R
Gas Valve	624652R	624652R	624652R	624652R	624652R	624652R
Heat Exchanger	904779	904780	904781	904783	904868	904785
High Temp Hose (Not Shown)	263967R	263967R	263967R	263967R	263967R	263967R
Ignitor Assembly (Nitride)	1017743S	1017743S	1017743S	1017743S	1017743S	1017743S
Ignitor Assembly (Units produced before 01/01/2018)	1025459R	1025460R	1025461R	1025461R	1025462R	1025463R
Ignitor Bracket	299261R	299261R	299261R	299261R	299261R	299261R
Inducer Gasket (Not Shown)	689988R	689988R	689988R	689988R	689988R	689988R
Inducer Motor	904797	904797	904797	904797	904797	904797
Inshot Burner	661134R	661134R	661134R	661134R	661134R	661134R
Main Air Limit Switch	626565R	626567R	626567R	626565R	626564R	626567R
Motor Mount Kit	904867	904907	904907	904907	904907	904951
Orifice (Natural Gas)	661045R	661045R	661045R	661045R	661045R	661045R
Pressure Switches	632514R	632515R	632515R	632515R	632515R	632523R
Roll-Out Limit Switch	626559R	626560R	626559R	626559R	626560R	626560R
Set of Wires (Not Shown)	M0036036R	M0036012R	M0036012R	M0036014R	M0036014R	M0036014R
Top Panel	295911R	295912R	295912R	295913R	295913R	295914R
Transformer	622341R	622341R	622341R	622341R	622341R	622341R

Please specify the correct Model No., Serial No, and part number(s) when ordering parts from the nearest authorized dealer or service center.

**FOR COMPONENT LOCATIONS, SEE PAGE 11.**

DESCRIPTION	060-VA	080-VB	100-VC	120-VC
Blower Assembly	904876	904877	904878	904878
Blower Control Board (For units produced prior to 8/31/2012)	920918	920918	920918	920918
Blower Control Board (For units produced on or after 9/1/2012)	922016	922016	922016	922016
Blower Housing	297200R	297207R	297204R	297204R
Blower Limit Switch	626581R	626581R	626581R	626581R
Blower Motor	921650	921650	921651	921651
Blower Motor Choke	Not Used	Not Used	622340R	622340R
Blower Wheel	667375R	667374R	667280R	667280R
Burner Assembly	904834	904835	904836	904837
Burner Tube Manifold	664228R	664229R	664230R	664231R
Collector Pan (w Gasket)	904903	904813	904983	904981
Combustion Tube	299291R	299291R	299291R	299291R
Door Set (Not Shown)	904767	904768	904769	904769
Door Switch	632125R	632125R	632125R	632125R
Flame Sensor	632484R	632484R	632484R	632484R
Furnace Control Board	920916	920916	920916	920916
Fuse (Not Shown)	632261R	632261R	632261R	632261R
Gas Valve	624652R	624652R	624652R	624652R
Heat Exchanger	904779	904780	904783	904868
High Temp Hose (Not Shown)	263967R	263967R	263967R	263967R
Ignitor Assembly (Nitride)	1017743S	1017743S	1017743S	1017743S
Ignitor Assembly (Units produced before 01/01/2018)	1025459R	1025460R	1025461R	1025462R
Ignitor Bracket	299261R	299261R	299261R	299261R
Inducer Gasket (Not Shown)	689988R	689988R	689988R	689988R
Inducer Motor	904797	904797	904797	904797
Inshot Burner	661134R	661134R	661134R	661134R
Main Air Limit Switch	626565R	626567R	626565R	626564R
Motor Mount Kit	904867	904907	904907	904907
Orifice (Natural Gas)	661045R	661045R	661045R	661045R
Pressure Switches	632514R	632515R	632515R	632515R
Roll-Out Limit Switch	626559R	626560R	626559R	626560R
Set of Wires (Not Shown)	M0036037R	M0036019R	M0036020R	M0036020R
Top Panel	295911R	295912R	295913R	295913R
Transformer	622341R	622341R	622341R	622341R

Please specify the correct Model No., Serial No, and part number(s) when ordering parts from the nearest authorized dealer or service center.

[FOR COMPONENT LOCATIONS, SEE PAGE 11.](#)

DESCRIPTION	060-23A1	080-24B1	100-24B1	100-35C1	120-35C1	140-45D1
Blower Assembly	904872	904873	904955	904874	904874	904875
Blower Control Board	920920	920920	920920	920920	920920	920920
Blower Housing	297200R	297207R	297207R	297209R	297209R	297209R
Blower Limit Switch	626581R	626581R	626581R	626581R	626581R	626581R
Blower Motor	921650	921650	921651	921651	921651	921652
Blower Motor Choke	Not Used	Not Used	Not Used	622340R	622340R	622340R
Blower Wheel	667375R	667374R	667374R	667280R	667280R	667280R
Burner Assembly	904834	904835	904836	904836	904837	904833
Burner Tube Manifold	664228R	664229R	664230R	664230R	664231R	664232R
Collector Pan (w Gasket)	904903	904905	904905	904815	904816	904817
Door Set	904767	904768	904768	904769	904769	904770
Door Switch	632125R	632125R	632125R	632125R	632125R	632125R
Flame Sensor	632484R	632484R	632484R	632484R	632484R	632484R
Furnace Control Board	920916	920916	920916	920916	920916	920916
Fuse	632261R	632261R	632261R	632261R	632261R	632261R
Gas Valve	624652R	624652R	624652R	624652R	624652R	624652R
Heat Exchanger	904779	904780	904781	904783	904868	904785
High Temp Hose (Not Shown)	263967R	263967R	263967R	263967R	263967R	263967R
Ignitor Assembly (Nitride)	1017743S	1017743S	1017743S	1017743S	1017743S	1017743S
Ignitor Assembly (Units produced before 01/01/2018)	1025459R	1025460R	1025461R	1025461R	1025462R	1025463R
Ignitor Bracket	299261R	299261R	299261R	299261R	299261R	299261R
Inducer Gasket (Not Shown)	689988R	689988R	689988R	689988R	689988R	689988R
Inducer Motor	904978	904978	904978	904978	904978	904979
Inshot Burner	661134R	661134R	661134R	661134R	661134R	661134R
Main Air Limit Switch	626567R	626566R	626566R	626562R	626566R	626566R
Motor Mount Kit	904867	904907	904907	904907	904907	904951
Orifice (Natural Gas)	661045R	661045R	661045R	661045R	661045R	661045R
Pressure Switches	632515R	632595R	632614R	632566R	632566R	632516R
Roll-Out Limit Switch	626559R	626560R	626560R	626560R	626560R	626559R
Set of Wires (Not Shown)	M0036011R	M0036011R	M0036011R	M0036013R	M0036013R	M0036013R
Top Panel	295911R	295912R	295912R	295913R	295913R	295914R
Transformer	622341R	622341R	622341R	622341R	622341R	622341R

Please specify the correct Model No., Serial No, and part number(s) when ordering parts from the nearest authorized dealer or service center.

**FOR COMPONENT LOCATIONS, SEE PAGE 10.**

DESCRIPTION	060-VA1	080-VB1	100-VC1	120-VC1	140-VD1
Blower Assembly	904876	904877	904878	904878	904879
Blower Control Board (For units produced prior to 8/31/2012)	920918	920918	920918	920918	920918
Blower Control Board (For units produced on or after 9/1/2012)	922016	922016	922016	922016	922016
Blower Housing	297200R	297207R	297209R	297209R	297209R
Blower Limit Switch	626581R	626581R	626581R	626581R	626581R
Blower Motor	921650	921650	921651	921651	921652
Blower Motor Choke	Not Used	Not Used	622340R	622340R	622340R
Blower Wheel	667375R	667374R	667280R	667280R	667280R
Burner Assembly	904834	904835	904836	904837	904833
Burner Tube Manifold	664228R	664229R	664230R	664231R	664232R
Collector Pan (w Gasket)	904903	904905	904815	904816	904817
Door Set	904767	904768	904769	904769	904770
Door Switch	632125R	632125R	632125R	632125R	632125R
Flame Sensor	632484R	632484R	632484R	632484R	632484R
Furnace Control Board	920916	920916	920916	920916	920916
Fuse	632261R	632261R	632261R	632261R	632261R
Gas Valve	624652R	624652R	624652R	624652R	624652R
Heat Exchanger	904779	904780	904783	904868	904785
High Temp Hose (Not Shown)	263967R	263967R	263967R	263967R	263967R
Ignitor Assembly (Nitride)	1017743S	1017743S	1017743S	1017743S	1017743S
Ignitor Assembly (Units produced before 01/01/2018)	1025459R	1025460R	1025461R	1025462R	1025463R
Ignitor Bracket	299261R	299261R	299261R	299261R	299261R
Inducer Gasket (Not Shown)	689988R	689988R	689988R	689988R	689988R
Inducer Motor	904978	904978	904978	904978	904979
Inshot Burner	661134R	661134R	661134R	661134R	661134R
Main Air Limit Switch	626567R	626566R	626562R	626566R	626566R
Motor Mount Kit	904867	904907	904907	904907	904951
Orifice (Natural Gas)	661045R	661045R	661045R	661045R	661045R
Pressure Switches	632515R	632595R	632566R	632566R	632516R
Roll-Out Limit Switch	626559R	626560R	626560R	626560R	626559R
Set of Wires (Not Shown)	M0036011R	M0036011R	M0036013R	M0036013R	M0036013R
Top Panel	295911R	295912R	295913R	295913R	295914R
Transformer	622341R	622341R	622341R	622341R	622341R

Please specify the correct Model No., Serial No, and part number(s) when ordering parts from the nearest authorized dealer or service center.

[FOR COMPONENT LOCATIONS, SEE PAGE 10.](#)

DESCRIPTION	060-23A1	080-24B1	100-35C1	120-35C1	140-45D1
Blower Assembly	904872	904873	904874	904874	904875
Blower Control Board	920920	920920	920920	920920	920920
Blower Housing	297200R	297207R	297204R	297204R	297209R
Blower Limit Switch	626581R	626581R	626581R	626581R	626581R
Blower Motor	921650	921650	921651	921651	921652
Blower Motor Choke	Not Used	Not Used	622340R	622340R	622340R
Blower Wheel	667375R	667374R	667280R	667280R	667280R
Burner Assembly	904834	904835	904836	904837	904833
Burner Tube Manifold	664228R	664229R	664230R	664231R	664232R
Collector Pan (w Gasket)	904903	904977	904904	904816	904906
Combustion Tube	299291R	299291R	299291R	299291R	299291R
Door Set	904767	904768	904769	904769	904770
Door Switch	632125R	632125R	632125R	632125R	632125R
Flame Sensor	632484R	632484R	632484R	632484R	632484R
Furnace Control Board	920916	920916	920916	920916	920916
Fuse	632261R	632261R	632261R	632261R	632261R
Gas Valve	624652R	624652R	624652R	624652R	624652R
Heat Exchanger	904779	904780	904783	904868	904785
High Temp Hose (Not Shown)	263967R	263967R	263967R	263967R	263967R
Ignitor Assembly (Nitride)	1017743S	1017743S	1017743S	1017743S	1017743S
Ignitor Assembly (Units produced before 01/01/2018)	1025459R	1025460R	1025461R	1025462R	1025463R
Ignitor Bracket	299261R	299261R	299261R	299261R	299261R
Inducer Gasket (Not Shown)	689988R	689988R	689988R	689988R	689988R
Inducer Motor	904978	904978	904978	904978	904979
Inshot Burner	661134R	661134R	661134R	661134R	661134R
Main Air Limit	626565R	626562R	626565R	626564R	626565R
Motor Mount Kit	904867	904907	904907	904907	904951
Orifice (Natural Gas)	661045R	661045R	661045R	661045R	661045R
Pressure Switches	632566R	632614R	632566R	632595R	632516R
Roll-Out Limit Switch	626559R	626560R	626559R	626560R	626560R
Set of Wires (Not Shown)	M0036036R	M0036012R	M0036014R	M0036014R	M0036014R
Top Panel	295911R	295912R	295913R	295913R	295914R
Transformer	622341R	622341R	622341R	622341R	622341R

Please specify the correct Model No., Serial No, and part number(s) when ordering parts from the nearest authorized dealer or service center.

**FOR COMPONENT LOCATIONS, SEE PAGE 11.**

 


DESCRIPTION	060-VA1	080-VB1	100-VC1	120-VC1
Blower Assembly	904876	904877	904878	904878
Blower Control Board (For units produced prior to 8/31/2012)	920918	920918	920918	920918
Blower Control Board (For units produced on or after 9/1/2012)	922016	922016	922016	922016
Blower Housing	297200R	297207R	297204R	297204R
Blower Limit Switch	626581R	626581R	626581R	626581R
Blower Motor	921650	921650	921651	921651
Blower Motor Choke	Not Used	Not Used	622340R	622340R
Blower Wheel	667375R	667374R	667280R	667280R
Burner Assembly	904834	904835	904836	904837
Burner Tube Manifold	664228R	664229R	664230R	664231R
Collector Pan (w Gasket)	904903	904977	904904	904816
Combustion Tube	299291R	299291R	299291R	299291R
Door Set	904767	904768	904769	904769
Door Switch	632125R	632125R	632125R	632125R
Flame Sensor	632484R	632484R	632484R	632484R
Furnace Control Board	920916	920916	920916	920916
Fuse	632261R	632261R	632261R	632261R
Gas Valve	624652R	624652R	624652R	624652R
Heat Exchanger	904779	904780	904783	904868
High Temp Hose (Not Shown)	263967R	263967R	263967R	263967R
Ignitor Assembly (Nitride)	1017743S	1017743S	1017743S	1017743S
Ignitor Assembly (Units produced before 01/01/2018)	1025459R	1025460R	1025461R	1025463R
Ignitor Bracket	299261R	299261R	299261R	299261R
Inducer Gasket (Not Shown)	689988R	689988R	689988R	689988R
Inducer Motor	904978	904978	904978	904978
Inshot Burner	661134R	661134R	661134R	661134R
Main Air Limit	626565R	626562R	626565R	626564R
Motor Mount Kit	904867	904907	904907	904907
Orifice (Natural Gas)	661045R	661045R	661045R	661045R
Pressure Switches	632566R	632614R	632566R	632595R
Roll-Out Limit Switch	626559R	626560R	626559R	626560R
Set of Wires (Not Shown)	M0036037R	M0036019R	M0036020R	M0036020R
Top Panel	295911R	295912R	295913R	295913R
Transformer	622341R	622341R	622341R	622341R


Please specify the correct Model No., Serial No, and part number(s) when ordering parts from the nearest authorized dealer or service center.

[FOR COMPONENT LOCATIONS, SEE PAGE 11.](#)

# \*G7TA / \*G7TA-1 UPFLOW / HORIZONTAL - COMPONENT LOCATION

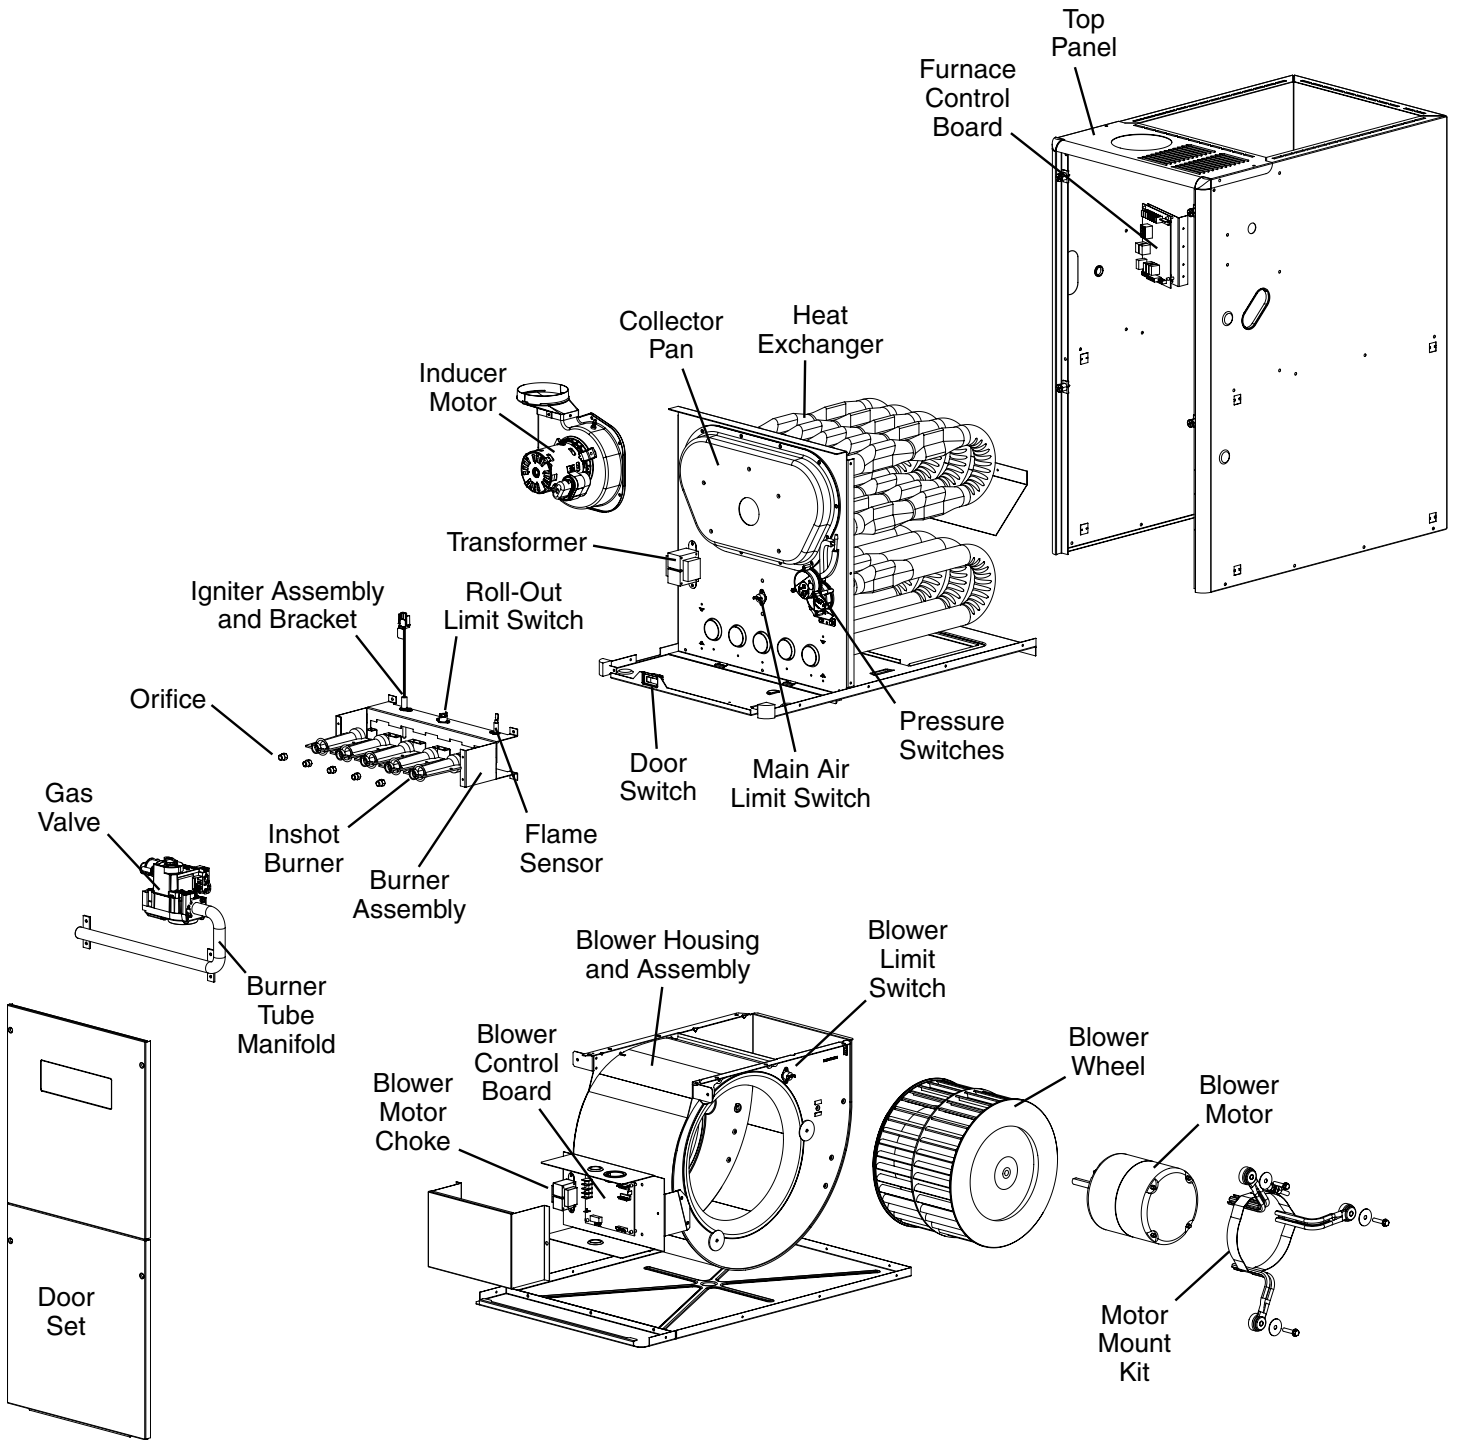

# \*G7TK / \*G7TK-1 DOWNFLOW - COMPONENT LOCATION

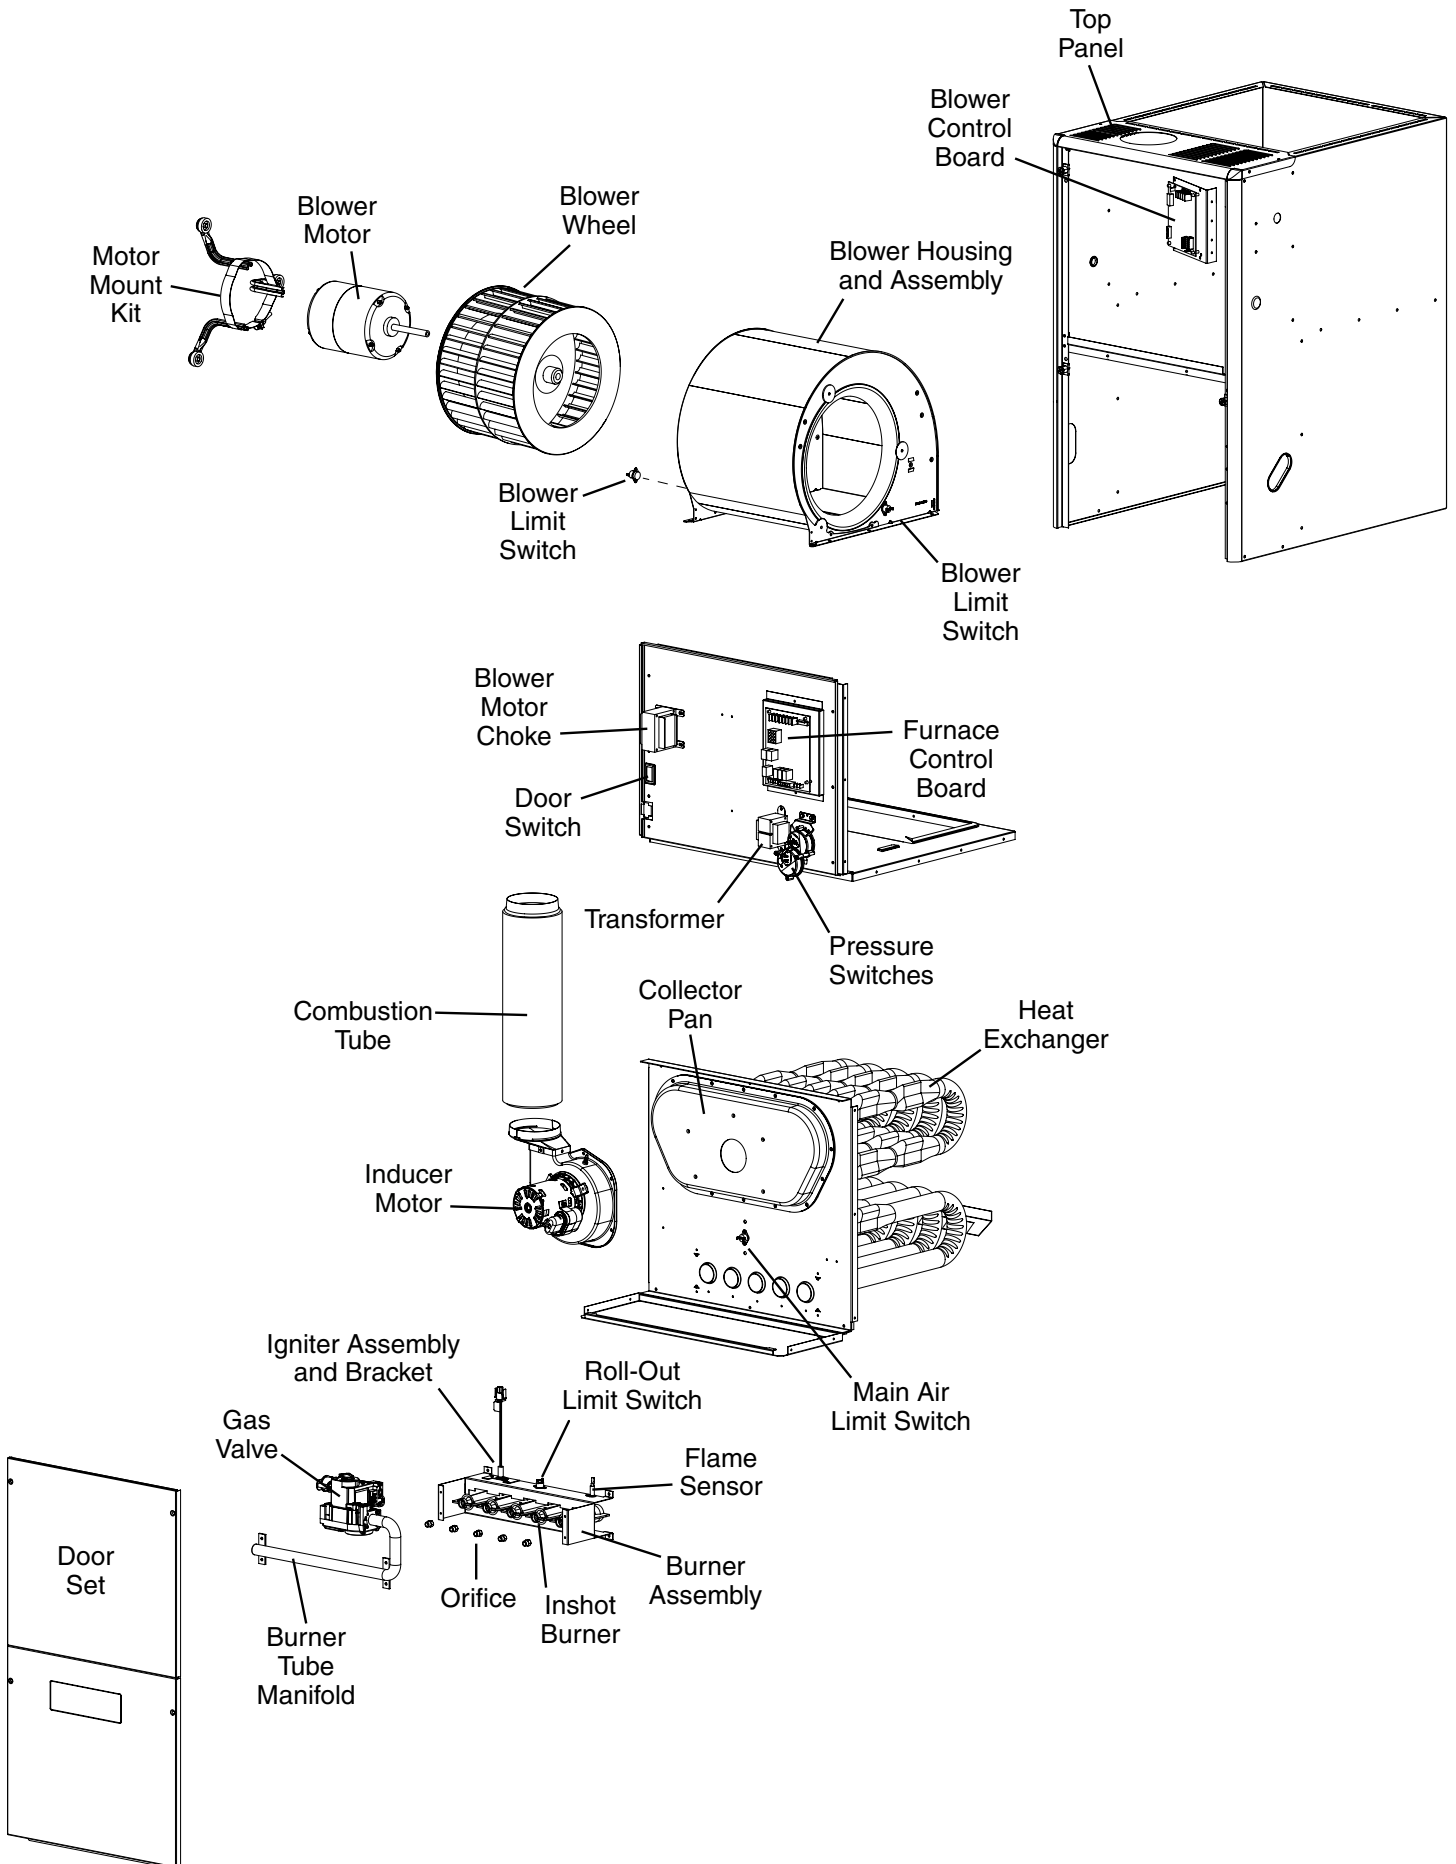 

DESCRIPTION	060-24B & 060-24B-1	080-35C & 080-35C-1	100-35C & 100-35C-1	120-45D & 120-45D-1
Blower Assembly	904873	904874	904874	904875
Blower Control Board	920920	920920	920920	920920
Blower Housing	297207R	297209R	297209R	297209R
Blower Limit Switch	626581R	626581R	626581R	626581R
Blower Motor	921650	921651	921651	921652
Blower Motor Choke	Not Used	622340R	622340R	622340R
Blower Wheel	667374R	667280R	667280R	667280R
Burner Assembly	904829	904830	904831	904832
Burner Tube Manifold	664473R	664243R	664244R	664245R
Door Set	904768	904769	904769	904770
Door Switch	632693R	632693R	632693R	632693R
Drain Tube (Hard "J") (Not Shown)	663706R	663706R	663706R	663706R
Drain Tube (Soft, "J" 30") (Not Shown)	663707R	663707R	663707R	663707R
Drain Tube (Soft, 23") (Not Shown)	664434R	664434R	664434R	664434R
Finish Flange	664633R	664633R	664633R	664633R
Flame Sensor	632484R	632484R	632484R	632484R
Furnace Control Board	920916	920916	920916	920916
Fuse	632261R	632261R	632261R	632261R
Gas Valve	624652R	624652R	624652R	624652R
Heat Exchanger	904792	904793	904794	904795
High Temp Hose (Not Shown)	263967R	263967R	263967R	263967R
Ignitor Assembly (Nitride)	1017743S	1017743S	1017743S	1017743S
Ignitor Bracket (Not Shown)	299261R	299261R	299261R	299261R
Inducer Limit Switch	626599R	626599R	626599R	626599R
Inducer Motor	904799	904799	904799	904799
Inducer Orifice	669719R	669713R	669716R	Not Used
In-Line Drain Assembly	664435R	664435R	664435R	664435R
Inshot Burner	661128R	661128R	661128R	661128R
Main Air Limit	626566R	626567R	626561R	626561R
Motor Mount Kit	904907	904907	904907	904951
Orifice (Natural Gas)	661045R	661045R	661045R	661045R
Outlet Header Box	904802	904803	904803	904804
Pressure Switches (Condensate)	632550R	632547R	632547R	632554R
Pressure Switches (Inducer)	632515R	632546R	632548R	632616R
Roll-Out Limit Switch	626560R	626560R	626560R	626559R
Set of Wires (Not Shown)	M0036015R	M0036017	M0036017	M0036017
Top Panel	2A9512R	2A9513R	2A9513R	2A9514R
Transformer	622341R	622341R	622341R	622341R
Tube (Soft, 6.5") (Not Shown)	663727R	663727R	663727R	663727R

Please specify the correct Model No., Serial No., and part number(s) when ordering parts from the nearest authorized dealer or service center.

\*TC models are equipped with FASCO brand inducer motors. \*TC-1 models are equipped with Broad Ocean brand inducer motors.

[FOR COMPONENT LOCATIONS, SEE PAGE 20.](#)

DESCRIPTION	060-VB & 060-VB-1	080-VC & 080-VC-1	100-VC & 100-VC-1	120-VD & 120-VD-1
Blower Assembly	904877	904878	904878	904879
Blower Control Board (For units produced prior to 8/31/2012)	920918	920918	920918	920918
Blower Control Board (For units produced on or after 9/1/2012)	922016	922016	922016	922016
Blower Housing	297207R	297209R	297209R	297209R
Blower Limit Switch	626581R	626581R	626581R	626581R
Blower Motor	921650	921651	921651	921652
Blower Motor Choke	Not Used	622340R	622340R	622340R
Blower Wheel	667374R	667280R	667280R	667280R
Burner Assembly	904829	904830	904831	904832
Burner Tube Manifold	664473R	664243R	664244R	664245R
Door Set	904768	904769	904769	904770
Door Switch	632693R	632693R	632693R	632693R
Drain Tube (Hard "J") (Not Shown)	663706R	663706R	663706R	663706R
Drain Tube (Soft, "J" 30") (Not Shown)	663707R	663707R	663707R	663707R
Drain Tube (Soft, 23") (Not Shown)	664434R	664434R	664434R	664434R
Finish Flange	664633R	664633R	664633R	664633R
Flame Sensor	632484R	632484R	632484R	632484R
Furnace Control Board	920916	920916	920916	920916
Fuse	632261R	632261R	632261R	632261R
Gas Valve	624652R	624652R	624652R	624652R
Heat Exchanger	904792	904793	904794	904795
High Temp Hose (Not Shown)	263967R	263967R	263967R	263967R
Ignitor Assembly (Nitride)	1017743S	1017743S	1017743S	1017743S
Ignitor Bracket	299261R	299261R	299261R	299261R
Inducer Limit Switch	626599R	626599R	626599R	626599R
Inducer Motor	904799	904799	904799	904799
Inducer Orifice	669719R	669713R	669716R	Not Used
In-Line Drain Assembly	664435R	664435R	664435R	664435R
Inshot Burner	661128R	661128R	661128R	661128R
Main Air Limit	626566R	626567R	626561R	626561R
Motor Mount Kit	904907	904907	904907	904951
Orifice (Natural Gas)	661045R	661045R	661045R	661045R
Outlet Header Box	904802	904803	904803	904804
Pressure Switches (Condensate)	632550R	632547R	632547R	632554R
Pressure Switches (Inducer)	632515R	632546R	632548R	632516R
Roll-Out Limit Switch	626560R	626560R	626560R	626559R
Set of Wires (Not Shown)	M0036015R	M0036017	M0036017	M0036017
Top Panel	2A9512R	2A9513R	2A9513R	2A9514R
Transformer	622341R	622341R	622341R	622341R
Tube (Soft, 6.5") (Not Shown)	663727R	663727R	663727R	663727R

Please specify the correct Model No., Serial No, and part number(s) when ordering parts from the nearest authorized dealer or service center.

\*TC models are equipped with FASCO brand inducer motors. \*TC-1 models are equipped with Broad Ocean brand inducer motors.

[FOR COMPONENT LOCATIONS, SEE PAGE 20.](#)

DESCRIPTION	060-24B & 060-24B-1	080-35C & 080-35C-1	100-35C & 100-35C-1	120-45D & 120-45D-1
Blower Assembly	904873	904874	904874	904875
Blower Control Board	920920	920920	920920	920920
Blower Housing	297207R	297209R	297209R	297209R
Blower Limit Switch	626581R	626581R	626581R	626581R
Blower Motor	921650	921651	921651	921652
Blower Motor Choke	Not Used	622340R	622340R	622340R
Blower Wheel	667374R	667280R	667280R	667280R
Burner Assembly	904829	904830	904831	904832
Burner Tube Manifold	664611R	664243R	664244R	664245R
Door Set	904768	904769	904769	904770
Door Switch	632693R	632693R	632693R	632693R
Drain Tube (Hard "J") (Not Shown)	663706R	663706R	663706R	663706R
Drain Tube (Soft, "J" 30") (Not Shown)	663707R	663707R	663707R	663707R
Drain Tube (Soft, 23") (Not Shown)	664434R	664434R	664434R	664434R
Finish Flange	664633R	664633R	664633R	664633R
Flame Sensor	632484R	632484R	632484R	632484R
Furnace Control Board	920916	920916	920916	920916
Fuse	632261R	632261R	632261R	632261R
Gas Valve	624652R	624652R	624652R	624652R
Heat Exchanger	904792	904793	904794	904795
High Temp Hose (Not Shown)	263967R	263967R	263967R	263967R
Ignitor Bracket	299261R	299261R	299261R	299261R
Ignitor Assembly (Nitride)	1017743S	1017743S	1017743S	1017743S
Inducer Limit Switch	626599R	626599R	626599R	626599R
Inducer Motor	904799	904799	904799	904799
Inducer Orifice	669718R	669720R	669735R	669747R
In-Line Drain Assembly	664435R	664435R	664435R	664435R
Inshot Burner	661128R	661128R	661128R	661128R
Main Air Limit Switch	626565R	626561R	626562R	626561R
Motor Mount Kit	904907	904907	904907	904951
Orifice (Natural Gas)	661045R	661045R	661045R	661045R
Outlet Header Box	904802	904803	904803	904804
Pressure Switches (Inducer)	632523R	632546R	632555R	632523R
Roll-Out Limit Switch	626560R	626560R	626560R	626560R
Set of Wires (Not Shown)	M0036016	M0036018	M0036018	M0036018
Top Panel	2B3562R	2B3563R	2B3563R	2B3564R
Transformer	622341R	622341R	622341R	622341R
Tube (Soft, 5.5") (Not Shown)	663727R	663727R	663727R	663727R

Please specify the correct Model No., Serial No., and part number(s) when ordering parts from the nearest authorized dealer or service center.

\*TL models are equipped with FASCO brand inducer motors. \*TL-1 models are equipped with Broad Ocean brand inducer motors.

**FOR COMPONENT LOCATIONS, SEE PAGE 21.**

DESCRIPTION	060-VB & 060-VB-1	080-VC & 080-VC-1	100-VC & 100-VC-1	120-VD & 120-VD-1
Blower Assembly	904877	904878	904878	904879
Blower Control Board (For units produced prior to 8/31/2012)	920918	920918	920918	920918
Blower Control Board (For units produced on or after 9/1/2012)	922016	922016	922016	922016
Blower Housing	297207R	297209R	297209R	297209R
Blower Limit Switch	626581R	626581R	626581R	626581R
Blower Motor	921650	921651	921651	921652
Blower Motor Choke	Not Used	622340R	622340R	622340R
Blower Wheel	667374R	667280R	667280R	667280R
Burner Assembly	904829	904830	904831	904832
Burner Tube Manifold	664611R	664243R	664244R	664245R
Door Set	904768	904769	904769	904770
Door Switch	632693R	632693R	632693R	632693R
Drain Tube (Hard "J") (Not Shown)	663706R	663706R	663706R	663706R
Drain Tube (Soft, "J" 30") (Not Shown)	663707R	663707R	663707R	663707R
Drain Tube (Soft, 23") (Not Shown)	664434R	664434R	664434R	664434R
Finish Flange	664633R	664633R	664633R	664633R
Flame Sensor	632484R	632484R	632484R	632484R
Furnace Control Board	920916	920916	920916	920916
Fuse	632261R	632261R	632261R	632261R
Gas Valve	624652R	624652R	624652R	624652R
Heat Exchanger	904792	904793	904794	904795
High Temp Hose (Not Shown)	263967R	263967R	263967R	263967R
Ignitor Bracket	299261R	299261R	299261R	299261R
Ignitor Assembly (Nitride)	1017743S	1017743S	1017743S	1017743S
Inducer Limit Switch	626599R	626599R	626599R	626599R
Inducer Motor	904799	904799	904799	904799
Inducer Orifice	669718R	669720R	669735R	669747R
In-Line Drain Assembly	664435R	664435R	664435R	664435R
Inshot Burner	661128R	661128R	661128R	661128R
Main Air Limit Switch	626565R	626561R	626562R	626561R
Motor Mount Kit	904907	904907	904907	904951
Orifice (Natural Gas)	661045R	661045R	661045R	661045R
Outlet Header Box	904802	904803	904803	904804
Pressure Switches (Inducer)	632523R	632546R	632555R	632523R
Roll-Out Limit Switch	626560R	626560R	626560R	626560R
Set of Wires (Not Shown)	M0036021R	M0036022R	M0036022R	M0036022R
Top Panel	2B3562R	2B3563R	2B3563R	2B3564R
Transformer	622341R	622341R	622341R	622341R
Tube (Soft, 5.5") (Not Shown)	663727R	663727R	663727R	663727R

Please specify the correct Model No., Serial No, and part number(s) when ordering parts from the nearest authorized dealer or service center.

\*TL models are equipped with FASCO brand inducer motors. \*TL-1 models are equipped with Broad Ocean brand inducer motors.

[FOR COMPONENT LOCATIONS, SEE PAGE 21.](#)

DESCRIPTION	060-24B & 060-24B-1	080-35C & 080-35C-1	100-35C & 100-35C-1	120-45D & 120-45D-1
Blower Assembly	904873	904874	904874	904875
Blower Control Board	920920	920920	920920	920920
Blower Housing	297207R	297209R	297209R	297209R
Blower Limit Switch	626581R	626581R	626581R	626581R
Blower Motor	921650	921651	921651	921652
Blower Motor Choke	Not Used	622340R	622340R	622340R
Blower Wheel	667374R	667280R	667280R	667280R
Burner Assembly	904829	904830	904831	904832
Burner Tube Manifold	664473R	664243R	664244R	664245R
Door Set	904768	904769	904769	904770
Door Switch	632693R	632693R	632693R	632693R
Drain Tube (Hard "J") (Not Shown)	663706R	663706R	663706R	663706R
Drain Tube (Soft, "J" 30") (Not Shown)	663707R	663707R	663707R	663707R
Drain Tube (Soft, 23") (Not Shown)	664434R	664434R	664434R	664434R
Finish Flange	664633R	664633R	664633R	664633R
Flame Sensor	632484R	632484R	632484R	632484R
Furnace Control Board	920916	920916	920916	920916
Fuse	632261R	632261R	632261R	632261R
Gas Valve	624652R	624652R	624652R	624652R
Heat Exchanger	904792	904793	904794	904795
High Temp Hose (Not Shown)	263967R	263967R	263967R	263967R
Ignitor Assembly (Nitride)	1017743S	1017743S	1017743S	1017743S
Ignitor Bracket (Not Shown)	299261R	299261R	299261R	299261R
Inducer Limit Switch	626599R	626599R	626599R	626599R
Inducer Motor	1003442	1003442	1003442	1003442
Inducer Orifice	669719R	669713R	669716R	Not Used
Inshot Burner	661128R	661128R	661128R	661128R
In-Line Drain Assembly	664435R	664435R	664435R	664435R
Main Air Limit	626566R	626567R	626561R	626561R
Motor Mount Kit	904907	904907	904907	904951
Orifice (Natural Gas)	661045R	661045R	661045R	661045R
Outlet Header Box	904802	904803	904803	904804
Pressure Switches (Condensate)	632550R	632547R	632547R	632554R
Pressure Switches (Inducer)	632515R	632546R	632548R	632516R
Roll-Out Limit Switch	626560R	626560R	626560R	626559R
Set of Wires (Not Shown)	M0036015R	M0036017	M0036017	M0036017
Top Panel	2A9512R	2A9513R	2A9513R	2A9514R
Transformer	622341R	622341R	622341R	622341R
Tube (Soft, 6.5") (Not Shown)	663727R	663727R	663727R	663727R

Please specify the correct Model No., Serial No., and part number(s) when ordering parts from the nearest authorized dealer or service center.

\*TC models are equipped with FASCO brand inducer motors. \*TC-1 models are equipped with Broad Ocean brand inducer motors.

[FOR COMPONENT LOCATIONS, SEE PAGE 20.](#)



DESCRIPTION	060-VB & 060-VB-1	080-VC & 080-VC-1	100-VC & 100-VC-1	120-VD & 120-VD-1
Blower Assembly	904877	904878	904878	904879
Blower Control Board (For units produced prior to 8/31/2012)	920918	920918	920918	920918
Blower Control Board (For units produced on or after 9/1/2012)	922016	922016	922016	922016
Blower Housing	297207R	297209R	297209R	297209R
Blower Limit Switch	626581R	626581R	626581R	626581R
Blower Motor	921650	921651	921651	921652
Blower Motor Choke	Not Used	622340R	622340R	622340R
Blower Wheel	667374R	667280R	667280R	667280R
Burner Assembly	904829	904830	904831	904832
Burner Tube Manifold	664473R	664243R	664244R	664245R
Door Set	904768	904769	904769	904770
Door Switch	632693R	632693R	632693R	632693R
Drain Tube (Hard "J") (Not Shown)	663706R	663706R	663706R	663706R
Drain Tube (Soft, "J" 30") (Not Shown)	663707R	663707R	663707R	663707R
Drain Tube (Soft, 23") (Not Shown)	664434R	664434R	664434R	664434R
Finish Flange	664633R	664633R	664633R	664633R
Flame Sensor	632484R	632484R	632484R	632484R
Furnace Control Board	920916	920916	920916	920916
Fuse	632261R	632261R	632261R	632261R
Gas Valve	624652R	624652R	624652R	624652R
Heat Exchanger	904792	904793	904794	904795
High Temp Hose (Not Shown)	263967R	263967R	263967R	263967R
Ignitor Assembly (Nitride)	1017743S	1017743S	1017743S	1017743S
Ignitor Bracket	299261R	299261R	299261R	299261R
Inducer Limit Switch	626599R	626599R	626599R	626599R
Inducer Motor	1003442	1003442	1003442	1003442
Inducer Orifice	669719R	669713R	669716R	Not Used
Inshot Burner	661128R	661128R	661128R	661128R
In-Line Drain Assembly	664435R	664435R	664435R	664435R
Main Air Limit	626566R	626567R	626561R	626561R
Motor Mount Kit	904907	904907	904907	904951
Orifice (Natural Gas)	661045R	661045R	661045R	661045R
Outlet Header Box	904802	904803	904803	904804
Pressure Switches (Condensate)	632550R	632547R	632547R	632554R
Pressure Switches (Inducer)	632515R	632546R	632548R	632516R
Roll-Out Limit Switch	626560R	626560R	626560R	626559R
Set of Wires (Not Shown)	M0036015R	M0036017	M0036017	M0036017
Top Panel	2A9512R	2A9513R	2A9513R	2A9514R
Transformer	622341R	622341R	622341R	622341R
Tube (Soft, 6.5") (Not Shown)	663727R	663727R	663727R	663727R

Please specify the correct Model No., Serial No, and part number(s) when ordering parts from the nearest authorized dealer or service center.

\*TC models are equipped with FASCO brand inducer motors. \*TC-1 models are equipped with Broad Ocean brand inducer motors.

[FOR COMPONENT LOCATIONS, SEE PAGE 20.](#)

DESCRIPTION	060-24B & 060-24B-1	080-35C & 080-35C-1	100-35C & 100-35C-1	120-45D & 120-45D-1
Blower Assembly	904873	904874	904874	904875
Blower Control Board	920920	920920	920920	920920
Blower Housing	297207R	297209R	297209R	297209R
Blower Limit Switch	626581R	626581R	626581R	626581R
Blower Motor	921650	921651	921651	921652
Blower Motor Choke	Not Used	622340R	622340R	622340R
Blower Wheel	667374R	667280R	667280R	667280R
Burner Assembly	904829	904830	904831	904832
Burner Tube Manifold	664611R	664243R	664244R	664245R
Door Set	904768	904769	904769	904770
Door Switch	632693R	632693R	632693R	632693R
Drain Tube (Hard "J") (Not Shown)	663706R	663706R	663706R	663706R
Drain Tube (Soft, "J" 30") (Not Shown)	663707R	663707R	663707R	663707R
Drain Tube (Soft, 23") (Not Shown)	664434R	664434R	664434R	664434R
Finish Flange	664633R	664633R	664633R	664633R
Flame Sensor	632484R	632484R	632484R	632484R
Furnace Control Board	920916	920916	920916	920916
Fuse	632261R	632261R	632261R	632261R
Gas Valve	624652R	624652R	624652R	624652R
Heat Exchanger	904792	904793	904794	904795
High Temp Hose (Not Shown)	263967R	263967R	263967R	263967R
Ignitor Assembly (Nitride)	1017743S	1017743S	1017743S	1017743S
Ignitor Bracket	299261R	299261R	299261R	299261R
Inducer Limit Switch	626599R	626599R	626599R	626599R
Inducer Motor (*G7TL-1 models only)	1003442	1003442	1003442	1003442
Inducer Orifice	669718R	669720R	669735R	669747R
Inshot Burner	661128R	661128R	661128R	661128R
In-Line Drain Assembly	664435R	664435R	664435R	664435R
Main Air Limit	626565R	626561R	626562R	626561R
Motor Mount Kit	904907	904907	904907	904951
Orifice (Natural Gas)	661045R	661045R	661045R	661045R
Outlet Header Box	904802	904803	904803	904804
Pressure Switches (Inducer)	632523R	632546R	632555R	632523R
Roll-Out Limit Switch	626560R	626560R	626560R	626560R
Set of Wires (Not Shown)	M0036016	M0036018	M0036018	M0036018
Top Panel	2B3562R	2B3563R	2B3563R	2B3564R
Transformer	622341R	622341R	622341R	622341R
Tube (Soft, 5.5") (Not Shown)	663727R	663727R	663727R	663727R

Please specify the correct Model No., Serial No., and part number(s) when ordering parts from the nearest authorized dealer or service center.

\*TL models are equipped with FASCO brand inducer motors. \*TL-1 models are equipped with Broad Ocean brand inducer motors.

**FOR COMPONENT LOCATIONS, SEE PAGE 21.**

 
DESCRIPTION	060-VB & 060-VB-1	080-VC & 080-VC-1	100-VC & 100-VC-1	120-VD & 120-VD-1
Blower Assembly	904877	904878	904878	904879
Blower Control Board (For units produced prior to 8/31/2012)	920918	920918	920918	920918
Blower Control Board (For units produced on or after 9/1/2012)	922016	922016	922016	922016
Blower Housing	297207R	297209R	297209R	297209R
Blower Limit Switch	626581R	626581R	626581R	626581R
Blower Motor	921650	921651	921651	921652
Blower Motor Choke	Not Used	622340R	622340R	622340R
Blower Wheel	667374R	667280R	667280R	667280R
Burner Assembly	904829	904830	904831	904832
Burner Tube Manifold	664611R	664243R	664244R	664245R
Door Set	904768	904769	904769	904770
Door Switch	632693R	632693R	632693R	632693R
Drain Tube (Hard "J") (Not Shown)	663706R	663706R	663706R	663706R
Drain Tube (Soft, "J" 30") (Not Shown)	663707R	663707R	663707R	663707R
Drain Tube (Soft, 23") (Not Shown)	664434R	664434R	664434R	664434R
Finish Flange	664633R	664633R	664633R	664633R
Flame Sensor	632484R	632484R	632484R	632484R
Furnace Control Board	920916	920916	920916	920916
Fuse	632261R	632261R	632261R	632261R
Gas Valve	624652R	624652R	624652R	624652R
Heat Exchanger	904792	904793	904794	904795
High Temp Hose (Not Shown)	263967R	263967R	263967R	263967R
Ignitor Assembly (Nitride)	1017743S	1017743S	1017743S	1017743S
Ignitor Bracket	299261R	299261R	299261R	299261R
Inducer Limit Switch	626599R	626599R	626599R	626599R
Inducer Motor	1003442	1003442	1003442	1003442
Inducer Orifice	669718R	669720R	669735R	669747R
Inshot Burner	661128R	661128R	661128R	661128R
In-Line Drain Assembly	664435R	664435R	664435R	664435R
Main Air Limit	626565R	626561R	626562R	626561R
Motor Mount Kit	904907	904907	904907	904951
Orifice (Natural Gas)	661045R	661045R	661045R	661045R
Outlet Header Box	904802	904803	904803	904804
Pressure Switches (Inducer)	632523R	632546R	632555R	632523R
Roll-Out Limit Switch	626560R	626560R	626560R	626560R
Set of Wires (Not Shown)	M0036021R	M0036022R	M0036022R	M0036022R
Top Panel	2B3562R	2B3563R	2B3563R	2B3564R
Transformer	622341R	622341R	622341R	622341R
Tube (Soft, 5.5") (Not Shown)	663727R	663727R	663727R	663727R

Please specify the correct Model No., Serial No, and part number(s) when ordering parts from the nearest authorized dealer or service center.


\*TL models are equipped with FASCO brand inducer motors. \*TL-1 models are equipped with Broad Ocean brand inducer motors.

[FOR COMPONENT LOCATIONS, SEE PAGE 21.](#)

# \*G7TC / \*G7TC-1 UPFLOW / HORIZONTAL - COMPONENT LOCATION

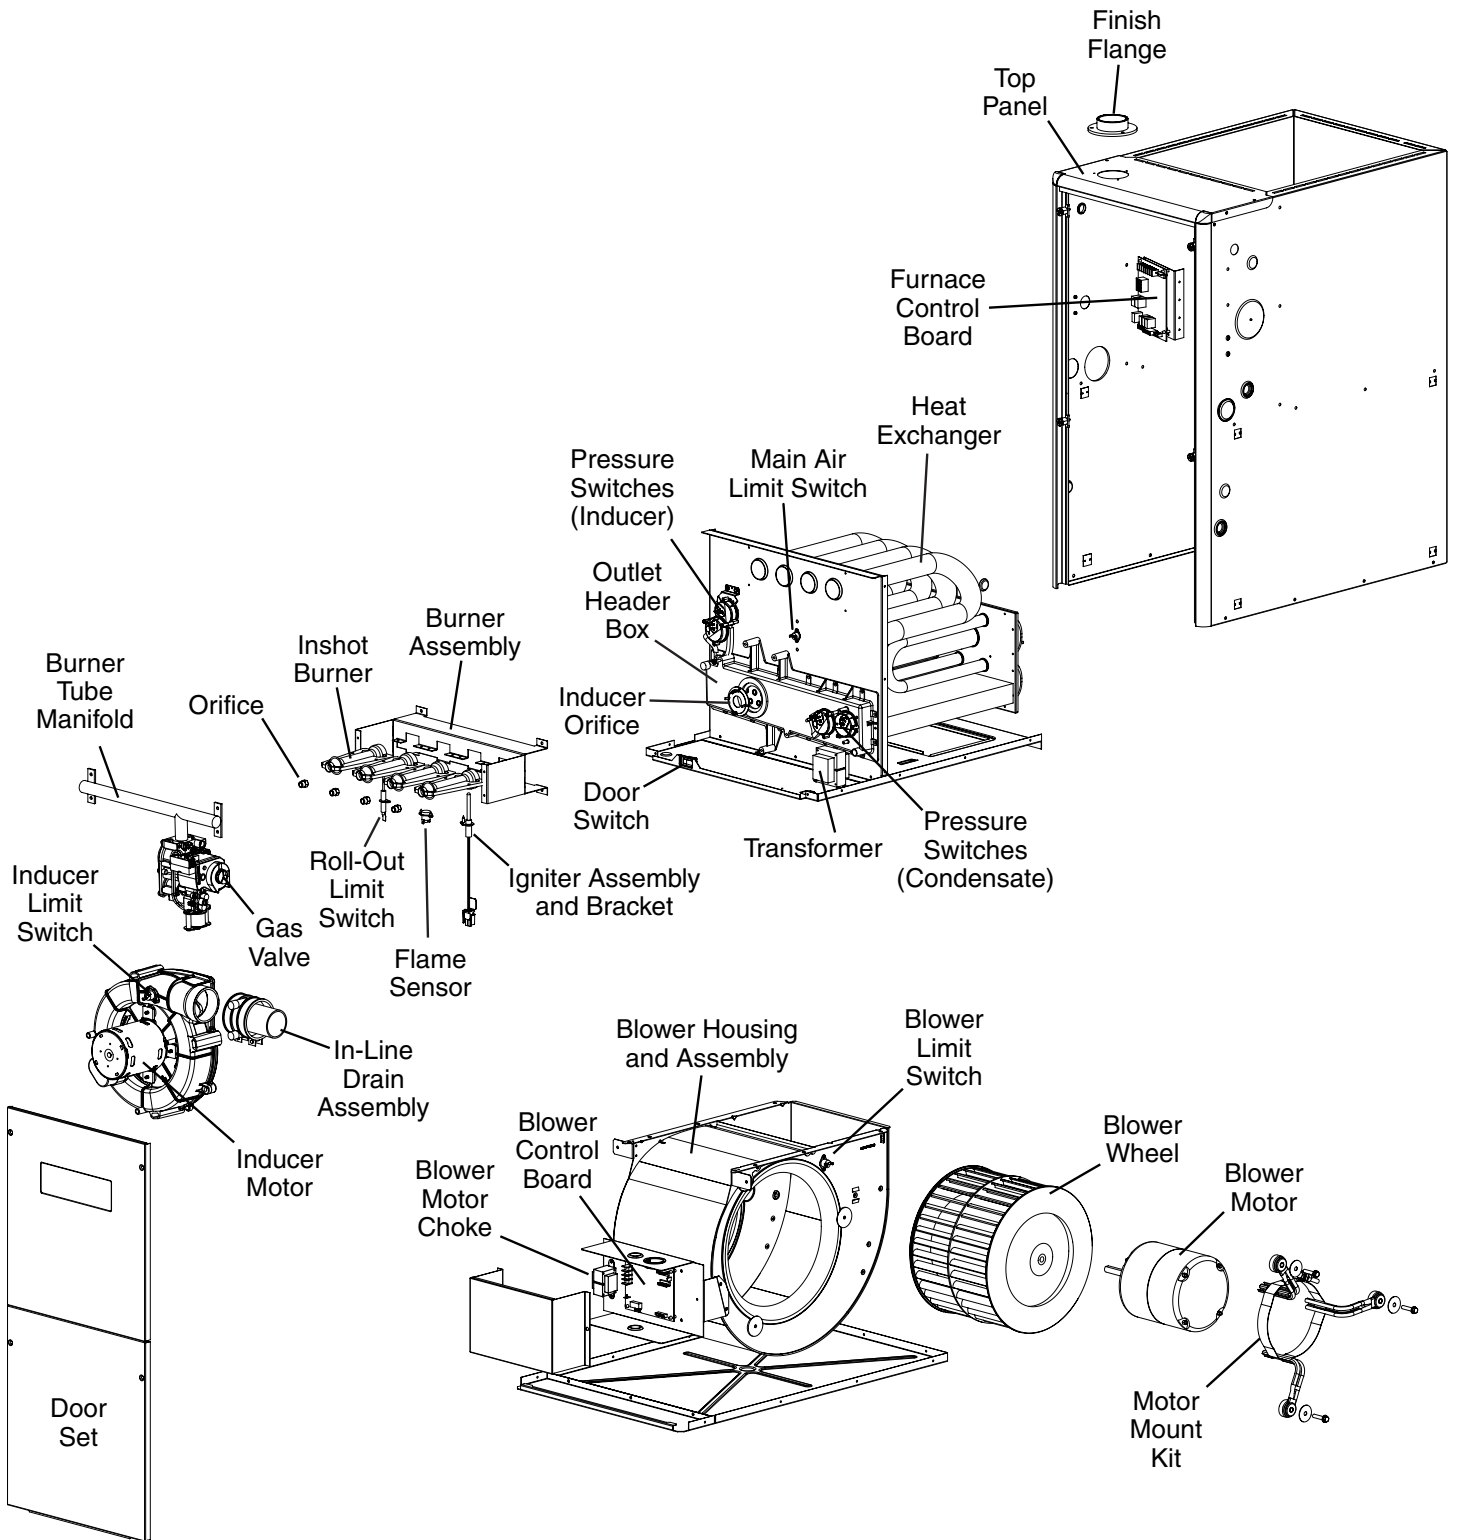

# \*G7TL / \*G7TL-1 DOWNFLOW - COMPONENT LOCATION

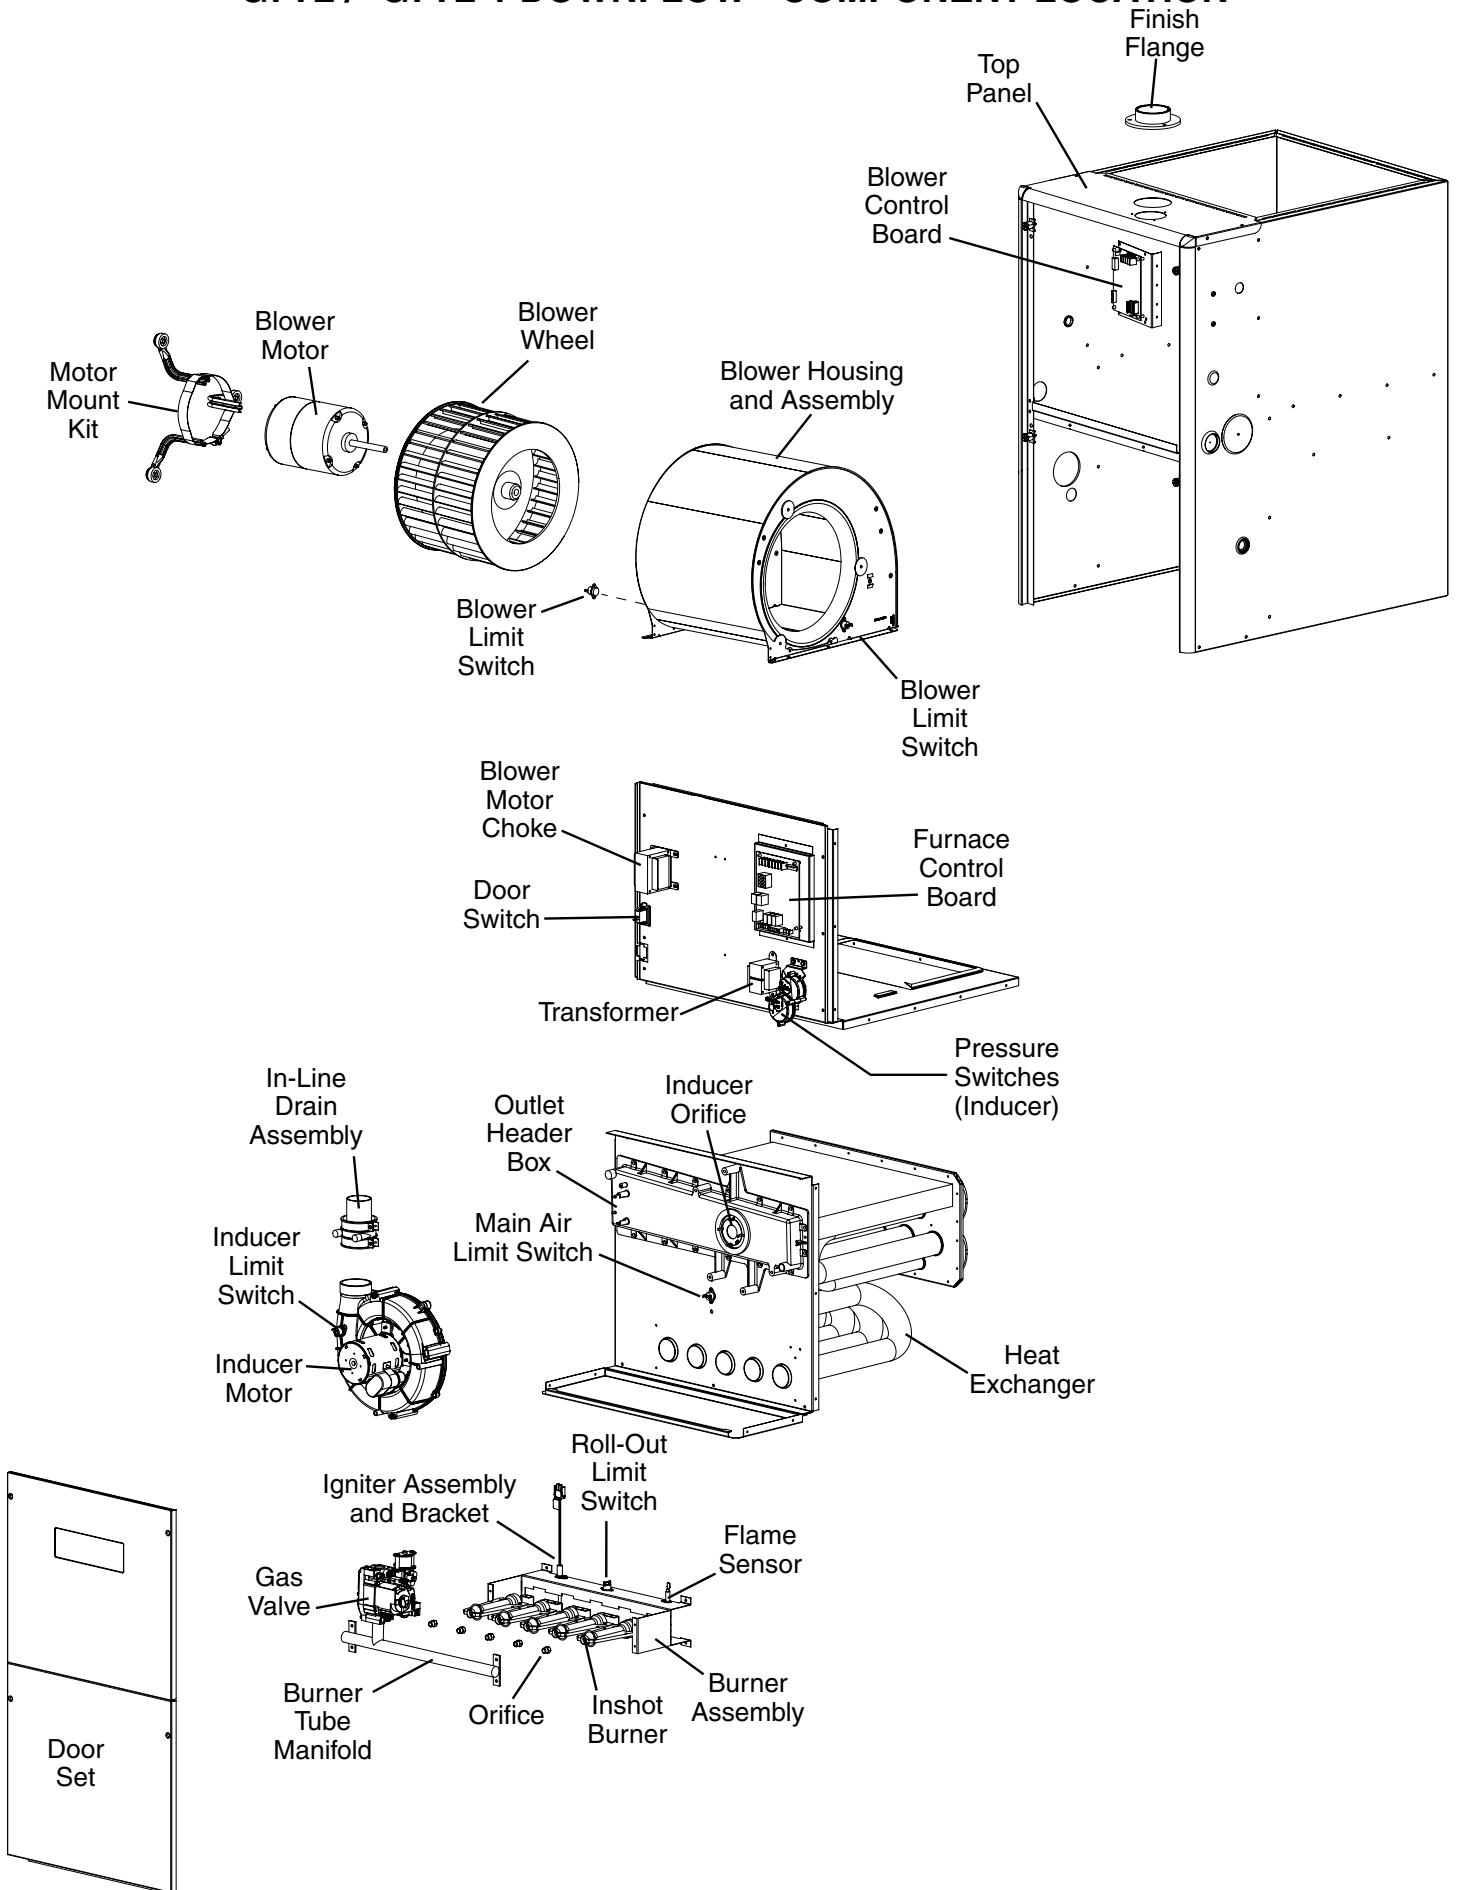 

DESCRIPTION	060-24B-1	080-35C-1	100-35C-1	115-45D-1
Blower Assembly	904873	904874	904874	904875
Blower Control Board	920920	920920	920920	920920
Blower Housing	297207R	297209R	297209R	297209R
Blower Limit Switch	626611R	626611R	626611R	626611R
Blower Motor	921650	921651	921651	921652
Blower Motor Choke	NOT USED	622340R	622340R	622340R
Blower Wheel	667374R	667280R	667280R	667280R
Burner Assembly	904829	904830	904831	904832
Burner Tube Manifold	664473R	664243R	664244R	664245R
Door Set	904768	904769	904769	904770
Door Switch	632693R	632693R	632693R	632693R
Drain Tube (Hard "J") (Not Shown)	663706R	663706R	663706R	663706R
Drain Tube (Soft, "J" 30") (Not Shown)	663707R	663707R	663707R	663707R
Drain Tube (Soft, 23") (Not Shown)	664434R	664434R	664434R	664434R
Finish Flange	664633R	664633R	664633R	664633R
Flame Sensor	632484R	632484R	632484R	632484R
Furnace Control Board	920916	920916	920916	920916
Fuse	632261R	632261R	632261R	632261R
Gas Valve	624787R	624787R	624787R	624787R
Harness Inducer-Resistor (Not Shown)	1014826R	1014827R	1014827R	1016418R
Heat Exchanger	904792	904793	904794	904795
High Temp Hose (Not Shown)	263967R	263967R	263967R	263967R
Ignitor Assembly (Nitride)	1017743S	1017743S	1017743S	1017743S
Ignitor Bracket (Not Shown)	299261R	299261R	299261R	299261R
Inducer Limit Switch	626599R	626599R	626599R	626599R
Inducer Motor	1003442	1003442	1003442	1003442
Inducer Orifice	669719R	669713R	669716R	1014812R
Inshot Burner	661128R	661128R	661128R	661128R
In-Line Drain Assembly	664435R	664435R	664435R	664435R
Main Air Limit	626598R	626615R	626612R	626612R
Motor Mount Kit	904907	904907	904907	904951
Orifice (Natural Gas)	661045R	661045R	661045R	661046R
Outlet Header Box	904802	904803	904803	904804
Pressure Switches (Condensate)	632550R	1017676R	1017676R	632554R
Pressure Switches (Inducer)	1016291R	1016292R	1016293R	1016294R
Roll-Out Limit Switch	626610R	626610R	626610R	626609R
Set Of Wires (Not Shown)	M0036041R	M0036042R	M0036042R	M0036053R
Top Panel	2A9512R	2A9513R	2A9513R	2A9514R
Transformer	622341R	622341R	622341R	622341R
Tube (Soft, 6.5") (Not Shown)	663727R	663727R	663727R	663727R

Please specify the correct Model No., Serial No, and part number(s) when ordering parts from the nearest authorized dealer or service center.

\*TL models are equipped with FASCO brand inducer motors. \*TL-1 models are equipped with Broad Ocean brand inducer motors.

**FOR COMPONENT LOCATIONS, SEE PAGE 26.**

DESCRIPTION	060-VB-1	080-VC-1	100-VC-1	120-VD-1
Blower Assembly	904877	904878	904878	904879
Blower Control Board	922016	922016	922016	922016
Blower Housing	297207R	297209R	297209R	297209R
Blower Limit Switch	626611R	626611R	626611R	626611R
Blower Motor	921650	921651	921651	921652
Blower Motor Choke	NOT USED	622340R	622340R	622340R
Blower Wheel	667374R	667280R	667280R	667280R
Burner Assembly	904829	904830	904831	904832
Burner Tube Manifold	664473R	664243R	664244R	664245R
Door Set	904768	904769	904769	904770
Door Switch	632693R	632693R	632693R	632693R
Drain Tube (Hard "J") (Not Shown)	663706R	663706R	663706R	663706R
Drain Tube (Soft, "J" 30") (Not Shown)	663707R	663707R	663707R	663707R
Drain Tube (Soft, 23") (Not Shown)	664434R	664434R	664434R	664434R
Finish Flange	664633R	664633R	664633R	664633R
Flame Sensor	632484R	632484R	632484R	632484R
Furnace Control Board	920916	920916	920916	920916
Fuse	632261R	632261R	632261R	632261R
Gas Valve	624787R	624787R	624787R	624787R
Harness Inducer-Resistor (Not Shown)	1014826R	1014827R	1014827R	1016418R
Heat Exchanger	904792	904793	904794	904795
High Temp Hose (Not Shown)	263967R	263967R	263967R	263967R
Ignitor Assembly (Nitride)	1017743S	1017743S	1017743S	1017743S
Ignitor Bracket (Not Shown)	299261R	299261R	299261R	299261R
Inducer Limit Switch	626599R	626599R	626599R	626599R
Inducer Motor	1003442	1003442	1003442	1003442
Inducer Orifice	669719R	669713R	669716R	1014812R
Inshot Burner	661128R	661128R	661128R	661128R
In-Line Drain Assembly	664435R	664435R	664435R	664435R
Main Air Limit	626598R	626615R	626612R	626612R
Motor Mount Kit	904907	904907	904907	904951
Orifice (Natural Gas)	661045R	661045R	661045R	661046R
Outlet Header Box	904802	904803	904803	904804
Pressure Switches (Condensate)	632550R	1017676R	1017676R	632554R
Pressure Switches (Inducer)	1016291R	1016292R	1016293R	1016294R
Roll-Out Limit Switch	626610R	626610R	626610R	626609R
Set Of Wires (Not Shown)	M0036045R	M0036047R	M0036047R	M0036054R
Top Panel	2A9512R	2A9513R	2A9513R	2A9514R
Transformer	622341R	622341R	622341R	622341R
Tube (Soft, 6.5") (Not Shown)	663727R	663727R	663727R	663727R

Please specify the correct Model No., Serial No, and part number(s) when ordering parts from the nearest authorized dealer or service center.

\*TL models are equipped with FASCO brand inducer motors. \*TL-1 models are equipped with Broad Ocean brand inducer motors.

**FOR COMPONENT LOCATIONS, SEE PAGE 26.**

DESCRIPTION	060-24B-1	080-35C-1	100-35C-1	115-45D-1
Blower Assembly	904873	904874	904874	904875
Blower Control Board	920920	920920	920920	920920
Blower Housing	297207R	297209R	297209R	297209R
Blower Limit Switch	626611R	626611R	626611R	626611R
Blower Motor	921650	921651	921651	921652
Blower Motor Choke	NOT USED	622340R	622340R	622340R
Blower Wheel	667374R	667280R	667280R	667280R
Burner Assembly	904829	904830	904831	904832
Burner Tube Manifold	664611R	664243R	664244R	664245R
Door Set	904768	904769	904769	904770
Door Switch	632693R	632693R	632693R	632693R
Drain Tube (Hard "J") (Not Shown)	663706R	663706R	663706R	663706R
Drain Tube (Soft, "J" 30") (Not Shown)	663707R	663707R	663707R	663707R
Drain Tube (Soft, 23") (Not Shown)	664434R	664434R	664434R	664434R
Finish Flange	664633R	664633R	664633R	664633R
Flame Sensor	632484R	632484R	632484R	632484R
Furnace Control Board	920916	920916	920916	920916
Fuse	632261R	632261R	632261R	632261R
Gas Valve	624787R	624787R	624787R	624787R
Harness Inducer-Resistor (Not Shown)	1014828R	1014829R	1014830R	1014831R
Heat Exchanger	904792	904793	904794	904795
High Temp Hose (Not Shown)	263967R	263967R	263967R	263967R
Ignitor Assembly (Nitride)	1017743S	1017743S	1017743S	1017743S
Ignitor Bracket (Not Shown)	299261R	299261R	299261R	299261R
Inducer Limit Switch	626599R	626599R	626599R	626599R
Inducer Motor	1003442	1003442	1003442	1003442
Inducer Orifice	669926R	669720R	669716R	669717R
Inshot Burner	661128R	661128R	661128R	661128R
In-Line Drain Assembly	664435R	664435R	664435R	664435R
Main Air Limit	626601R	626601R	626613R	626612R
Motor Mount Kit	904907	904907	904907	904951
Orifice (Natural Gas)	661045R	661045R	661045R	661046R
Outlet Header Box	904802	904803	904803	904804
Pressure Switches (Inducer)	1016295R	1016296R	1016297R	1016298R
Roll-Out Limit Switch	626610R	626610R	626610R	626610R
Set Of Wires (Not Shown)	M0036043R	M0036044R	M0036045R	M0036050R
Top Panel	2B3562R	2B3563R	2B3563R	2B3564R
Transformer	622341R	622341R	622341R	622341R
Tube (Soft, 6.5") (Not Shown)	663727R	663727R	663727R	663727R

Please specify the correct Model No., Serial No, and part number(s) when ordering parts from the nearest authorized dealer or service center.

\*TL models are equipped with FASCO brand inducer motors. \*TL-1 models are equipped with Broad Ocean brand inducer motors.

[FOR COMPONENT LOCATIONS, SEE PAGE 27.](#)



 
DESCRIPTION	060-VB-1	080-VC-1	100-VC-1	115-VD-1
Blower Assembly	904877	904878	904878	904879
Blower Control Board	922016	922016	922016	922016
Blower Housing	297207R	297209R	297209R	297209R
Blower Limit Switch	626611R	626611R	626611R	626611R
Blower Motor	921650	921651	921651	921652
Blower Motor Choke	NOT USED	622340R	622340R	622340R
Blower Wheel	667374R	667280R	667280R	667280R
Burner Assembly	904829	904830	904831	904832
Burner Tube Manifold	664611R	664243R	664244R	664245R
Door Set	904768	904769	904769	904770
Door Switch	632693R	632693R	632693R	632693R
Drain Tube (Hard "J") (Not Shown)	663706R	663706R	663706R	663706R
Drain Tube (Soft, "J" 30") (Not Shown)	663707R	663707R	663707R	663707R
Drain Tube (Soft, 23") (Not Shown)	664434R	664434R	664434R	664434R
Finish Flange	664633R	664633R	664633R	664633R
Flame Sensor	632484R	632484R	632484R	632484R
Furnace Control Board	920916	920916	920916	920916
Fuse	632261R	632261R	632261R	632261R
Gas Valve	624787R	624787R	624787R	624787R
Harness Inducer-Resistor (Not Shown)	1014832R	1014829R	1014830R	1014831R
Heat Exchanger	904792	904793	904794	904795
High Temp Hose (Not Shown)	263967R	263967R	263967R	263967R
Ignitor Assembly (Nitride)	1017743S	1017743S	1017743S	1017743S
Ignitor Bracket (Not Shown)	299261R	299261R	299261R	299261R
Inducer Limit Switch	626599R	626599R	626599R	626599R
Inducer Motor	1003442	1003442	1003442	1003442
Inducer Orifice	669926R	669720R	669716R	669717R
Inshot Burner	661128R	661128R	661128R	661128R
In-Line Drain Assembly	664435R	664435R	664435R	664435R
Main Air Limit	626601R	626601R	626613R	626612R
Motor Mount Kit	904907	904907	904907	904951
Orifice (Natural Gas)	661045R	661045R	661045R	661046R
Outlet Header Box	904802	904803	904803	904804
Pressure Switches (Inducer)	1016295R	1016296R	1016297R	1016298R
Roll-Out Limit Switch	626610R	626610R	626610R	626610R
Set Of Wires (Not Shown)	M0036048R	M0036049R	M0036052R	M0036051R
Top Panel	2B3562R	2B3563R	2B3563R	2B3564R
Transformer	622341R	622341R	622341R	622341R
Tube (Soft, 6.5") (Not Shown)	663727R	663727R	663727R	663727R

Please specify the correct Model No., Serial No, and part number(s) when ordering parts from the nearest authorized dealer or service center.

\*TL models are equipped with FASCO brand inducer motors. \*TL-1 models are equipped with Broad Ocean brand inducer motors.

[FOR COMPONENT LOCATIONS, SEE PAGE 27.](#)

# \*G7TE-1 UPFLOW ONLY - COMPONENT LOCATION

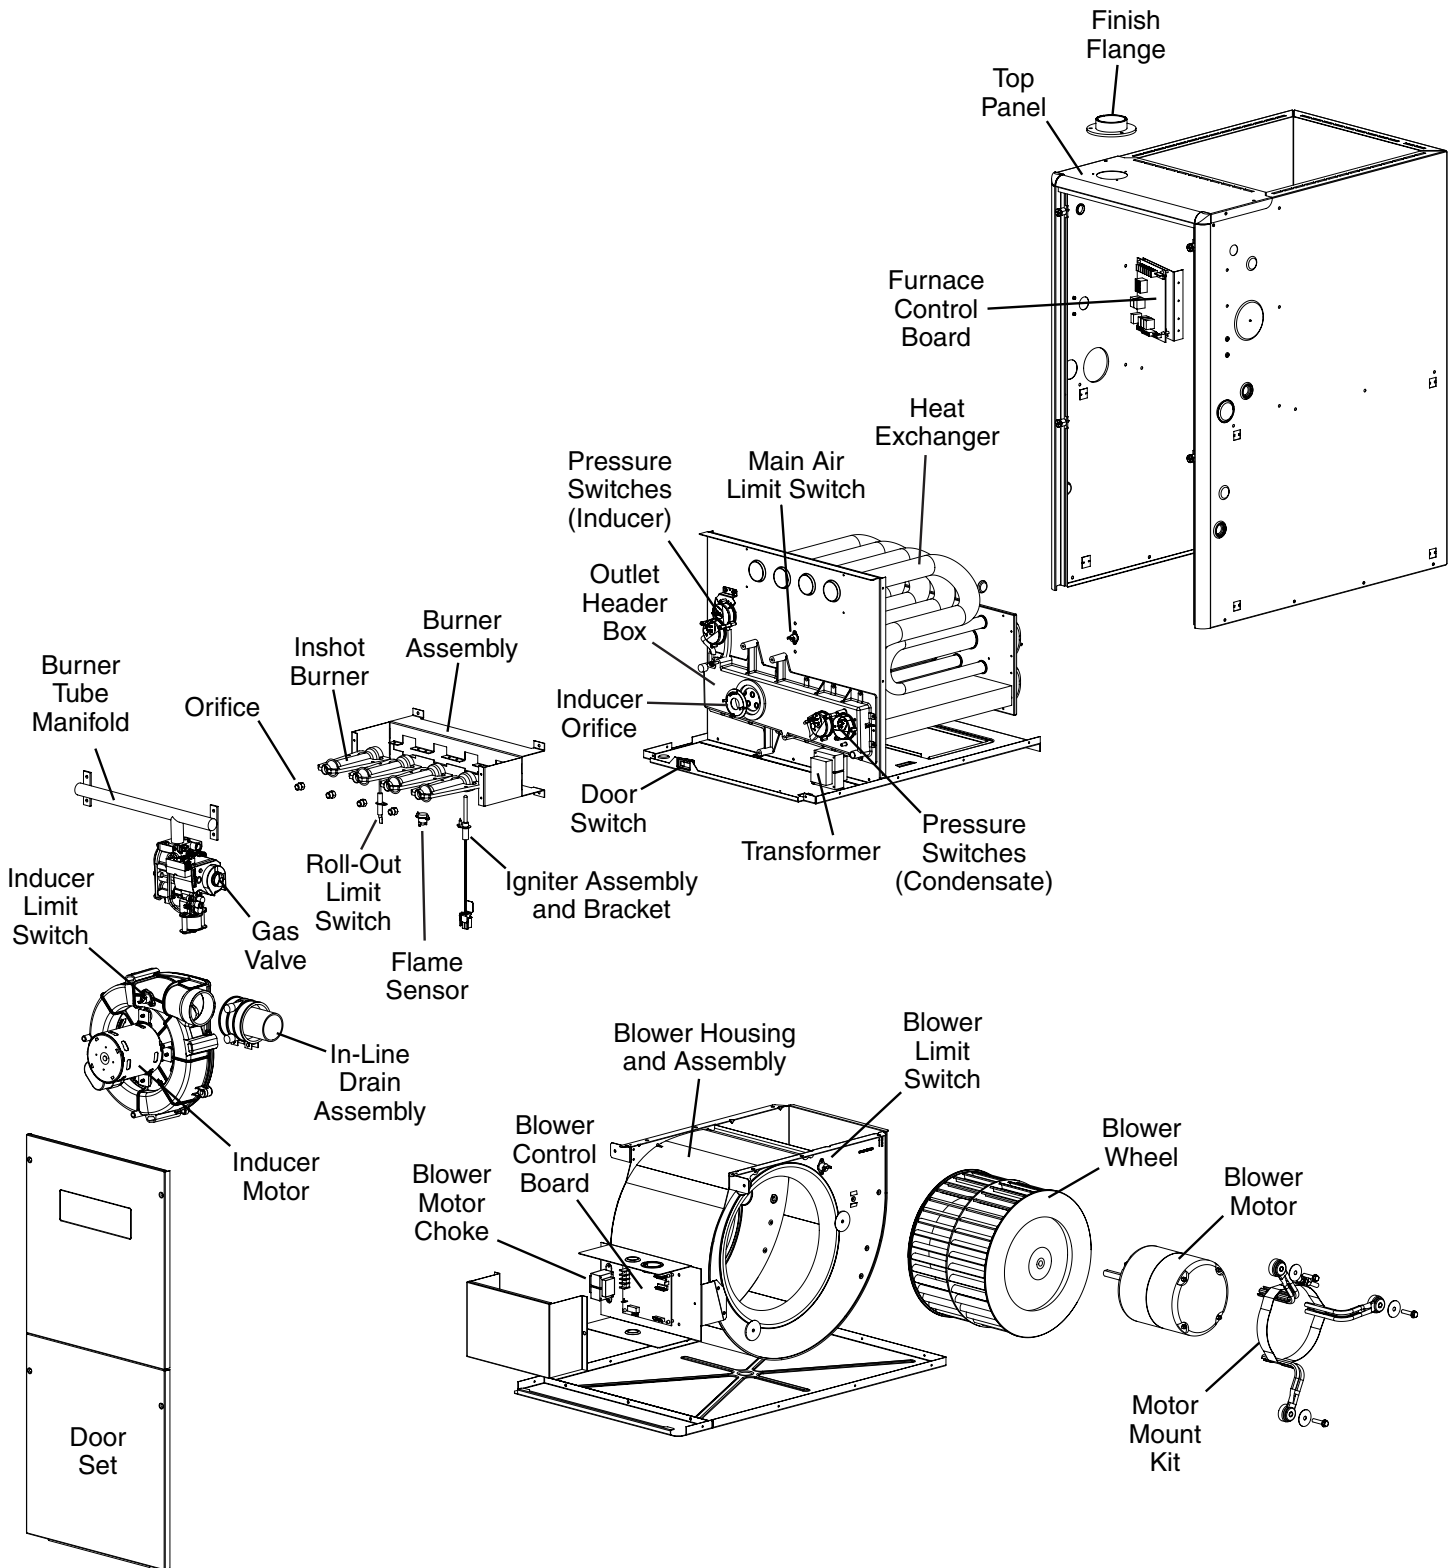

# \*G7TN-1 DOWNFLOW - COMPONENT LOCATION

