

 
OUTDOOR LED FLOOD LIGHT


User Manual






Dimensions




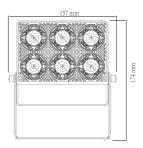

C2020-BW-30W


C2020-BW-40W

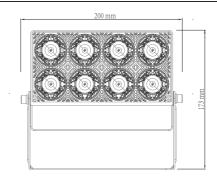

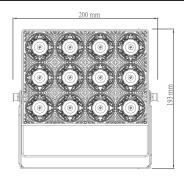

C2020-BW-50W

C2020-BW-70W

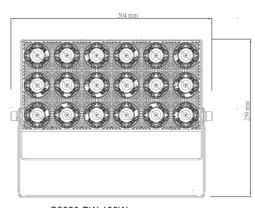

C2020-BW-100W

Model: C2020-BW-30W / 40W / 50W / 70W / 100W Color: Bronze

www.sansiled.com ______ 2




Before installation, please read all of the instructions thoroughly and keep it for future reference.

01 Adjusting the lamp base angle


- 1. Take the product out of the packaging. Read the instruction manual carefully.
- 2. Loosen the fixing bolts on both sides by turning them counterclockwise. Only loosen the fixing bolts until the mounting bracket can be adjusted.
- 3. Adjust the mounting bracket to the desired angle, then re-tighten the fixing bolts by turning them clockwise.



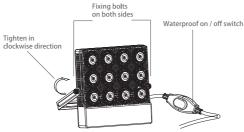

02 Mounting method

- 1. Adjust the lamp base to the desired angle.
- 2. Prepare the anchor bolt(s) on the mounting surface according to the mounting hole / slots on the bracket.
- 3. Mount the product to the mounting surface and tighten the hex nut(s) afterwards.

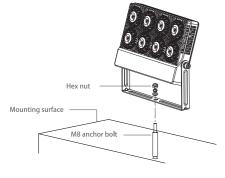

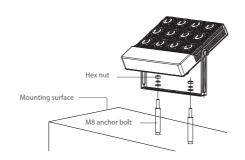


Figure (with one M8 anchor bolt)

Figure (with two M8 anchor bolts)

04 Technical parameters

Product designation	LED flood light				
Operating voltage /	AC 120V, 60Hz				
frequency					
Rated power	30W	40W	50W	70W	100W
Beam angle	120°	120°	120°	120°	120°
Color temperature	5700K	5700K	5700K	5700K	5700K
Enclosure color	bronze RAL8019				

05 Warnings

- 1. Ensure the voltage of the power supply complies with the operating voltage of the product before use. Use of an improper power supply will cause damage to the product and can cause potential serious safety risks.
- 2. The light source of this product is not replaceable; when the light source reaches its end of life, the whole luminaire shall be replaced. Do not attempt to disassemble the product.
- 3. Do not assemble the product under live conditions.
- 4. The assembly, repair and maintenance can only be done by a qualified specialist. An unqualified person is not allowed to assemble, repair or maintain the product.
- 5. If the power cord or the outer material is damaged, it must be recorded and repaired by the manufacturer or its authorized service centre; or replaced by similar qualified specialists.

06 5-years warranty

If you have any problems, questions or concerns, please feel free to contact us before returning the product. The email of after-sales service is: service@sansitech.us.

www.sansiled.com ______ 3 | www.sansiled.com _____