

← Continues from front



Humidifier
Adds moisture to your air

Off: The humidifier is off.
Low: On for 30s every 2 hours. For climates with high humidity levels.
Med: On for 30s every 30 mins.
High: On for 30s every 15 mins. For dry climates.



UV Light
Eliminates airborne bacteria, germs and mold spores

Off: The UV light is off.
On: On for 10 mins every hour.
High: On all the time.

*** Humidifier and UV Light sold separately**



Information: Connect with us

Have questions or feedback for us? Hit us up!



Learn more about Team ADI


Follow us on social media

Check out our online store




Check out getecoqube.com/start-air to get a coupon code for purchase of accesories!

EcoQube APP GUIDE

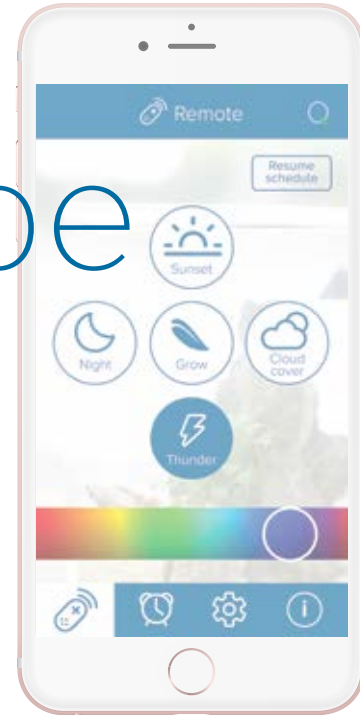

Customize and control your EcoQube

DOWNLOAD:
getecoqube.com/app


 Firstly, follow the instructions on the app to connect your EcoQube Air.

Using the remote temporarily pauses your schedule



Press to resume your scheduled lighting

You can also pick a colour

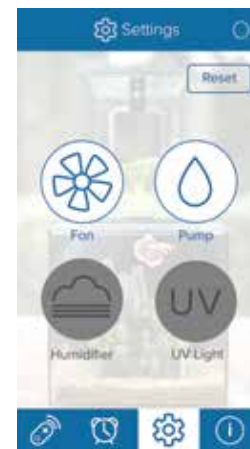

Reset to default settings

If you ordered a Humidifier* and/or a UV Light* with your EcoQube Air, hit the grey buttons to install them

Select which part of your EcoQube Air you'd like to control

*** Humidifier and UV Light sold separately**

Hit reset to return to the default settings



Delete a mode

Drag the modes into the schedule to set the timer



Fan

Circulates the air around your EcoQube and room

Adjust your fan speed

Off: The fan is off.

Reg: The fan is on regular speed.

Detox: The fan is on high speed.



Pump

Circulates water in the grow tray to optimise plant growth

Adjust your pump intervals


Off: The pump is off.

On: For seedling growth. The pump is always on.

General: For general plant growth. On for 5 mins every hour.

Kokedama: For use with Kokedama. On for 10 mins every hour.



It is recommended that you set the lights to  for 8 hours every day for optimal plant growth.

More on the back 