



Convector Heater

Instruction Manual



**1 YEAR
WARRANTY
ON PRODUCT**

SAFETY



IS : 302-2-30
CM/L 9600049217

 **VOCAL FOR LOCAL** 



KNOW YOUR FAN HEATER



TECHNICAL SPECIFICATIONS

Power Supply	230 V, AC, 50Hz
Wattage	Heating Position-I: 1000W
	Heating Position-II: 2000W
Dimension (LxWxH)	357 x 220 x 165 mm
Weight	2.95 Kg (approx.)



Fig-1

For best result keep the Fan Heater away from walls & curtains. Maintain minimum distance at all sides as shown in figure-I.

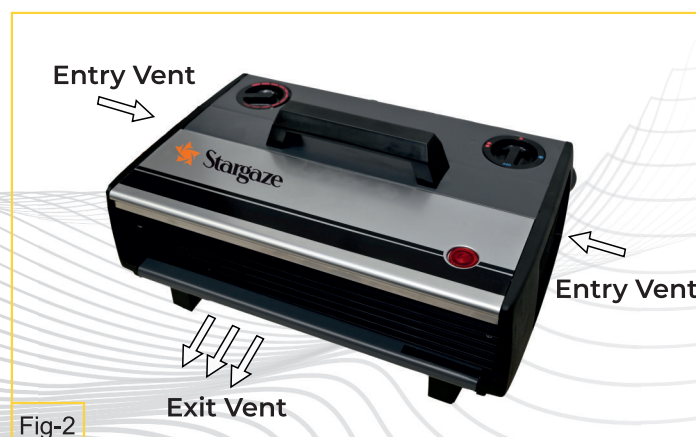


Fig-2

****IMPORTANT:**
PLEASE DO NOT
COVER ENTRY &
EXIT VENTS.
(Fig-2)

In Case of any defects do not temper with the appliances yourself. Contact the nearest Authorised Dealer/Company Service Center:

- Product design up gradation is a continuous process and all specifications are subject to change without prior notification.

OPERATION

Thermostat Setting:

Keeping in the view customer requirement the product is designed with a thermostat to maintain the desired temperature. For this follow the steps given below:

Step 1 Switch ON the Fan Heater by Keeping it in upright position.

Step 2 Keep the Thermostat to the max position.


Step 3 Once the desired room temperature is reached rotate the thermostat knob back till the units cut off.

Step 4 Fan Heater will now automatically desired temperature.

INSTRUCTION TO USE

The switch knob can run at 2 heating position which can be changed by the Switch Knob from "OFF" to "Heating position-1" & "Heating Position-2".

The Switch Knob can also be run at "Fan" position [without heater] (Fig-3)

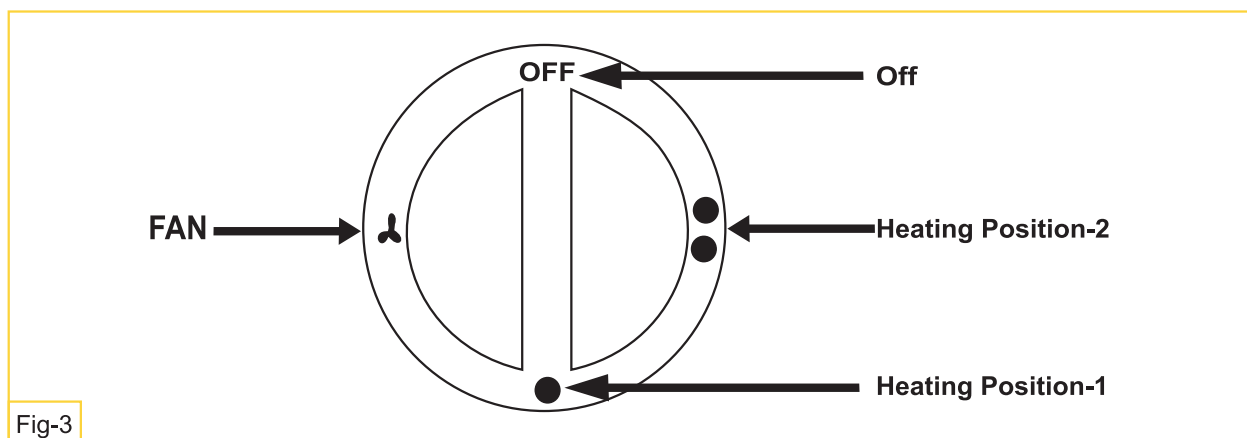

CARE/MAINTENANCE & SAFETY PRECAUTIONS

- For Storage, thoroughly clean the fan heater. Store after packing in such a way that dust does not go into the fan heater.
- After a long period of unuse, Please run the fan heater on "Fan" position only for 10 minutes to ensure that the motor becomes free. Incase the motor does not start. DO NOT TURN the switch to heating.
- Please contact to our Authorised Service Center.
- Try to keep curtains, furniture and flammable objects away from the flow of hot air.
- For cleaning ensure that the mains are disconnected.
- Allow the heater to cool for 10 minutes and wipe with a suitable damp clothe.

WARRANTY

M/s UTILITY MARKETING warrants to the of this product for a of 12 n-mths commencing from the date of purchase. the Company will repair or replace free of charge any part or parts of the product, should the company be fully satisfied in its sole discretion that the defect/s is/are due to faulty material or defective workmanship only. The warranty by the following clauses:

1. The company or their authorised service Agent / Dealer will repair or replace all parts failing due to faulty material or defective workmanship pertaining to the above product.
2. Only the company or its authorised Agent/Dealer can Service/repair/attend to install/reinstall the above product.
3. All expenses incurred in collecting the units of parts there of from the Company's authorised service station or the dealers or Stargaze as well as expenses incurred in connection with deputing of service personnel/technicians towards to and fro travel conveyance and other incidentals, etc. will be borne be the customer.
4. The warranty extended herein is in lieu of all implied conditions and warranties under the law and is confined to the repair or replacement of defective part and does not cover any consequential or resulting liability, damage or loss arising from such dejects. Furthermore, the warranty, in no case, shall extend to the payment or any monetary consideration whatsoever for the replacement or return of the product as a whole.
5. This warranty does not cover correction, plastic and glass components adding decorative value to the product.
6. The warranty is covered by force Majeure clause. In the event if the above product is struck by any natural calamity, this warranty stands null & void.

This warranty is not valid in case of any of the following events:

- The machine is not used according to the instructions given in the instruction manual.
- The electrical power supply voltages are not within the stipulated norms (230VAC +1-10%)
- Any repair work/installation carried out by a person other than Stargaze Electric Authorised Service Center/ Service Agent.
- The serial number is deleted defaced or altered.
- If the original Purchase receipt / invoice is not available.

Serial no. / Batch No.: _____

Product Name & Model No.: _____

Name & Address of Customer: _____

_____ Ph. No: _____

_____ on _____

Bill no.: _____ Date of Purchase: _____

Signature & Rubber stamp of Dealer

Manufactured for:
Utility Marketing

Registered Office: #158, Amravati Enclave, Panchkula, Haryana

For Customer Feedback & Complaints,
Please Call on +91 78761 17711 | E-mail at: care@stargazeonline.in
visit: www.stargazeonline.in