

STARGAZE

A P P L I A N C E S

Making Life Easy...



PRODUCT CERTIFICATE



GALAXY 2 BURNER



GALAXY 3 BURNER



CRISTA 3 BURNER

INSTRUCTION MANUAL & WARRANTY CARD

Thank you for purchasing our company Cooktops. In to make our products you better, please read the instructions carefully before using this Twister Churning Machine and keep this manual handy to facilitate your future maintenance.

How to Use

- STEP-1 = Open the gas valve of the LPG cylinder.
- STEP-2 = Push the gas control knob inwards and turn it towards the 'ON' position and light the burner with a match stick or a lighter.
- STEP-3 = Keep the gas control knob in 'ON' position while cooking.
- STEP-4 = As a result of air in the gas control hose, the burners may not light up for the first time. In such a case, turn the gas control knob back to the 'OFF' position and try again.
- STEP-5 = Turn the gas control knob in an anti-clockwise direction to reduce the flame.
- STEP-6 = To put 'OFF' the flame, first close the gas valve of the cylinder. Wait until the flame dies down completely and turn the gas control knob in a clockwise direction to the 'OFF' position which gives a "click" sound.
- STEP-7 = Keep the gas stove and gas cylinder valve turned 'OFF' till you use the stove again.

Features

- Easy to clean the stove
- Aesthetic design
- Heavy duty gas cock specially designed to perform with high efficiency.
- High quality brass burners having uniform holes for more life and high efficiency.
- Hi-tech designed pan support for placing the utensils firmly on the stove.
- Extra thick gas pipe with inner & outer coating for easy gas flow and to avoid rust formation.
- Unbreakable gas control knob.
- Conforms to IS Standard.

Do'

- Use liquefied petroleum gas (LPG) only.
- Make sure that the room is well ventilated.
- Use the stove for cooking only.
- Use standard (ISI) rubber hose meant for LPG stoves.
- Clean the burners regularly so that the holes in the burner are not clogged.
- Check the gas tube regularly for wear and tear or leakage.

- Use the burner cleaner pin to each hole of the burner. If you wash the burner, wipe and dry before fixing. Always clean the stainless steel spill trays and glass top cleaning with dry soft cloth or soap water.
- Clean the pan support in water and dry before use.
- If you suspect any gas leakage. open all doors and windows, do not operate any electrical devices or switches and close the regulator of the cylinder.

Don't's

- Do not keep the tube in touch with any parts of stove.
- Do not keep any hot vessels in touch with any plastic parts of the gas stove.
- Do not use stove to dry wet towels & clothes etc.
- Do not use viny/plastic hose, as it is high inflammable.
- Do not touch the pan supports of the stove while cooking.
- Do not keep inflammable substance near the gas stove.
- Do not use a tube with twists, loops links or any external pressure.
- Do not apply excessive pressure to the gas control knob.
- Switch OFF the fan in the kitchen when the stove is in use.
- Do not allow children to handle your gas stove.
- Do not check gas leaks with a flame.
- Do not use abrasive materials for cleaning.
- Do not pour water or any other liquid over the control knobs and valves.
- If any difficulty in starting or in the functioning of your gas stove. Contact an nearest authorised dealer, service centre or manufacturer for assistance and resolving.

Important SafeGuard

- Read all instructions carefully and be thoroughly familiar with your Glass Top stove before use.
- Clean the Glass Top panel with a soft cloth to maintain shininess.
- Ensure that all the parts are fixed properly before turning on the gas stove.
- Make sure that there are no inflammable substances near the gas stove.
- The rubber gas hose should not come in contact with any part of the gas stove and should not be kept underneath it.
- Check the gas hose regularly for wear and tear or leaks.
- Remember to keep the gas hose free from twist or (sharp) loops, and should not be subjected to external pressure.

- If gas leak is felt, close the main gas valve of the cylinder, open all windows and call your gas supply agent. Don't switch on an electric light or light a match or use a lighter, when the gas leak is felt.
- Ensure that the gas stove and the gas cylinder valves are turned OFF when the gas stove is not in use.
- Close supervision is necessary when your gas stove is used with children around.

Dear Customer

Thank you for selecting Stargaze.

You have just bought yourself one of the finest Kitchen help in the form of **STARGAZE** Twister Churning Machine.

Your Stargaze product has been manufactured for you under the most stringent quality control procedures

You are assured of the best quality, performance and after sales service. If, however, for any reason, you feel something is lacking, we are always there at your service.

Details of our service centre is also enclosed here with. If you require any further assistance, please do not hesitate to contact us for immediate action on your query/problem, at:

Manufactured for:


STARGAZE HOME APPLIANCES LLP

Regd. Off: #158, Amaravati Enclave, Panchkula, Haryana - 134105

AT : STANDARD APPLIANCES INDIA

Plot No. 41 Sector 5, Parwanoo, Tehsil Kasauli, Distt.

Solan (HP) - 173220.

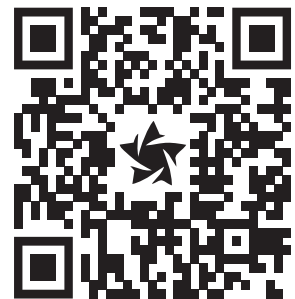

For Customer Feedback & Complaints,
Please Call on **+91 78761 17711** | E-mail at: **care@stargazeonline.in**
visit: **www.stargazeonline.in**