




Replacement Instructions
IonicAir™ AHPCO Cell

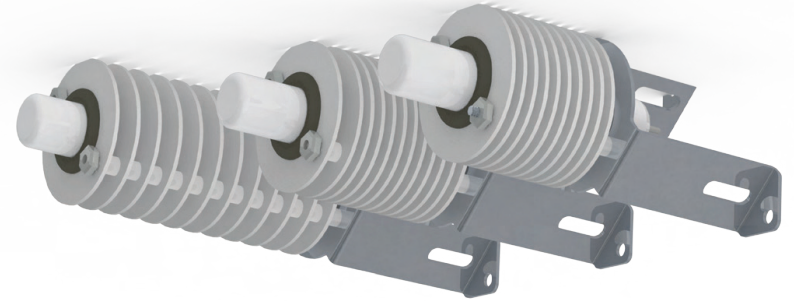

*Love the Air
You Breathe*



Copyright© 2021 Air Oasis LLC. All Rights Reserved.
3401 Airway Blvd., Amarillo, Texas 79118
806.373.7788 • www.airoasis.com

IonicAir™ AHPCO Cell Replacement Instructions

⚠ CAUTION Before you begin please unplug the purifier from its power source.


- 1 Remove the screws from the side of the aluminum shell.
- 2 Keeping the purifier in the upright position, gently slide the grey shell off the black base.
- 3 Remove the two screws from the bracket that secures the AHPCO cell.

⚠ CAUTION The AHPCO cell may be hot. Please allow the cell to cool to room temperature before handling.

- 4 Tilt the AHPCO cell to the side and gently unplug the lamp connector. Do not pull on the wires when unplugging.
- 5 Plug the lamp connector securely to the new AHPCO Cell.
- 6 Tighten the two screws into the bracket that secure the AHPCO cell.

⚠ CAUTION UV rays are harmful for your eyes. Do not look directly into the light. Do not touch any of the internal components except for the reset switch due to risk of electrical shock.

- 7 Plug the purifier back into its power source and turn the power button to the On position.
- 8 Slide the black reset switch to either side once, or until you hear a faint beep sound.
- 9 Unplug the purifier from its power source. Slide the shell onto the base and replace the screws.

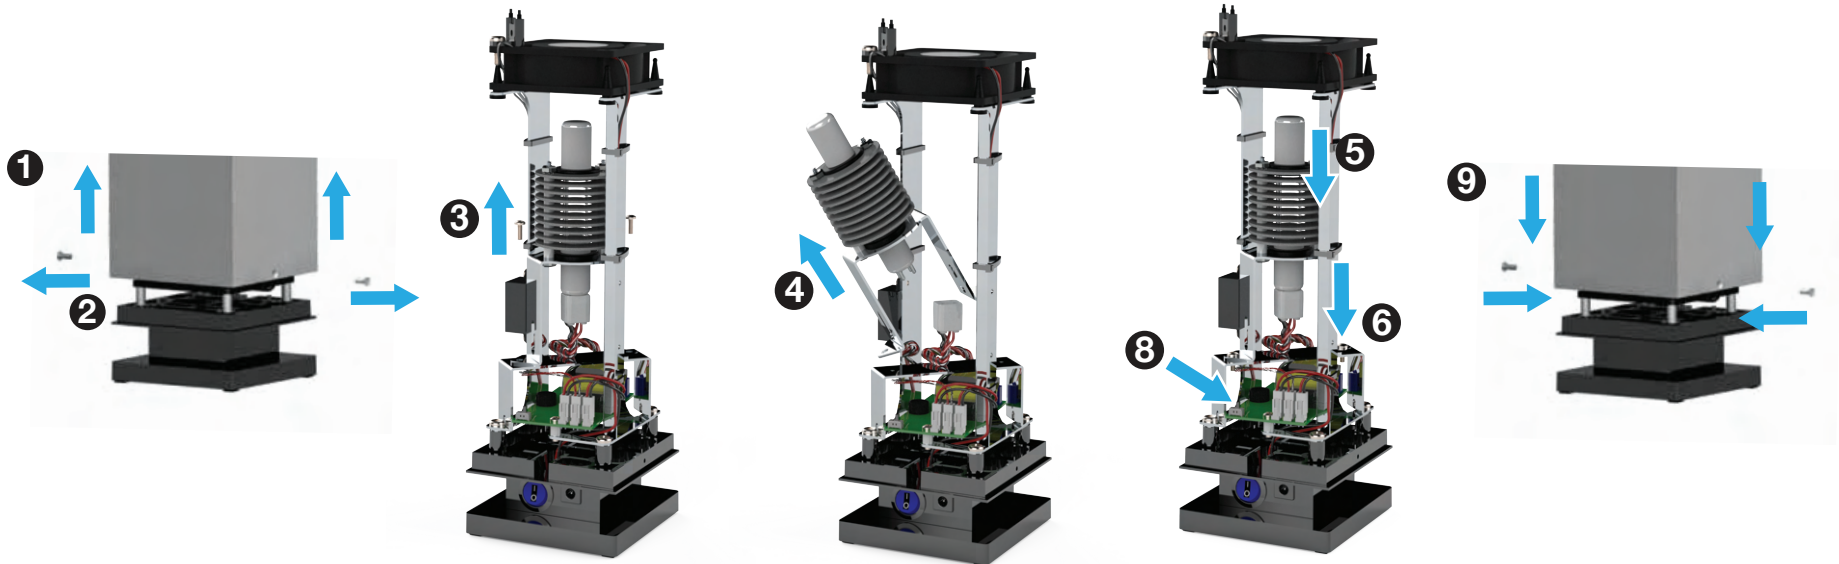

REQUIRED TOOLS:
Phillips head screwdriver

For further assistance, please contact our Customer Excellence team at 806.373.7788 or use the Contact Us form in the footer of our website www.airoasis.com.