


# Thin Profile Graphic Sign Floor Stand With Security Enclosure


PAD-CHKGRA


**INSTRUCTION - MANUAL** 

# **CONTENTS:**

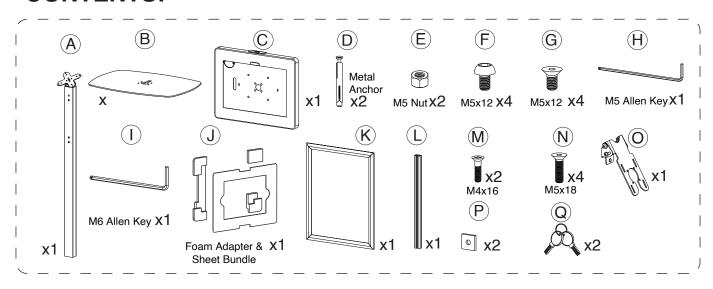

# **INSTRUCTIONS:**

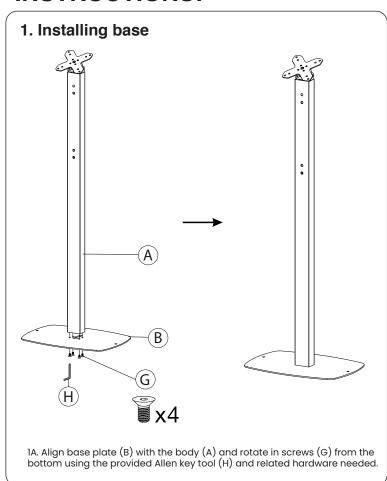

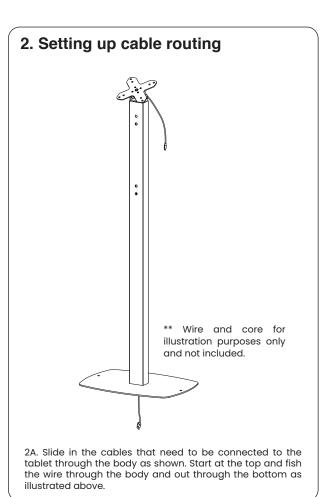







# 3. Attaching bracket to graphic panel


3B. Align mounting component (L) with the holes of graphic panel (K). Rotate in two screws (M) with screwdriver (not included) until securely fastened.

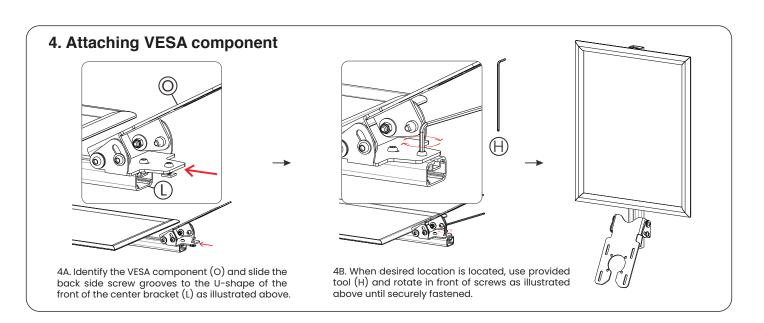

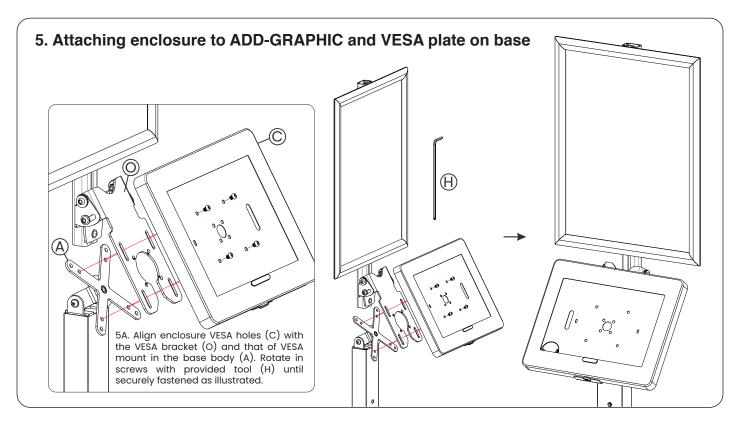

3A. Grab both mounting component (P) and slide it through the bracket (L) as illustrated.

#### 6. Setting up device & enclosure

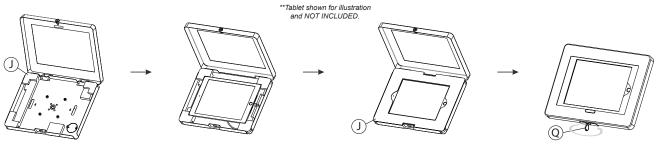


6A. Insert the appropriate foam piece (J) that is compatible with your tablet.

6B. Insert tablet as shown. Plug in power cable to tablet and cable route through the back.

6C. Place the appropriate provided tablet cover (J) to match your tablet.


6D. Close the enclosure and lock it with the included set of keys (Q).

### 7. Attaching Graphic Decal

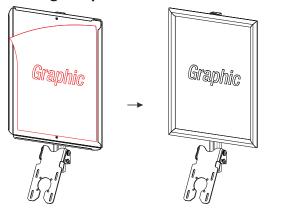


7A. Using your hands, open the edges of the frame. Place adhesive graphic onto surface as illustrated. Then close the edges of the frame when finished.

# 8. Adjusting Tilt Angle

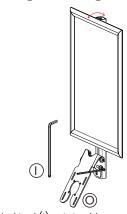


8A. Using provided tool (I), rotate side screws of VESA component (O) to loosen. Adjust to prefered tilt angle. Then rotate opposite way to tighten until securely fastened.

## 9. Removing Plastic Covers

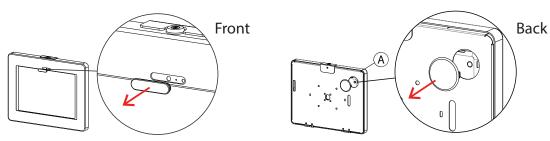

9A. Please remove the rubber front cover if you want to use iPad 10th with fron camera exposed as well back cover to expose rear camera.

# 10. (Optional). Bolting floor stand down

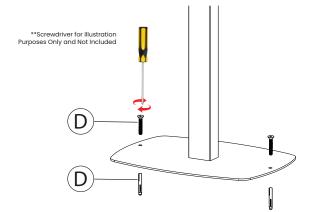

10A. Using a power drill or similar (note provided) that is the same size as your metal anchor - create a cavity in the floor. Insert the base part of the metal anchor (D), and screw in the nail component of the metal anchor (D) from above with a screwdriver (not provided) until securely tightened. Repeat for all holes.