

# Protective Case with Built-in 360 Degree Rotatable Grip Kickstand & Pen Slot

For Samsung Galaxy Tab S7 & S8 11-Inch Tablets

PAD-PCGKS8

**INSTRUCTION - MANUAL** 

#### CONTENTS



#### TABLET CASE FEATURES




**Q** 36 Taaffe Place Brooklyn, NY 11205

www.ctadigital.com

#### INSTRUCTIONS

\*\*f your iPad has a previously installed screen protector, please remove it before continuing.

#### 1. How to insert tablet into case

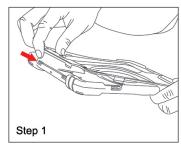

STEP 1:


Peel away plastic frame starting with the bottom of the case as shown to the left. Work your way around the perimeter, unclipping the frame where there are clips.




STEP 2: Starting at a corner of the case, peel away the sillicone jacket. Work your way around until only the back half of the hard case remains



STEP 3: Insert tablet into the back portion of the hard case

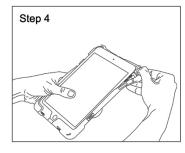

STEP 4: Starting at a corner, re-apply sillicone jacket around the back portion of the hard case

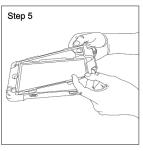


STEP 5: Re-insert the front frame

back on. Make sure you go around the perimeter of the case and clip all the clips securely and tight.

# 2. How to flip out kickstand

## 3. How to use in handheld

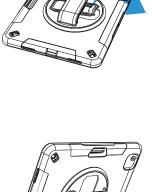

2A. Locate kickstand at case rear and fold out underneath strap.


# \*\*Tablet Not Included





 3A. Identify velcro handstrap and adjust to fitted size. Insert your hand as shown and you're ready for mobile setup.

### 4. Attaching carry strap



2C. Press kickstand back in to return to handheld mode.

2B. Display tablet at desired viewing angle.







support@ctadigital.com

