

# Tablet Desktop Security Kit

with Display Stand and Theft-Deterrent Cable

PAD-TDSK

## INSTRUCTION MANUAL



1. Peel off sticker and attach to flat side of security disc, then peel off the other side of the sticker.

Note: flat side has the circle in the middle, not the Kensington slot.

2. Wipe back of tablet clean and be sure it is dry. Firmly press the security disc onto the back of the tablet. Let sit for a few minutes to allow adhesive to fully bond.



3. Insert key into cable lock head and be sure that the lock is aligned straight in the unlocked position (and not in the locked X-shape position). Turn key clockwise to set to unlocked position.

4. Insert lock head into Kensington slot on security disc. Turn key counter-clockwise and remove to lock. Insert key and turn clockwise to unlock.

[support@ctadigital.com](mailto:support@ctadigital.com)