 



# 1. Setting up the Base




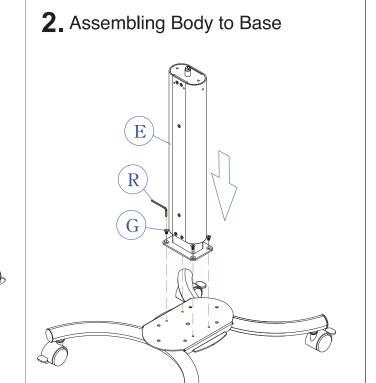



2A. Take the now assembled base with wheels, and align holes of

 
the body bottom (F) to the plate of the base top side as shown.


Using the provided tool (R), rotate in screws (G) until securely

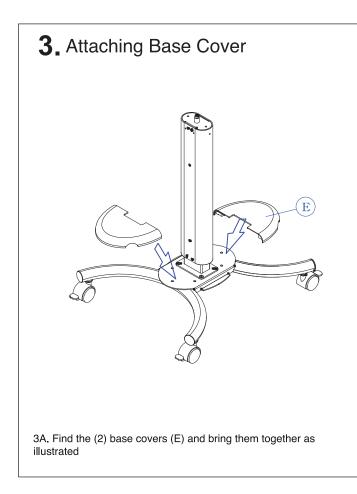

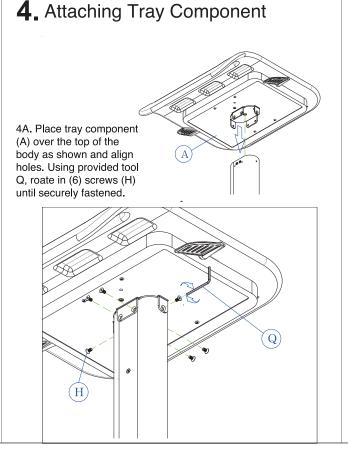

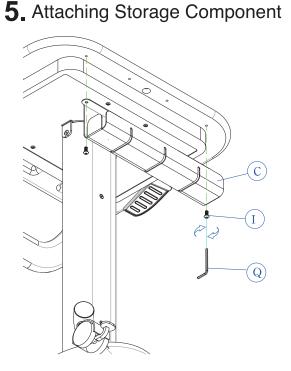




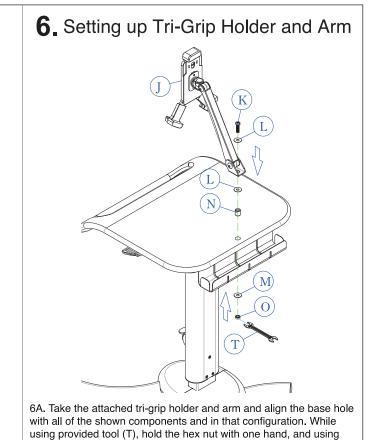


screwdriver (not provided) rotate in screw (K) until securely fastened.

### 7. Adjusting the (2) Bottom Holder Arms and Adjusting for Device **Thickness**

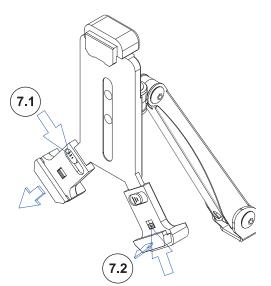

7A. Identify the switches on the holder (7.1 and 7.2). Pressing switch 7.1 allows you to extend the holder arms to match the device size bottom corners. Pressing switch 7.2 allows you to adjust to the thickness of the device. Make sure to retract for any space so it's a secure and tight fit.


# 8. Adjusting Top Holder Arm

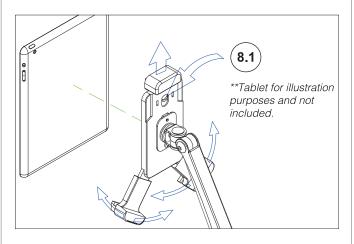


8A. Press the switch (8.1) to allow the top holder arm to adjust as needed. You should stretch it to max distance. Then place your device in and first make sure the two bottom corners of device are in the bottom two holder arms and securely setup as shown in step 7. Then push the top holder arm and retract back to the top edge of the device for a comfortable and secure fit.


## **9.** Setting up the Cable Lock

9A. Once the tablet is securely inserted into the trip grip holder, you can then use the cable lock. First anchor one end of the cable lock around the body of the pole. Loop it around the body and pull through the cable lock loop end as shown below. After looping your cable lock, identify the cable lock hole on the back of the tri-grip holder. Using the lock and key side of the cable lock, insert into the hole and turn the key, then remove key, to secure the cable lock to your holder for an anti-theft setup.

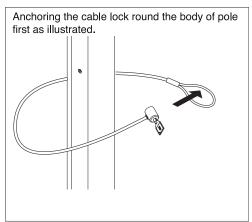

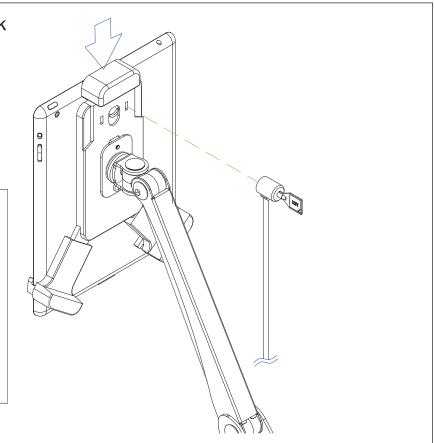



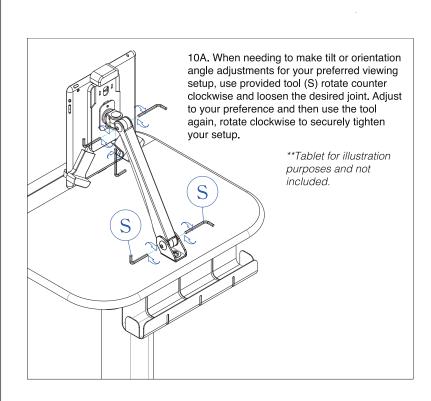

### **11.** Adjusting the Height

11A. When needing to adjust the

height, first identify the lever below the tray. Pull up on the lever and while holding, lift up or push down on the tray to adjust the height up or down to desired height. Once desired height is achiever, let go of the lever \*\*Tablet for illustration and everything is set and good to go. purposes and not included.

# **12.** Setting up Cable Routing

12A. Detach the arm tray as illustrated. Fish the device cable (not included) beneath the arm and then re-attach the tray holding the cords along the arm.

