Dreame Hair Artist

High-speed Hair Dryer User Manual



Warning

To avoid accidental injuries, such as electric shock and fire, due to improper use, please read the user manual carefully before use and keep it properly for future reference.

- •This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance.
- \cdot Cleaning and user maintenance shall not be made by children without supervision.
- ·This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- · If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- WARNING Do not use this appliance near bathtubs, showers, basins or other vessels containing water.

- · When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the appliance is switched off.
- · For additional protection, the installation of a residual current device (RCD) having a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.
- CAUTION In order to avoid a hazard due to inadvertent resetting of the thermal cut-out, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.






- \cdot Do not use this device in a bathtub, shower, or water-filled reservoir.
- ·This product is equipped with a non-self-resetting thermal cut-off safety device to prevent overheating. If the product cuts out due to overheating, please disconnect the plug from the mains supply socket and leave the product to cool.
- · Do not block the air inlet and air outlet in order to avoid a hazard.
- · Please avoid getting your hair caught in the air inlet when using the appliance.
- · Do not touch hot surfaces, such as the air outlet, when using the appliance and immediately after the appliance is turned off.


- · Do not touch any part of the plug or product with wet hands in order to avoid electric shock.
- · Please unplug the hair dryer when it is not in use and before a service or repair.
- · Please ensure that the power cable is not twisted or knotted when storing the hair dryer to avoid damaging the power cable.
- · Please keep the power cable away from any heat sources and a place where its protection capability may be compromised.
- · Do not use the hair dryer in places where aerosol (spray) products are used or where there are flammable sources.
- · Do not use the hair dryer for any other purpose than drying hair, such as drying clothes or other items
- · Please use the hair dryer according to the rated power. Do not use a universal plug or other voltage converter to avoid a hazard.
- · If the hair dryer is abnormal or faulty, contact the manufacturer for repair and do not disassemble it by yourself.

Product Introduction

Dreame Hair Artist High-speed Hair Dryer

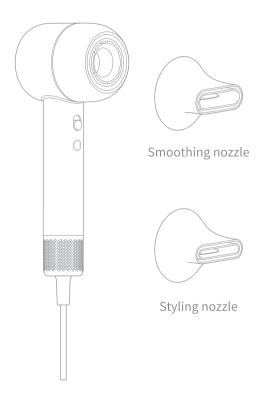

Function Description

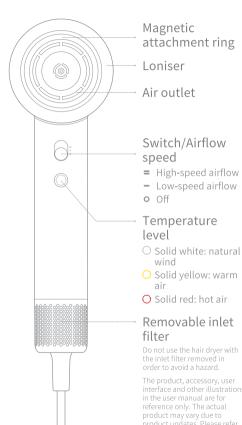

Gear Features

Switch/Airflow speed

Push the toggle switch up or down to quickly switch between two airflow speeds. Please ensure that the switch is in the off position before connecting the power plug.



Temperature level

Brifly press the bottom button to switch between natural air, warm air, and hot air,

Press and hold the bottom button to switch to natural air and release to return to the original gear.



natural air for styling hair.

Natural air (O)

Warm air (O) Provides ideal drying to prevent damage to hair


Hotair (○) Suitable for quickly drying wet hair. from overheating.

Nozzle Features

The magnetic nozzle is removable. The nozzle can be easily installed by aligning it with the magnetic attachment ring. The nozzle is 360° rotatable and ease to use.


Smoothing nozzle

Produces a wider airflow with a soft and gentle touch for fast drying and smoothing.

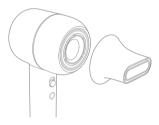


Styling nozzle

Efficiently outputs a fast, concentrated airflow for targeted hair styling.

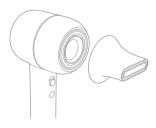

Cleaning and Maintenance

 - ① The filter needs regular cleaning and maintenance to avoid being clogged by objects and ensure smooth air intake.
- · Please ensure that the hair dryer is turned off and the plug has been removed from the power outlet before cleaning the filter.



• The inlet filter is magnetically fixed. Grab the handle and pull the filter straight down to remove it from the handle.



Cleaning and Maintenance

- △ Do not use water to wash the stainless steel filter, otherwise a failure may be caused.
- · Use tools, such as dry lint-free cloth, soft brushes, or toothbrushes, to remove any objects attached to the inlet filter and stainless steel filter.



· After cleaning, insert the inlet filter along the slot on the handle until you hear a click, which indicates that the magnet is in place and installation is complete.



Specifications

Product name	Dreame Hair Artist High-speed Hair Dryer
Rated voltage	220-240V~
Rated frequency	50/60Hz
Rated power	1400W
Product dimensions	290×80×98mm
Date of manufacture	Please see product packaging.
Standards implemented	IEC/EN 60335-1, IEC/EN 60335-2-23, EN55014-1, EN55014-2, EN IEC 61000-3-2, EN 61000-3-3

Common faults and Troubleshooting

Common faults	Possible causes	Solution	
The device does	The circuit board is damaged	Return to the factory for repair.	
not work after being turned on.	The device is not connected to a power source	cable is properly plugged in. Restart after	
The white light is flashing as an alert.	The power cable is abnormal.	confirming that there are no abnormalities. Failure still exists. Return to the manfuacturer for repair.	
The yellow light is flashing as an alert.	The air outlet or air inlet is	·Check the air outlet/inlet for foreign objects. Restart after	
The red light is flashing as an alert.	abnormal	confirming that there are no abnormalities and the product has cooled down.	
The internal coil turns red.	The heating wire is abnormal.	· Failure still exists. Return to depot.	
The level indicator is not illuminated.		Return to the factory for repair.	
The light effect is abnormal.	The key board is damaged.		
The buttons do not work.			
The power cable/plug is unusually hot.	The power cable is damaged.		
There is a burning smell when in use.	Internal parts are damaged.		

After-sales Service and Support

Dreame Technology hereby declares that the product complies with relevant EU standards, regulations and amendments.

Warranty policy

- · Services covered by the warranty are available from the date of purchase by the consumer (subject to the consumer's valid purchase invoice).
- During the product's warranty period, if a fault listed in the "Common faults" table occurs and return to depot is required, the following repair services will be provided free of charge after inspection and confirmation by our after-sales service centre.

Warranty policy	Warranty conditions	
Return or exchange	Within seven days of the day of receipt	
Exchange or repair	Within 8–15 days of the day of receipt	
Repair	Within 12 months of the day of receipt, if the warranty policy period as stipulated by local law is longer than the commitment period stipulated in the user manual, then local law shall prevail.	

Non-warranty Terms

Please note that any of the following circumstances are not covered by the warranty.

- · Unauthorized repair, misuse, collision, neglect, abuse, liquid immersion incident, modification, improper use of accessories that are not for the product, or tearing, damaging, tampering, or modifying labels and anti-counterfeiting marks.
- · The warranty period has expired.
- · Damage is caused by force majeure.
- · Faults are not listed in the "Common faults" section.
- Faults of this product and its accessories are included in the "Common faults" section but are due to human causes.
- \cdot Request to use the product not in accordance with this manual.
- · Normal wear and tear.

Product Warranty Card

User name	
Correspondence address	
Phone number	
Product name and model	
Product serial number	
Purchase date of the product	

Repair record

	Fault description and parts replacement	Repair date	Repair center
1			
2			

Europe- EUdeclaration of conformity

We Dreame Trading (Tianjin) Co., Ltd. hereby, declares that this equipment is in compliance with the applicable Directives and European Norms, and amendments. The full text of the EU declaration of conformity is available at the following internet address: https://glob-al.dreametech.com/

Disposal and recycling information

All products bearing this symbol are waste electrical and electronic equipment (WEEE as in directive 2012/19/EU) which should not be mixed with unsorted household waste. Instead, you should protect human health and the environment by handing over your waste equipment to a designated collection point for the recycling of waste electrical and electronic equipment, appointed by the government or local authorities. Correct disposal and recycling will help prevent potential negative consequences to the environment and human health. Please contact the installer or local authorities for more information about the location as well as terms and conditions of such collection points.

For further electronic instructions, please go to website: https://global.dreametech.com/