 


Masticating Juicer

Operation Instruction
JYZ-E21C-US02

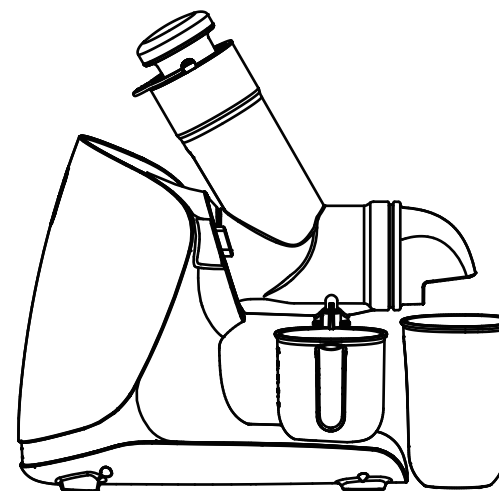

IMPORTANT SAFEGUARDS

 
When using electrical appliances, basic safety precautions should always be followed including the following:

1. Read all instructions.
2. To protect against risk of electrical shock do not put any part of appliance in water or other liquid.
3. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
5. Avoid contacting moving parts.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or electrical or mechanical adjustment.
7. The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock or injury to persons.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to " off," then remove plug from wall outlet.
12. Do not use appliance for other than intended use.
13. A short power-supply cord (or detachable power-supply cord) is to be provided to reduce risks resulting from becoming entangled in or tripping over a longer cord.

SAVE THESE INSTRUCTIONS

SAVE THESE INSTRUCTIONS

SPECIFICATION / IDENTIFICATION OF PARTS

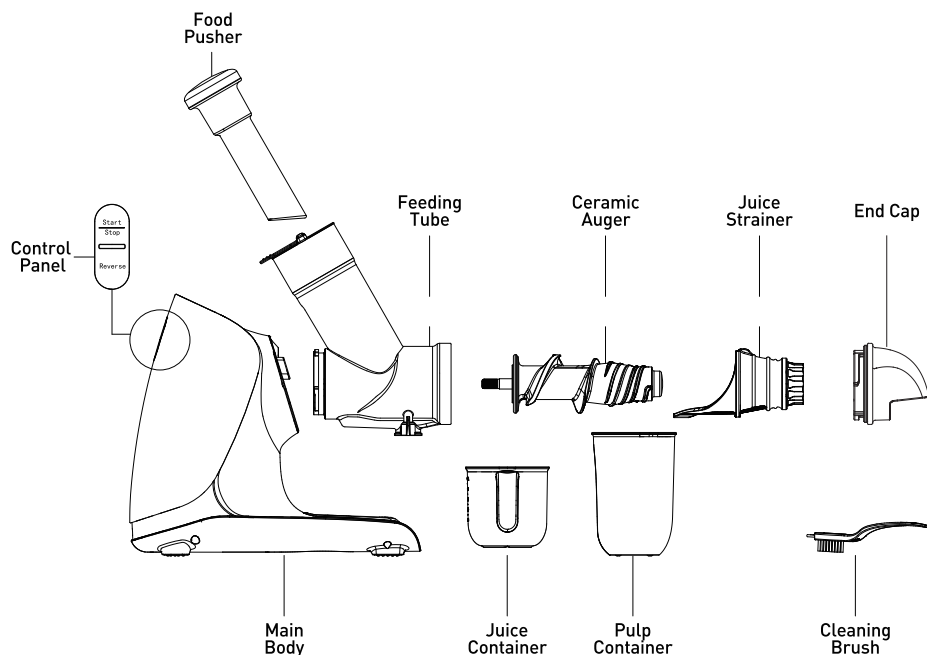

IMPORTANT INSTRUCTIONS

Thank you for buying Joyoung appliance. To enable your product to give you many years of perfect trouble free service, we recommend you to read the product manual before use. Read and follow all the instructions in this manual even if you are familiar with the product, and find a place to keep it handy for future reference.

DO'S

- ✓ Slow juicer is for household use only.
- ✓ This Appliance is not intended for use by persons (including children) with reduced physical, sensory and mental capabilities, or lack of experience & knowledge unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- ✓ Place the appliance on a horizontal, flat and stable working surface
- ✓ Always disconnect the appliance from the supply if it is left unattended or before assembling, disassembling or cleaning.
- ✓ In order to ensure your children's safety, please keep all packaging (Plastic bags, boxes etc.) out of their reach.
- ✓ Store the appliance in a clean and dry place.
- ✓ Make sure every detachable part is installed properly before connecting to power.
- ✓ Keep the food size smaller than the feeding tube mouth size and use pusher for pushing food slowly.
- ✓ Components like feeding tube, ceramic auger which comes in contact with the food might get discolored, its normal phenomenon.

DON'TS

- × Do not pull the cord to take out the plug from the socket. Grip the plug and pull out the socket after duly switching off the power supply.
- × Do not operate the appliance without any ingredient.
- × Do not place the appliance on a wet surface.
- × Do not immerse cord, plugs, or appliance in water or other liquid. Do not plug in the appliance or operate the control panel with wet hands.
- × Do not let the appliance operate unattended.
- × Do not put your fingers or other objects into the feeding tube while juicer is in operation. If food becomes lodged in the feeding tube, use food pusher or another piece of fruit or vegetable to push it down. When this method is not possible, turn the motor off and disassemble juicer to remove the remaining food.
- × Do not process hot food.

- × Do not heat the product directly, or put all the plastic parts into the disinfection cabinet, washing machine or hot water above Corrosive liquid 60 degree. And don't use steel wool and Abrasive cleaner and Corrosive liquid to wash the product.
- × Do not place the appliance in hot, Strong magnetic, Inflammable and explosive gas and other unfit environment.
- × Do not sterilize the plastic parts so as to avoid thermal deformation and damage.

CAUTION

 
- If the appliance is blocked due to overloaded or too hard food, the appliance will automatically stops after few seconds. Please switch Off the appliance and clean the feeding tube before restarting.
- Do not run the appliance continuously for more than 12 minutes. Appliance will automatically stop after 12 min. and its get started after 20-30 min. or till the motor cooled down to room temperature.
- Running speed has been set to an ideal state so no adjustment required.
- Sugar cane is forbidden to be juiced with this appliance.

BEFORE FIRST USE

1. Remove all packaging material and remove any stickers or labels from the appliance.
2. Thoroughly clean the components that comes into contact with ingredient with water.

 
INSTRUCTIONS FOR USE

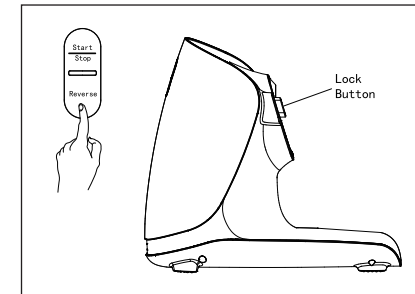

Control Panel

 


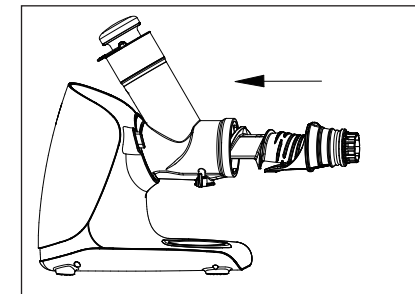

1. "Start/ Stop": Press start button to start the appliance, press again to stop the appliance.
2. "Reverse": When the juice/ pulp hole is blocked, press the "Reverse" button for 5 seconds at a time, then press the start/stop button to continue working.
3. Lock button: Press and hold the lock button and turn the feeding tube in clockwise direction for removing the feeding tube from main body.

 
HOW TO ASSEMBLE

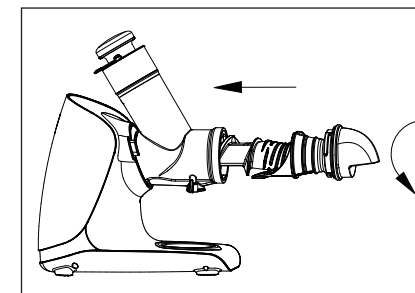

1. Align feeding tube frame and main body. Press lock button and turn feeding tube counter clockwise  from  to the position until the lock button clicks.
2. Slide the juicing strainer over the ceramic auger.
3. Align the shaft of the ceramic auger with the hole in the feeding tube, then push the ceramic auger with juice strainer into main body.



4. Place the end cap and rotate in anticlockwise direction until it matches the mark on feeding tube from  to  position.

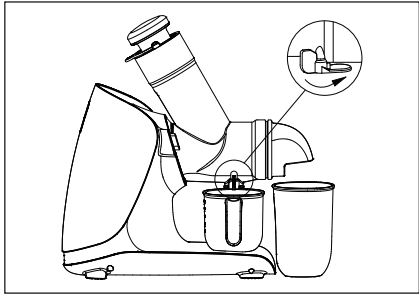

5. Finally, place containers under the juice outlet and pulp outlet and during operation open the juicer outlet cap by turning it in clockwise direction.

HOW TO OPERATE

 
1. Assemble all parts as described in "How to Assemble". Insert the power plug into an outlet. Open the juice outlet cap.
2. Press the START/STOP button. Insert cut fruits or vegetables into the feeding tube, a few pieces at a time. If the pieces are too big for the rotating lid, flip it to drop the pieces inside the feeding tube. Use the food pusher to push the fruit or vegetables gently down the inlet tube. Leave the unit running as you feed in the ingredients.
 - Feed ingredients little by little and at a slow pace, allowing all the pulp to extract. Do not force or overstuff.
 - If the feeding tube is blocked due to overloaded or too hard food, the appliance will automatically stop after few seconds. Please switch off the appliance and press the "Reverse" button for 5 seconds at a time, then press the start/stop button to continue working. If after reverse function food is still blocked then clean the feeding tube before restarting.
3. After extraction is completed, press START/STOP and close the juice outlet cap. Unplug unit from outlet.

Note: The unit has a protection chip and will automatically stop after 12 minutes of continuous operation. Wait for about 20-30 minutes to let the motor cool down before using the appliance again.

JUICING TIPS

1. Choose fresh fruits and vegetables with higher water content, such as apples, pears, pineapple, watermelon, citrus fruits, carrots etc.
2. Cut fruit into pieces small enough to fit the feeding tube opening.
3. Peel the thick skin and remove large and/or hard seeds and stones from fruits such as mangoes and pineapples.
4. Fresh apple juice turns brown quickly because of oxidation. This can be slowed down by adding a few drops of lemon juice.
5. Leafy vegetables with stems (Like Spinach) can also be used with the slow juicer.
6. Soft, fleshy fruits such as bananas, papayas, avocado, and mangoes are more suitable for blenders.
7. Do not feed pulp into the juicer for reextraction.

HOW TO DISASSEMBLE AND CLEAN

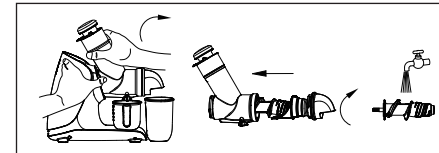

1. Press and hold the lock button while turning feeding tube assembly clockwise from to the position.
2. Remove the end cap from the feeding tube assembly, followed by the juice strainer, then the ceramic auger.
3. Wash the juice and pulp containers, feeding tube, food pusher, ceramic auger, juice strainer, and end cap in water. Use the supplied cleaning brush to clean the parts thoroughly.
4. Wipe main body with a soft, damp or dry cloth.
5. Dry all parts thoroughly and keep it in a dry, well-ventilated place beyond the reach of children. Avoid direct sunlight.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Juicer does not run after power is switched on	Power plug is not plugged	Insert power plug into an outlet
	Feeding tube assembly is not attached to the main body correctly	Make sure feeding tube assembly is properly attached
	Protection is activated: Unsuitable ingredients used; volume of ingredients too big	Use suitable ingredients and do not overstuff the juicer
The juicer suddenly stops	Intelligent protection chip is activated; operating time is longer than the rated duration	Follow the rated duration (12 minutes). To resume operation, please wait for 20-30 minutes before turning on the unit again.
	Feeding tube assembly is jammed	Press Reverse button to loosen the jammed ingredients Or remove the feeding tube assembly and take out the ingredients causing the jam
Abnormal noise and vibration during operation	The feeding tube assembly parts are not installed and assembled correctly	Make sure the feeding tube assembly is properly installed and in place
Juice is leaking from the slow juicer	The juice outlet cover is open	Close the juice outlet cover
	Feeding tube assembly is not assembled properly	Assemble parts correctly