 


User's Manual

Mega Power Stand Blender

L18-P552U

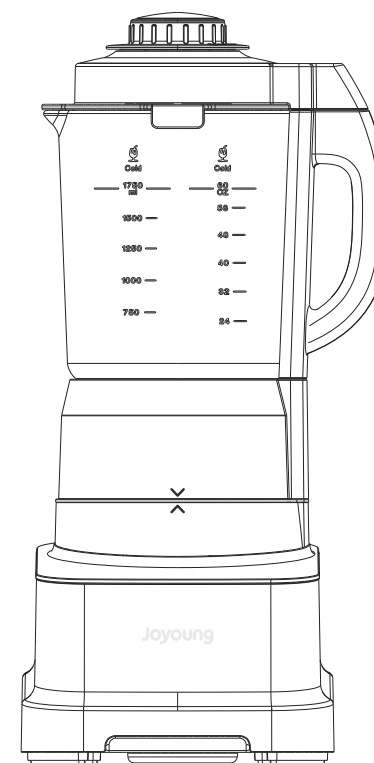

SAFETY WARNING

Read all instructions prior to using the appliance and its accessories.

Carefully observe and follow all warnings and instructions. This unit contains electrical connections and moving parts that potentially present risk to the user.

Be careful handling, the blender the blade is very sharp.

Turn off Before replacing accessories or accessible parts, which move during operation, and before assemble and disassembling while cleaning before cleaning or maintain, turn off the appliance and disconnect it from the mains by pulling the power cord from the power socket.

Turn the appliance OFF, then unplug the appliance from the outlet when not in use, before assembling or disassembling parts, and before cleaning. To unplug, grasp the plug by the body and pull from the outlet. NEVER unplug by grasping and pulling the flexible cord.

Before use, wash all parts that may contact food.

DO NOT use this appliance outdoors. It is designed for indoor household use only.

DO NOT operate any appliance with a damaged cord or plug, or after the appliance malfunctions or is dropped or damaged in any manner. This appliance has no user-serviceable parts. If damaged, contact Joyoung for servicing.

To protect against the risk of electric shock, DO NOT submerge the appliance or allow the power cord to contact any form of liquid.

DO NOT allow the cord to hang over the edges of tables or counters. The cord may become snagged and pull the appliance off the work surface.

DO NOT allow the unit or the cord to contact hot surfaces, including stoves and other heating appliances.

ALWAYS use the appliance on a dry and level surface.

DO NOT allow children to operate this appliance or use as a toy. Close supervision is necessary when any appliance is used near children.

This appliance is NOT intended to be used by people with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Keep hands, hair, and clothing out of the container when loading and operating

DO NOT operate the appliance with an empty container.

DO NOT microwave any containers or accessories provided with the appliance,

NEVER leave the appliance unattended while in use.

Be careful when pouring hot liquid into the blender. Sudden hot steam may eject the hot liquid.

DO NOT process dry ingredients without adding liquid to the Joyoung blender. They are not intended for dry blending.

NEVER operate the appliance without lids and caps in place.

DO NOT attempt to defeat the interlock mechanism. Ensure the container and lid are properly installed before operation.

Before operation, ensure all utensils are removed from containers. Failure to remove utensils can cause containers to shatter and potentially result in personal injury and property damage.

DO NOT open the pitcher's pour spout cap while blender is operating.

If you find unmixed ingredients sticking to the sides of the pitcher, stop the appliance, remove the lid, and use a pusher to dislodge ingredients.

NEVER insert your hands into the pitcher, as you may contact one of the blades and experience a laceration.


DO NOT attempt to remove the container or lid from the motor base while the blade assembly is still spinning. Allow the appliance to come to a complete stop before removing lids and containers.

SPECIFICATIONS

Product Name	Mega Power Stand Blender
Model	L18-P552U
Voltage	120V~60Hz
Power Supply	1200W

PACKAGE CONTENTS

 1. Countertop Blender

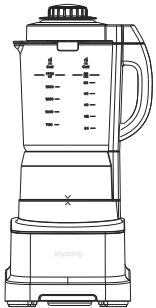

2. User Manual



 
3. Recipe



4. Warranty Card



GETTING TO KNOW
YOUR COUNTERTOP BLENDER

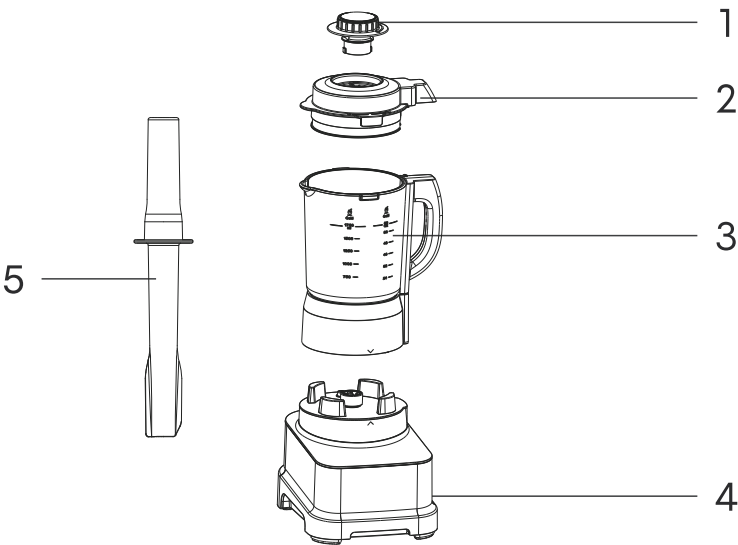







Parts:

1. Plug
2. Power Pitcher Lid: The lid has a seal that closes the blender jug tightly. It has a hole in the center to make the addition of ingredients easier during blender operation. Also it is convenient to put the pusher to stir.
3. 1.75L Pitcher: The large-capacity Jug is made of glass which is safer.
4. Motor Base: The base have powerful motor.
5. Pusher: help stir food

CONTROL PANEL surface



Introduction to control touch keys

-  Start the function or cancel the running function.
-  Long press this button, the machine will continue to stir at the highest level, and work for a maximum of 1 minute.
-  Select the function corresponding to the one-key-to-talk. Include Menu: ICE CRUSH、ICE CREAM、SMOOTHIE、EXTRACT、SOUP、SAUCE、NUT BUTTER、CLEAN.
-   Add or cut time as you want
-  1-9 speed from slow to highest speed.

USING YOUR COUNTERTOP BLENDER

1. Plug in motor base and place on a clean, dry, level surface such as a countertop or table.
2. Lower the Pitcher onto the motor base let it fixed on the motor base.

NOTE:

 
 
 
 
Sure to align the base with the mixing cup, otherwise it will not work

3. Add ingredients to the pitcher.
4. Place the lid and plug on the pitcher. Press the power button to turn unit on. The available program buttons will illuminate and the unit will be ready for use. Select the desired menu function key.
5. If want to put addition ingredients during the process, lower the speed or stop to take off plug to add.
6. For mixing thoroughly can put pusher through the center of hole to stir.

NOTE:

Please keep the mixing cup stable during use, if need please press the top cover with your hands.



7. Once the ingredients have reached your desired consistency, press START/STOP, and wait for the unit to come to a complete stop.

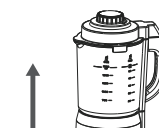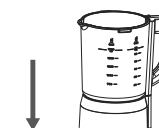

8. Remove the pitcher from the motor base by lifting up.

9. To pour out thinner mixtures, ensure the lid and pusher are taken off , then the pour spout.

  10. Turn the unit off by pressing the start/stop button.
Unplug the unit when finished. Refer to the Care & Maintenance section for clean and storage instructions.

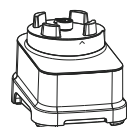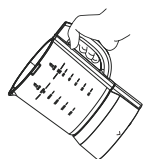

A Detailed instructions for program button

1. Install the mixing pitcher assembly with the ingredients on the base and turn on the power;
2. Select the function corresponding to the recipe by touching the "Munu" key, such as "crushed ice";
3. Press the "Start/Stop" button, the product starts to run;
4. After the food is processed, the product will automatically stop running, and 5 "drops" will sound to indicate the completion of the food preparation. After the blade has completely stopped rotating, remove the mixing pitcher and pour out the food.

NOTE:

Just increase and decrease the time according to the amount of ingredients

B DIY function instructions

1. Put the ingredients into the cleaned mixing pitcher, then install the mixing pitcher assembly on the host and turn on the power;
2. Click the "Time+" button, the "Time-" button flashes, the interface displays 00:05 you can long press the "Time+" button to adjust the required mixing time, such as 2 minutes and 30 seconds;

Note: After the time is increased to 6:00, it will cycle to the initial time 0:05

3. Click the "speed control" button, the "speed control" button flashes, you can continue to click the "speed control" button to adjust the required stirring speed, such as 6 gears; motor gears are 1 to H gears.
4. Press the "Start/Stop" button, the product starts to run;
5. After the food materials are processed, pour out the food.

NOTE:

Just increase and decrease the time according to the amount of ingredients

Recommendation

- For proper ice cube crushing, observe the maximum permitted volume of 1000mL.
- Minimum quantity of 500g is necessary when processing nuts or making butter, nuts must be kept within the blade working area by pushing them by stamper during the nut butter process.
- Never use the pusher individually without the lid.

Clean and Maintenance

Do not use coarse and aggressive cleaning agents (eg sharp, objective, scrapers, diluting agents or other solvents)

Clean drive unit with a soft and wet cloth with a little detergent.

Pitcher, lids, and plug are dishwasher safe. Ensure the pusher and lid are removed from the container before placing in the dishwasher.

To clean the blade, pour about 0.5 liter of clean water in the container, select the pre-set program "-clean", and turn on the appliance . In case of larger contamination of the knife , repeat the procedure several times, or 1 cup of water, add small amount of detergent and switch the blender on for 1 minutes.

TROUBLESHOOTING

Please read the following before calling your service center.

Problems	Solution
Motor doesn't start or knife doesn't rotate	Make sure the unit is plugged in.
Countop blender suddenly turn off while running	Unplug the blender and allow the blender to cool down for about 30 minutes If you are still unable to start your machine, please contact customer service.
Food is unevenly chopped	Either you are put too much food at once, or you are not pulsing properly. Reduce the amount of food in the cup.
Countertop blender has a burning	There may be burning smell when using the blender for the first few times. This is normal.
Food is too finely chopped or too watery	The food has been over processed. Use short pulses for best results.

If your Countertop blender should malfunction or fail to operate, please check the following:

- Is the countertop blender plugged in?
- Turn off the countertop blender for 10-15 seconds, then turn it back on. If the countertop blender still does not start, allow it to cool for 30 minutes before turning it back on.