



# izybaby

*Life gets easier with a baby*



User manual  
The Nomad  
Bottle Warmer™





# DISCOVER THE NOMAD BOTTLE WARMER™



**WIRELESS AND PORTABLE**  
To keep your baby's bottle ready  
anytime, anywhere



**HYGIENIC**  
Easy maintenance



**6 HOURS OF AUTONOMY**  
To keep warm milk or to make  
up to 5 bottles



**SMALL AND ERGONOMIC**  
Its smaller design enables you  
to take it everywhere



**CONSTANT HEATING**  
Preserves the antibodies  
and nutritional values of milk



**TEMPERATURE ADJUSTMENT**  
Temperature setting  
between 37 °C and 50 °C



**ECO-FRIENDLY**  
Guaranteed BPA free



**LED DISPLAY**  
Indicates the initial temperature  
of milk or water and changes  
as the temperature increases





# DISCOVER THE NOMAD BOTTLE WARMER™

Please read all instructions in this manual before using the Nomad Bottle Warmer™. Follow them carefully and only use the Nomad Bottle Warmer™ for its intended purpose.



**CAUTION: No changes can be made to this product.**



1. Secure opening and closing system
2. Removable cap
3. LED display for temperature and battery level
4. Power buttons
5. Temperature control buttons
6. Charging slot

# CONTENTS OF THE BOX

1. 1x Nomad Bottle Warmer™
2. 1x USB cable
3. 1x Storage bag
4. 1x Thank you note + QR to download the user manual



# HOW TO SAFELY USE THE NOMAD BOTTLE WARMER™

● The Nomad Bottle Warmer™ should not be used by children under the age of 12.

● Supervision is required when the Nomad Bottle Warmer™ is used by children or anyone with diminished mental or physical abilities.

● Please clean the Nomad Bottle Warmer™ before use

● Be sure to turn off the Nomad Bottle Warmer™ after use. Never use the Nomad Bottle Warmer™ dry. It should always be filled with milk or liquid when the warmer is ON.

● Keep the charging port clean and dirt free.

● If the Nomad Bottle Warmer™ is damaged, deteriorated or displays any signs of malfunction, please stop using it immediately.

● Do not leave the Nomad Bottle Warmer™ in direct sunlight or near a hot spot.

● The Nomad Bottle Warmer™ is equipped with a rechargeable polymer battery. Do not use it in an environment with strong static electricity or magnetic fields. Do not use in a microwave, sterilizer, or dishwasher.

● Please unplug the Nomad Bottle Warmer™ after it is fully charged.

● Use this device only for its intended purpose. If you cannot find the answer to any of your questions, please contact customer service at [info@izybaby.com](mailto:info@izybaby.com)

## CAUTION


● Novice users should be supervised when using the Nomad Bottle Warmer™. They must fully understand the instructions before use.

● Children should not play with the Nomad Bottle Warmer™ and should not use it unsupervised.

● The Nomad Bottle Warmer™ should only be powered by a very low safety voltage and only with the supplied USB cable. The use of any other USB cable is prohibited.

● Users must follow the instructions in this manual.

● The Nomad Bottle Warmer™ battery must be removed before disposal. If you remove the battery, the Nomad Bottle Warmer must be disconnected from the power supply. The battery should then be safely disposed of.

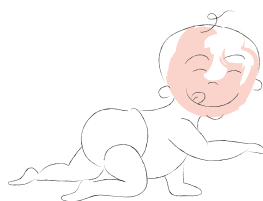

# HOW TO PREPARE A BOTTLE



Unscrew the cap of the Nomad Bottle Warmer™.



Pour breast milk, water, or infant formula into the Nomad Bottle Warmer™. It is best to heat the water in the Bottle Warmer and add the formula to the bottle once the water is heated.



Screw the cap back on the Nomad Bottle Warmer™.



Hold the power button for 1 second to check the battery level.



Hold the power button for 3 seconds to activate the bottle warmer: the default temperature setting is 37 °C.



Press the "+" or "-" button to set the temperature. The temperature can be set between 37 °C and 50 °C. The perfect temperature for breast milk is 37 °C.

*Beep beep*

Once the temperature is reached, the Nomad Bottle Warmer™ will emit a gentle beep.



Remove the safety cap and pour breast milk, water, or infant formula into your bottle.



In 5 minutes, your bottle is ready, anywhere, anytime :)



# RIGHT USAGE PRACTICES & TIPS



## DO I NEED TO STERILIZE THE NOMAD™ BOTTLE WARMER AFTER EVERY USE?

No, it is not necessary to sterilize it after every use, however a first sterilization is mandatory. You can consult the sterilization method in our user manual. Most of all, do not put the lid in a pan of boiling water otherwise you won't be able to use it anymore.



## HOW LONG DOES THE NOMAD™ BOTTLE WARMER TAKE TO HEAT MILK OR WATER?

It takes 5 minutes for the Nomad™ Bottle Warmer to heat 150ml of milk or water (at room temperature 20°C/22°C) till 37°C. Once the temperature has been attained, the bottle warmer will stop heating and keep the liquid warm. The heating time varies according to the quantity of liquid, its initial temperature, the desired temperature and the battery level.



## HOW TO USE THE MAINTAIN WARM FUNCTION?

You just need to set the desired temperature and wait for the Nomad Bottle Warmer to attain the latter. Once the temperature has been achieved, simply leave it on and it will keep your water or milk warm. At full charge, the autonomy is 6 hours for the maintain warm function. This autonomy varies according to the number of bottles that you are going to prepare with the same load.



## WHAT ARE THE BEST PRACTICES FOR USING IT?

After using the Bottle Warmer 2 or 3 times at home, we advise you to charge it even if the battery is not exhausted. As a result, the heating time is always optimized and the Nomad Bottle Warmer is always available for your outdoor outings or for your travels.



## WHICH ADAPTER SUITS THE NOMAD™ BOTTLE WARMER?

You must use a fast charging main adapter of at least 10W or more to recharge the Nomad Bottle Warmer. To make sure that you are using the correct adapter, it must be written 5v 2a (5Vx2a=10W) on the top. The latest generation smartphones can also be used with such an adapter. Please use the supplied USB C cable only.



## HOW LONG DOES THE NOMAD™ BOTTLE WARMER TAKE TO CHARGE?

When the battery has been completely discharged, it takes about 5 hours for the Nomad Bottle Warmer to be charged again.



## HOW DO I KNOW IF MY NOMAD™ BOTTLE WARMER IS COMPLETELY CHARGED?

While charging, dynamic barcodes appear. When the Nomad Bottle Warmer is completely charged, these automatically disappear and it can remain plugged in because it switches off automatically.



## HOW TO CHECK THE BATTERY LEVEL?

You simply need to briefly press (2 seconds) the power button to display the battery level on the LED screen. There are 6 battery levels: 100-80-60-40-20-Lo.



## WHAT DOES THE "LO" MESSAGE ON THE LED SCREEN MEAN?

It means that the battery is dead and the Nomad Bottle Warmer needs to be recharged.





## HOW TO CLEAN THE NOMAD BOTTLE WARMER™

1. Unplug the power cord.
2. Turn off the Nomad Bottle Warmer™ by pressing the power button for 3 seconds.
3. Use a soft brush and soap with warm water to clean the inside of the stainless-steel part. After cleaning, leave it to dry. You can clean or rinse the Nomad Bottle Warmer™ with clean water between uses if you are using it outdoors.

**CAUTION:** DO NOT IMMERSE the Nomad Bottle Warmer™ IN WATER. THE PRODUCT IS NOT WATERPROOF.

## HOW TO STERILIZE THE NOMAD BOTTLE WARMER™

1. Unplug the power cord.
2. Turn off the Nomad Bottle Warmer™ by pressing the power button for 3 seconds.
3. Fill with boiling water and let it sit for 10 minutes. After sterilization, leave it to dry on a clean, dry space.

**CAUTION:** DO NOT IMMERSE the Nomad Bottle Warmer™ IN WATER. DO NOT PUT IT IN THE DISHWASHER. THE PRODUCT IS NOT WATERPROOF.

## YOU ARE HAVING ISSUES WITH YOUR NOMAD BOTTLE WARMER™

If your Nomad Bottle Warmer™ does not work when you press the on/off button, please recharge for 5 hours with the appropriate USB cable. Once recharged, you can turn the Nomad Bottle Warmer™ back on.



# NOMAD BOTTLE WARMER™ WARRANTY POLICY

Izybaby gives a lifetime warranty 2 years from the date of original purchase on products and it covers defects in design and materials resulting from normal use of the product. Izybaby's lifetime warranty takes over the statutory 2-year warranty and therefore starts at the end of the statutory 2-year warranty. The warranty covers parts that affect the operation of the device. It does NOT cover normal wear and tear of the product, including battery, visual deterioration, or damage caused by an accident, a fall, misuse, or neglect. Breakage, loss, theft or tampering due to an external event are also excluded from the warranty. Any attempt to open or disassemble the device (or its accessories) shall cancel the warranty.

During the warranty period, if you discover a flaw and inform izybaby at [info@izybaby.com](mailto:info@izybaby.com), we will replace the product free of charge, based on our judgment. Warranty claims must be supported by reasonable evidence. To support your warranty claim, please save your original purchase receipt. Replacement products that are subject to a warranty claim are eligible for a lifetime warranty renewal.

To make a warranty claim, contact us at [info@izybaby.fr](mailto:info@izybaby.fr). Please include your name, original purchase receipt, order number and be sure to include photos and/or videos of the defective product so we can proceed with an exchange.



## HOW TO SAY GOOD BYE TO THE NOMAD™ BOTTLE WARMER

The Nomad™ Bottle Warmer should not be considered as household waste. It must be disposed of in a suitable recovery and recycling structure.

# LIABILITY WAIVER

● Users of the Nomad Bottle Warmer™ use it strictly at their own risk. izybaby and its distributors shall not be liable for any injury or damage to persons or property arising directly or indirectly from the use of the Nomad Bottle Warmer™. Furthermore, izybaby and its distributors shall have the right to correct this manual or to make any changes in its content without obligation to notify any person of such corrections and changes.

● **RF Exposure Notice:** This product is in compliance with FCC radiation exposure limits set forth for an uncontrolled environment. The product has been evaluated to meet the general RF exposure requirements. The product may be used without restriction under portable exposure conditions. This product is in compliance with Part 15 of the FCC Rules. Proper functioning is subject to the following two conditions: (1) this product may not cause harmful interference, and (2) this product must accept any interference that shall be received, including interference that may cause undesirable functioning.

● **CAUTION:** Any changes or alterations to this product not expressly approved by the certifying party could void the user's authority to use the product.

● **NOTE:** This product has been tested and is in compliance with the limits for a Class B digital device, in accordance with Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This product generates, uses, and can radiate radio frequency energy and, if not installed and used in compliance with the instructions, may cause harmful interference to radio communications.



The Nomad Baby Bottle Warmer™ may change due to improvements at any time, without notice

Distributor: ByUs SARL, 12 rue du Château d'Eau, 3364 Leudelange, Luxembourg

Made in China for ByUs SARL

@2022 ByUs SARL. All rights reserved

