

HermanMiller

Setu® Chair



Seating that
performs for you.

Seat Height: Lever on right side of chair



To raise seat:

Take your weight off chair,
press lever up.



To lower seat:

While seated, press lever up.

At the proper height, your feet should rest flat on
the floor.