 
 
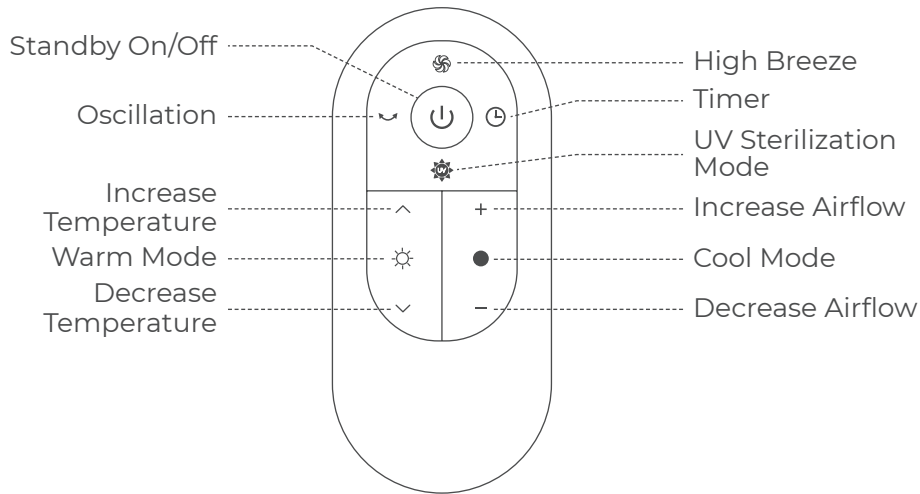 


Remote Control Overview

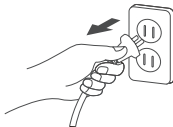

Remote Proper Use

1. Direct remote toward the receiver display to maximize remote control signal while operating unit.
2. Avoid placing the unit near other smart devices where overlapping frequencies may occur during remote use.
3. Unplug fan when not in use for any extended length of time.

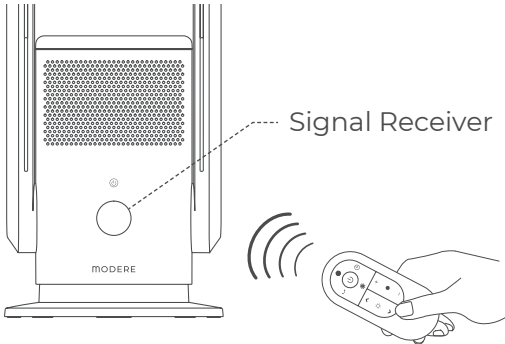

Button Iconography



Press button to operate unit on or off.



Press the Cool Mode button to activate a cooling air flow. **Note:** The default start mode is the cooling mode.



Press the Warm Mode button to activate a warming temperature. In warm air mode, "°F" will be displayed in upper right corner.

Note: Low Breeze Mode will not be available during Warm Mode.



Press the High Breeze button to set the fan to it's highest speed. The display will show "HH". Press again to exit the mode. *(You can also exit this mode by pressing either of the + - Airflow speed buttons.)*



Press the timer button to set an automatic timer that will power-off unit between 1 and 8 hours. After the timer function is set, other functions can be used normally. When the device is turned off, the timing setting is also canceled.



Press the Oscillation button to turn on the oscillation function. This will activate fan movement from left to right 80°. Press button again to stop oscillating.



Press the "+" button to increase airflow, press the "-" button to decrease airflow. Cool Mode offers 9 airflow levels; warm Mode offers 4 airflow levels.



Press the UV Sterilization Mode to activate the built-in UV-C light designed to kill bacteria and germs in the air. Press again to deactivate. UV sterilization will automatically shut down after 1 hour.



In Warm Mode, press the "^" or "v" buttons to set the temperature between 33.8-86°F (1-30°C). **Note:** This button does not work in Cool Mode.

