



 
Cyetus

kcb Series Coffee Grinder

Model: CG9100



USER MANUAL




Cyetus

IMPORTANT SAFEGUARDS

Before using the electrical appliance, the following basic precautions should always be followed including the following:

- (1) Read all instructions.
- (2) Before using, check that the voltage of wall outlet corresponds to the one shown on the rating plate.
- (3) Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or electrical or mechanical adjustment.
- (4) If the supply cord is damaged it must be replaced by the manufacturer or a authorized service agent or a qualified technician in order to avoid a hazard.
- (5) Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- (6) Do not let cord hang over edge of table or counter.
- (7) To protect against risk of electrical shock do not put this appliance in water or other liquid. Damage to the unit will occur if submerged in liquid or filling the liquid into the container. Only the transparent top cover may be immersed.
- (8) Close supervision is necessary when your appliance is being used near children or infirm persons.
- (9) Avoid contacting moving parts.
- (10) Do not remove cover until blade has completely stopped.
- (11) Do not attempt to operate without the cover being in place.
- (12) The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock or injury.
- (13) Check grinding bowl for presence of foreign objects before using.
- (14) Do not operate the appliance for other than its intended use.
- (15) Do not use outdoors.

 SAVE THESE INSTRUCTIONS




Cyetus

KNOW YOUR MILK FROTHER


This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.

KNOW YOUR COFFEE GRINDER

 
Power switch

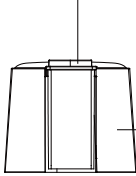

Transparent cover

 


Grinding bowl
(with blade in it)

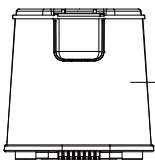 

Motor base

BEFORE THE FIRST TIME

 Carefully unpack your coffee grinder and remove all packing materials. To remove any dust that may have accumulated during packaging, wipe the grinding bowl, blades with a damp lint-free cloth or sponge. Use extreme care as the blades are sharp. The transparent cover can be immersed in water for cleaning, dry thoroughly.



Cyetus



CAUTION:

Never immerse the motor base in water for cleaning and do not fill the grinding bowl with water for cleaning.

USING YOUR COFFEE GRINDER

- Place the coffee grinder on a flat surface.
- Assemble the grinding bowl into the motor base, then turn the bowl clockwise until a click sound is heard. When disassembling, turn the bowl anti-clockwise to detach it.
- Pour coffee beans into the grinding bowl, it must be noted the quantity of coffee beans shall not exceed 60g.
- Recover the transparent cover and plug into the power outlet.
- Press and hold the power switch, the appliance will start operating, once release the power switch, the appliance will stop operating.



NOTE:

Do not operate this appliance continuously for more than 30Second, allow appliance to cool down for 3 minute between two continuous cycles.

 
- View the consistency of coffee grounds from the transparent cover.



IMPORTANT:

If you want to remove the cover to check the consistency of the coffee grounds. It must be noted never remove the cover until blades come to a complete stop.

- Once the desired grind has obtained, release power switch and unplug the power cord from the outlet.
- Remove the transparent cover, disassemble the grinding bowl and pour out the coffee ground directly.



CLEANING AND MAINTENANCE



CAUTION:

Be sure to unplug this appliance before cleaning. To protect against electrical shock, do not immerse cord, plug or motor base in water or liquid. After each use, always make sure plug is first removed from wall outlet.

- Wash cover with water and mild detergent. The cover is not dishwasher-safe. Rinse thoroughly and dry. Never immerse motor base or filling water into the grinding bowl.
- Wipe the grinding bowl, blades with a lint-free cloth. Extreme care should be exercised as the blade is sharp.

GRINDING TIPS

- The COARSE grind is generally used for percolators and coffee urns. MEDIUM grind is used for drip coffee makers and steam-type espresso machines. A FINE grind is used for espresso machines with an electric pump.
- Vary the grinding times to suit your taste and type of beans you grind.
- For the freshest, most flavorful coffee, grind only enough for the pot you are making. Coffee beans keep up to 2 months in the freezer in an airtight container and can be ground while still frozen. Coffee grounds left in your grinder can become stale and affect the flavor of freshly ground coffee. Be sure to clean grinding chamber, blades and cover after each use.
- This grinder can only grind dry, brittle foods. It will not grind anything moist, extremely hard, or gummy such as whole ginger, chocolate, sesame seeds or oily spices such as cinnamon, cloves or nutmeg. Do not grind peanuts or grains such as wheat, rice, barley, or dried corn. Attempting to grind any of these foods may damage the unit. Never use it to chop ice cubes.
- Freshly ground peppercorns have a strong aroma and taste that may affect the flavor of coffee beans ground afterward. You may want to purchase a separate grinder if you plan to grind peppercorns.



Made for Tasty Hobby

f @ Cyetus

www.cyetus.com

Starship Electronic Commerce Company Limited

Due to continued product improvement, the products illustrated/photographed in this booklet may vary slightly from the actual product.

Cyetus