



HF-202

Foldable Floor Fan & Table Fan

User Manual

Many thanks to choosing our fan. Please read the manual carefully before using and keep them for future reference.

PRODUCT DESCRIPTION


Foldable Floor Fan & Table Fan is design for office and home use. It is build-in 18650 battery, adjustable wind speed from 1 to 8 gear. (Natural wind at 9 gear). The height of the fan can be adjusted by telescopic rod. It can be used as desktop fan and floor fan. It can be folded and stored.


SPECIFICATIONS

- * Model No.: HF-202
- * Power Input: DC12.6V, 1A
- * Rated Power: 15W
- * Adapter data:
- Input: AC100-240V, 50/60Hz; Output: DC12.6V, 1A
- * Product size (inches):
 - 11x11x5.4 (folded), 11x11x21 (desktop fan), 11x11x37 (floor fan)
- * Product weight: \approx 4.9lbs (fan+adapter+remote controler)
- * Battery Capacity:
 - 3pcs 18650 lithium ion batteries, 2600mAh/each battery
- * Charging Time: ≈3-4 hours
- * Working Time: 3~9 hours
- * Timer: 1~8 hours

1

PRODUCT SIZE(MM)

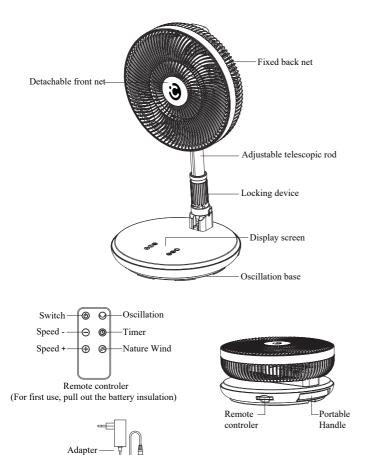

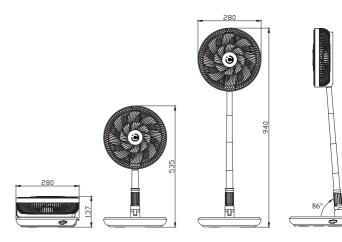

OPERATIONS



1.While it is folded, Pull up the fan.



2.Open the fan follow the arrow direction.



 
3.Open the fan, adjust the angle to vertical, then lock the handle in clockwise.



4.180° up and down adjustable angle.



7.Pull down the tube to original positon and fold the fan.



10.Aim at " \triangle " position to assemble the fan net.



5.height adjustable.Pay attention to pull the rod up or down gently.



8. Remove the screw above the fan net with a screwdriver. net to clean the dust. Use Hold the fan net with both hands and anti-clockwise rotating to open.



11.Hold the fan net and clockwise rotating to " \triangle " tighten. Install the screw with screwdriver.

5



6.Please rotate the handle device anti-clockwise to unlock.



9. Take out the detachable wet cloth to wipe the machine body slightly. Forbidden wash by water.



12. The arrow indicates is the DC charging connector.

INSTRUCTION FOR USE

1. Connect the fan to the adapter (12.6V/1A) to charging (at the bottom of the) base.


2. When the indicator light flashes, that means remind of power shotage, please charge it on time. The indicator light will show in after fulling charging.

3. Keep the fan upright, adjust the telescopic rod to the appropriate height or angle, controlled the fan by the buttom of the base or remote controler.

4. In order to save battery power, the fan will go into sleeping mode automatically after 12 hours' stop, please press () for 2 seconds to restart.

FUNCTION INTRODUCTION

Display screen and remote control operation instructions.

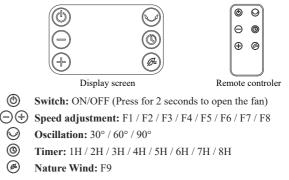

CAUTIONS

1. Please use the adapter product original supply, ensure that the voltage (Power adapter input AC100-240V,50/60Hz; Output: DC12.6V, 1A) indicated on the rating label matches the input voltage before plugging in the appliance.

2. In order to avoid electric shock, any part should not contact with water.

3. Cannot have any object to block the air inlet/outlet.

4. Please use this product at $0 \sim 40^{\circ}$ C, don't put the fan in the bathroom, wet and very hot place to avoid damage to the product.

5. Please keep the fan away from soft objects such as curtains and door curtains, so as not to get involved in the fan.

6. When the power cord or product is found to be damaged or unsafe, please stop using it, contact the product maintenance center for inspection and maintenance, and do not check it by yourself.

7. Remove the power plug before cleaning or moving the product.

8. When the fan is not used for a long time, please remove the power plug, so as not to shorten the product life and cause accidents or dangers in the standby state for a long time.

9. Be careful not to let children touch or play with the product.

10. The product should be kept clean and maintained regularly.

11. Do not allow persons with physical disabilities, mental impairment and lack of experience or knowledge of the product (including children) to use the product alone. If necessary, use the product under the supervision of responsible adults.

12. Don't split the product by yourself to avoid damage to the product or electric shock.

13. Do not put the fingers and other body parts or debris into the fan to avoid injury and damage the product.

14. Don't put wet towels or wet rags on the product casually to avoid leakage and electric shock.

15. Do not touch the button when remove the protective cover, to avoid accidents in product operation.

CLEANING AND MAINTENANCE

1. Before cleaning, maintaining or moving the product, must be turn off the product and remove the power plug.

2. The fan must be completely stopped before it can be cleaned to avoid injury.

3. Don't immerse the power cord or main engine in water to clean or rinse under the tap. The internal parts of the fan should not touch water.

4. Do not use detergents, wire brushes, gasoline, alcohol, vinegar or other volatile corrosive liquid cleaning products to avoid damage to the product.

5. Clean the fan surface with a slightly wet cloth.

6. After cleaning, the product must be completely dried before it can be connected to the power supply.

7. If you don't use it for a long time, please store the product back in the packing box and place it in a dry, cool and safe place.

Warranty

If the product(s) is damaged or defective within a reasonable time, COMFIER offers the warranty as below.

Period	Return for refund	Return for replacement	Who paid shipping?
Within 30 Days	Yes	Yes if undamaged	Comfier
31- 90 Days	Yes after being justified	Yes after being justified	Comfier
91 Days - 1 Year	No	Yes after being justified	Buyer
1 Year - 3 Years	No	Only to buyers who have received extended warranty	Buyer

Comfier warrants the product to be free from defects in workmanship and materials, under normal use, for a period of 12 months from the original invoice date, except as noted below. Comfier products can be repaired or replaced within warranty period or returned for refund within 90 days if the products break down in the period of proper use.

The warranty extends only to consumers, NOT to any retailers or resellers. This warranty is effective only if the product is purchased and operated in the country in which the product is purchased. Warranty claims for product defects, unless extended warranty is registered, expire 12 months from the purchase day. Warranty claims CANNOT be processed for items that have exceeded the warranty period. The warranty does NOT cover the replaced, refurbished product. The warranty does have other limitations as below "Warranty Limitations". To obtain warranty service on Comfier products, follow "Warranty Claim Procedures" below.

Warranty Claim Procedures:

- 1. Any product the customer believes is defective and seeks for warranty, the customer must provide to Customer Support:
- a) Valid proof of purchase (see below the definition of valid proof of purchase);
- b) Pictures and/or description are required to claim defective merchandise;
- c) Model number and Series Number label attached to each product
- If the warranty claim is justified by Comfier Customer Support, customer(s) will obtain from Comfier a Warranty/Return Authorization Number (RMA Number)
- Comfier reserves the right to specify that items be returned to the designated warehouse for inspection or be inspected by our representative in the field or be retained by customer.
- 4. Any claim for defective merchandise returns must be packed in original packaging
- 5. The item(s) will be repaired or replaced or a refund credit will be issued once the item(s) are delivered. When returning items with RMA# and a prepaid shipping label provided by Comfier, Comfier takes responsibility for any damage or loss incurred in transit.

Valid proof of purchase under this Warranty:

Order numbers from online purchases made through Comfier official store (www.comfier.com) or Comfier's direct-authorized resellers, currently only at Amazon/eBay/Walmart. For product(s) obtained from other Channels, please contact the customer service of the Channel directly for appropriate solution.

Warranty

Warranty Limitations(this warranty does not include):

Normal wear and tear; Any condition resulting from other than ordinary residential wear or any use for which the product was not intended, such as use in rental or contract trade or commercial use; Any condition resulting from incorrect or inadequate maintenance or care; Damage resulting from misuse, abuse, negligence, accidents or shipping damage, exposed to environmental conditions temperatures, water, improper operation, improper installation, improper use of electrical supply; transportation damage; theft,vandalism or;Damage resulting from the attachment or modification of any unauthorized accessories;Fail to show the valid proof of purchase;Lost or stolen products;Items that have expired their warranty period; No quality-related issues (after 30 days of purchase);Free product/ Gift offer by Comfier; unauthorized repairs or modification; Replaced or refurbished product.Dissatisfaction due to buyer's remorse (after 30 days of purchase).

Refund Procedures:

(Refer to https://www.comfier.com/pages/return-policy)

Warranty Disclaimer

THE WARRANTY PROVIDED HEREIN SHALL BE THE SOLE AND EXCLUSIVE WARRANTY. COMFIER SHALL HAVE NO LIABILITY FOR, AND EXPRESSLY DISCLAIMS ANY WARRANTY OR AFFIRMATION OF FACT, EXPRESS OR IMPLIED, OTHER THAN AS SET FORTH IN THIS WARRANTY STATEMENT, INCLUDING, WITHOUT LIMITATION

(1) THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE; (2) ANY WARRANTY OR AFFIRMATION OF FACT RELATED TO MISUSE. IMPROPER SELECTION.

RECOMMENDATION, OR MISAPPLICATION OF ANY PRODUCT; AND

(3) ANY WARRANTY OR AFFIRMATION OF FACT THAT THE CATALOGS, LITERATURE AND WEBSITES IT PROVIDES ACCURATELY ILLUSTRATE AND DESCRIBE PRODUCTS.

Comfier reserves all the right for final interpretation of these Terms of Warranty and Return Policy above and the aright to change, modify, add or remove portions of these terms at any time without prior notification.

Extend Warranty for Free

Enter the following URL or scan the QR code below to find COMFIER facebook
page and like it, enter"Warranty" to messenger to extend your warranty from
1 year to 3 years.





https://www.facebook.com/comfiermassager

OR 2) Email us at supportus@comfier.com with "Warranty" as subject line to extend your warranty from 1 year to 3years

FCC STATEMENT

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- · Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio / TV technician for help. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. WARNING: Changes or modifications to this unit is not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Know more about Comfier



COMFIER TECHNOLOGY CO.,LTD Address: 573 BELLEVUE RD NEWARK, DE 19713 USA Tel: (248) 819-2623 (Monday-Friday 9:00AM-4:30PM) Facebook: www.facebook.com/comfiermassager Email: supportus@comfier.com Web: www.comfier.com

^{*}Please provide your order number before contacting customer support