



## Jack Assembly

No.	Description
1	BODY ASSY
2	RAM ASSY
3	*STUFFING RING
4	*CYLINDER PACKING
5	SNAP RING
6	*RAM PACKING SEAT
7	*RAM BACKUP RING
8	*RAM PACKING
9	RAM PACKING STOPPER
10	VERTICAL PIN
11	HORIZONTAL PIN
12	RAM SPRING
13	RAM SPRING STOPPER
14	VALVE BALL
15	VALVE SPRING
16	VALVE PLUG
17	RELEASE STEM
18	*RELEASE PACKING
19	SAFETY VALVE BALL

No.	Description
20	SAFETY VALVE BALL SEAT
21	SAFETY VALVE SPRING
22	ADJUSTING SCREW VALVE
23	SAFETY VALVE PACKING
24	PUSH NUT
25	AIR VENT ASSY
26	RELEASE HANDLE
27	AIR PUMP ASSY
28	OIL PLUG
RP	REPAIR KITS (ALL * ABOVE)

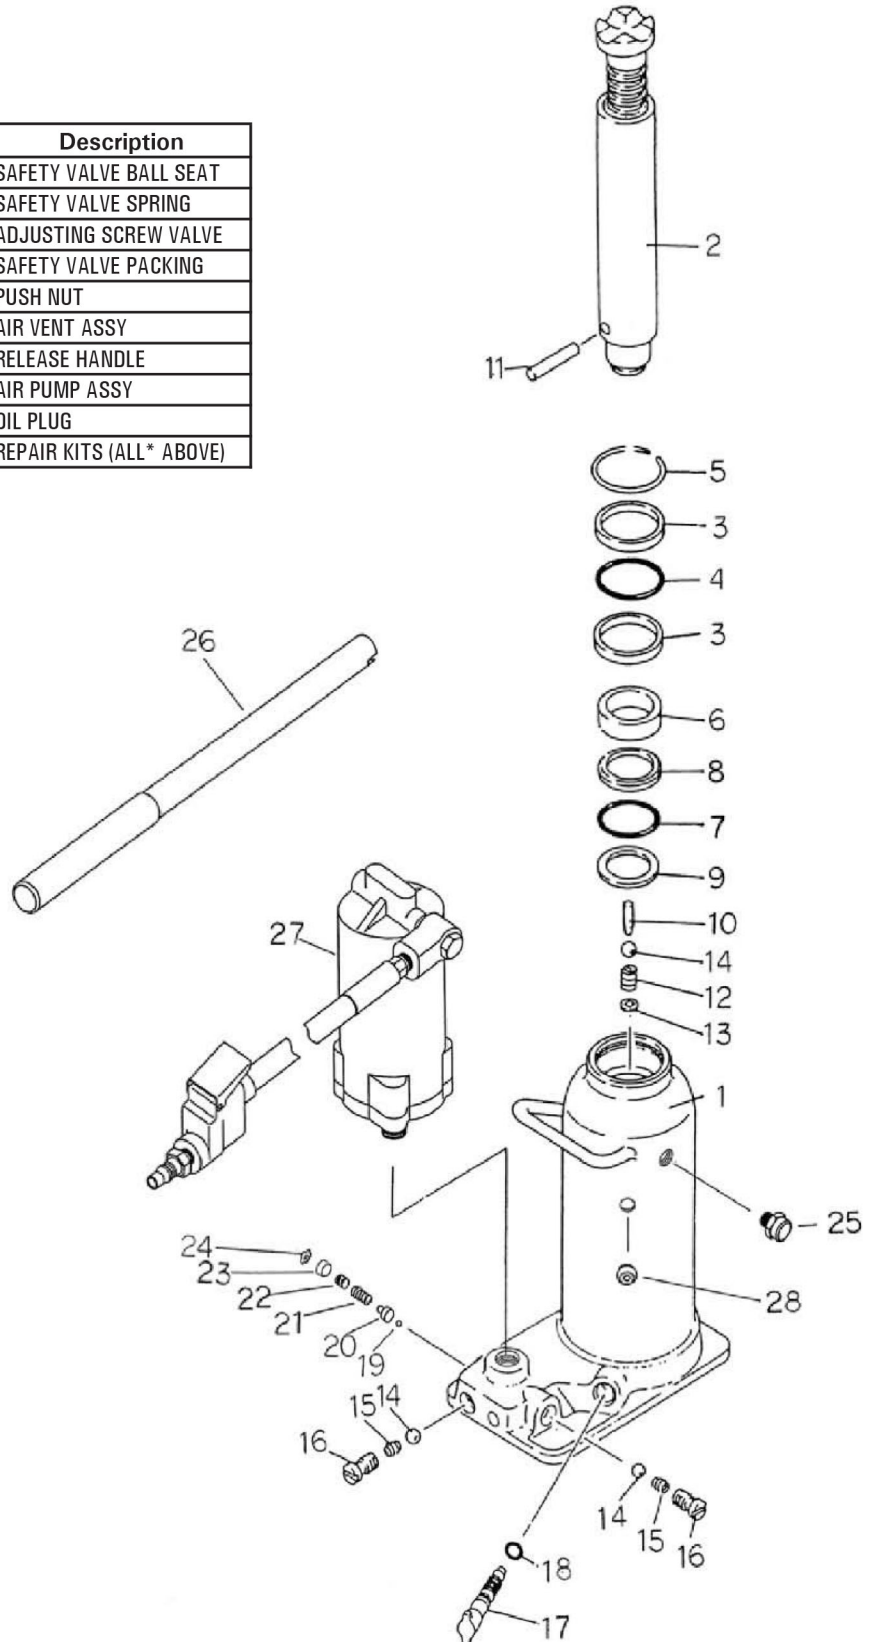

## Utility Air Pump

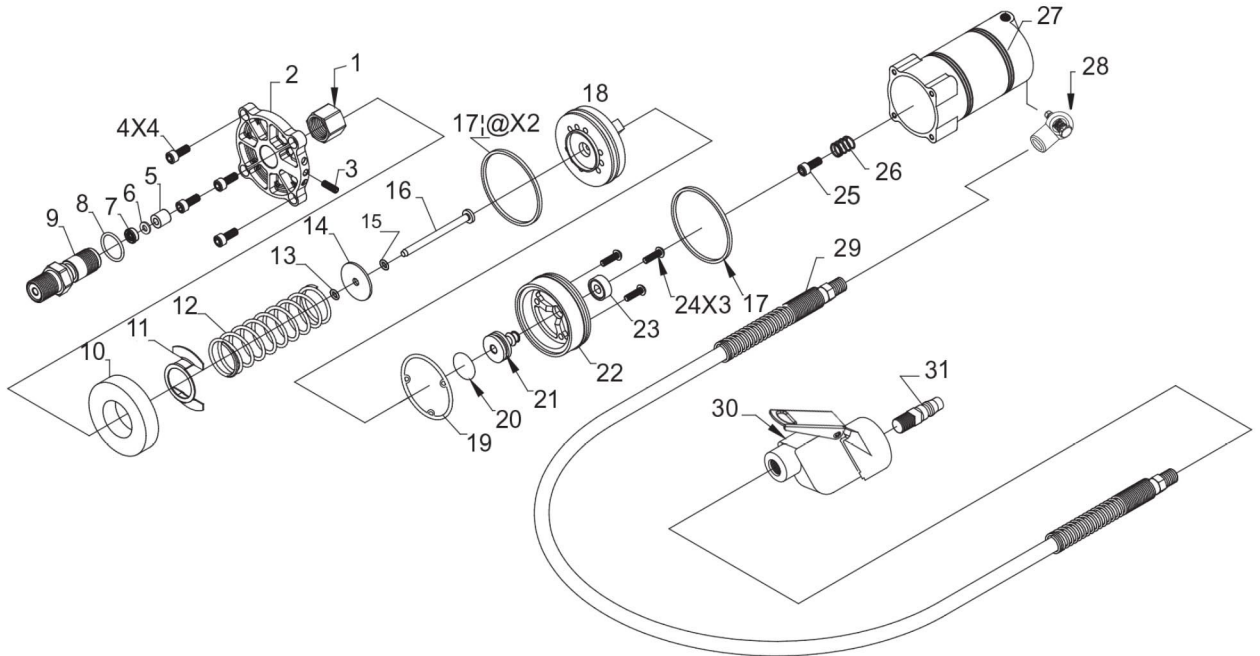

### PUMP UNIT

No.	Part #	Description
1	9060667 - 1	NUT
2	9060667 - 2	BOTTOM CAP
3	9060667 - 3	ADJUST PIN
4	9060667 - 4	CAP SCREW
5	9060667 - 5	*SEAL RING
6	9060667 - 6	*BACKUP RING
7	9060667 - 7	*U-CUP RING
8	9060667 - 8	*O-RING
9	9060667 - 9PA	CYLINDER BOLT
10	9060667 - 10	*SILENCER
11	9060667 - 11	U STYLE GASKET
12	9060667 - 12	SPRING
13	9060667 - 13	*CUSHION
14	9060667 - 14	PISTON PLATE
15	9060667 - 15	*O-RING
16	9060667 - 16	PISTON ROD

No.	Part #	Description
17	9060667 - 17	*O-RING
18	9060667 - 18	PISTON B
19	9060667 - 19	*PACKING
20	9060667 - 20	*O-RING
21	9060667 - 21	VALVE
22	9060667 - 22	PISTON A
23	9060667 - 23	*PILOT PISTON CUSHION
24	9060667 - 24	SCREW
25	9060667 - 26	HEX SCREW
26	9060667 - 27	SPRING
27	9060667 - 28S	CYLINDER SET
28	9060667 - 30S	AIR HOSE SWIVEL KITS
29	9060667 - 34	AIR HOSE
30	9060667 - 35S	AIR SWITCH SET
31	9060667 - 38	QUICK COUPLER
32	9060667 - RP	REPAIR KITS (ALL *)