


CAMERA SETTINGS

About Camera Settings

- Many Camera settings are available to suit your filming preferences.
- Camera settings can be adjusted prior to calibration or at any time during tracking/filming.

1. Open Camera Settings

Tap the Drop-down Menu (≡) in top center of the screen.

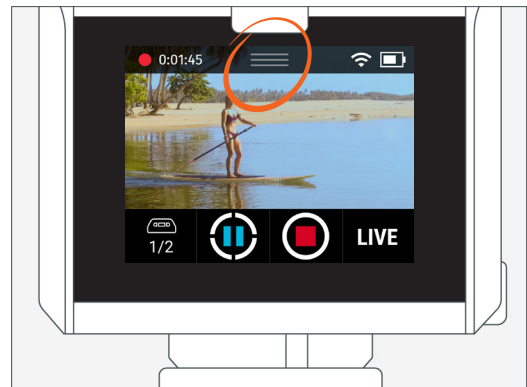


Select the gear icon (⚙️).




2. Select Camera Settings

Tap Camera Settings. Tracking and recording stop when accessing Camera Settings.

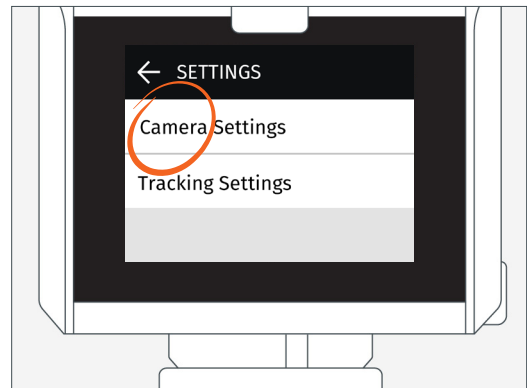


3. Video Mode

Tap Resolution to change the video resolution.

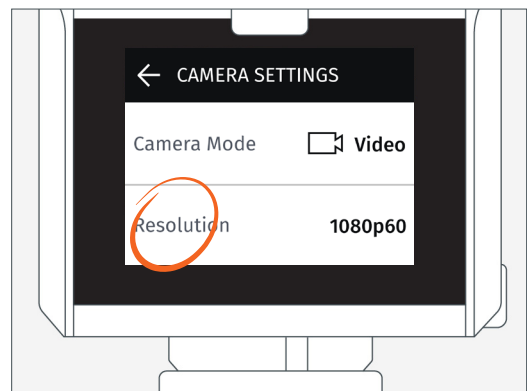

4. Select Video Resolution

Select your preferred video resolution and then tap the back arrow to exit Camera Settings.

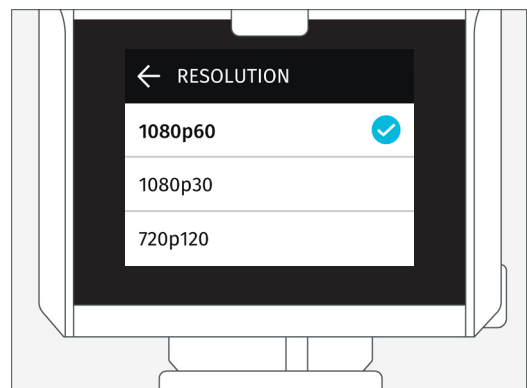


5. Photo Mode

From within Camera Settings, tap Camera Mode.

Select Photo.


Tap the back arrow to enter the Photo Camera Settings.

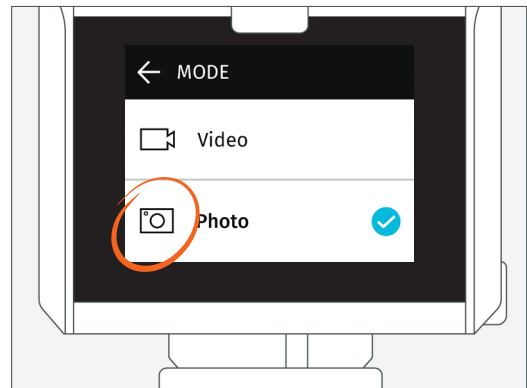

6. Adjust Photo Camera Settings

Select Single or Burst Photos


Set the timer: The delay in seconds between when you trigger a photo and when the Camera actually takes the photo.

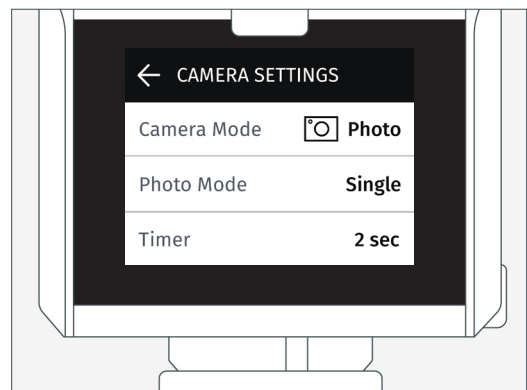

7. Photo Burst

When Photo Burst is selected, a new option is available.

Rate: Choose the number of consecutive photos to taken over a period of time.

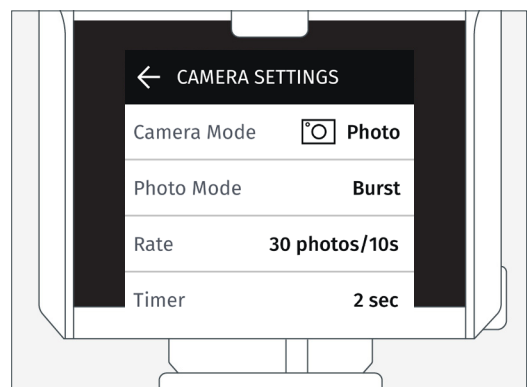


8. Taking Photos

Requirements

- Must be in Photo Mode.
- The Camera must be calibrated and tracking.

From the Tag

- Press the (+) button on the Tag.
- The Camera will take photos based on your selected settings.

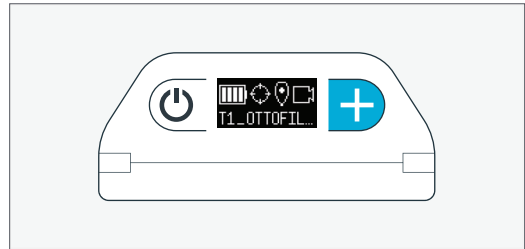

From the Camera Base

- Tap the Shutter/Record button ().

