


OFF-LOADING CONTENT

1. Eject SD Card

Push the MicroSD card to eject it from the SD card port.

Carefully remove the MicroSD Card.


Do Not use sharp/metal tools to remove the card. This may damage the MicroSD Card port.

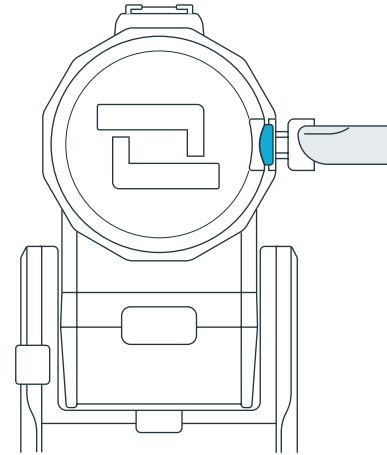

2. SD Card Reader and Adapter

Insert the MicroSD card into a SD card reader. If your computer does not have a built-in reader, an external reader will be needed.

A MicroSD Card Adapter (see diagram) may be needed. This is usually included with the MicroSD Card.

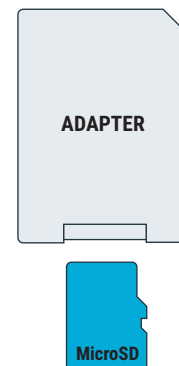

3. Moving DCIM Folder

Move the DCIM folder or select files from within the folder onto your computer.

