
Dual Purpose Nibbler/Saw



The Nibbler will cut:

- 14 gauge mild steel
- 18 gauge stainless steel
- 12 gauge copper/brass/aluminum
- 12 gauge veneer/plastic/laminate/pvc/styrene/acrylic


NIBBLER SET UP

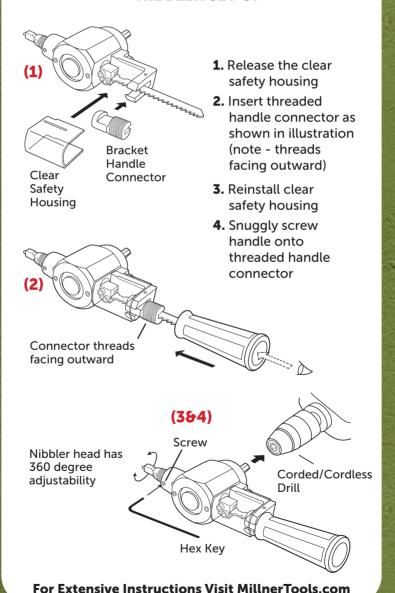

With the appropriate blade, your Reciprocating Saw will cut a variety of materials.

RECIPROCATING SAW SET UP

1. Unscrew and remove handle (not shown)

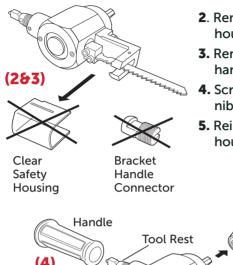

- 2. Remove clear safety housing
- 3. Remove threaded handle connector
- 4. Screw handle onto the nibbler side of the tool
- 5. Reinstall clear safety housing

Corded/Cordless Drill (5)Clear Safety Housing

Replacement Steel & Wood blades are readily available: The Bosch® "T" style blades are recommended. • Metal - Bosch® T118EF • Wood - Bosch® T111C

For Extensive Instructions Visit MillnerTools.com



/! WARNINGS: /!



- ALWAYS close the clear safety housing that covers the saw mechanism before operation
- ALWAYS make sure the handle is screwed on, hand tight, over the saw before operation
- DON'T exceed the thickness of cutting materials stipulated herein
- DON'T use this tool out of the usage ranges illustrated herein
- ALWAYS remove the tool from the drill when changing the nibbler pin/head or the saw blades
- ALWAYS use lubricating oil on stainless steel and aluminum (notelubricating oil will extend the life of the pin cutter on all metal)