

SUPRENT



HAIR CLIPPER
HC315

BRAND STORY

If you need a more detailed multilingual manual version (US/CA/EU/UK/JP), please scan the following official QR code




Haircare, We Care

SUPRENT® has been specializing in haircare appliances since 2015, loved by more than 5 million users worldwide. We care haircare and what you care. Your 101% satisfaction will be our permanent motivation!


USER MANUAL

HAIRCARE

SPECIFICATIONS

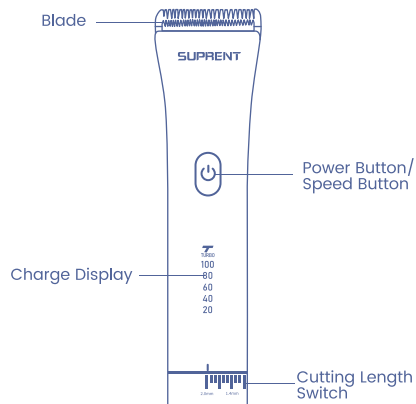

BASIC PARAMETERS

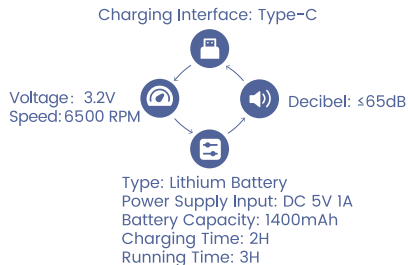

PRODUCT DESCRIPTION

- 1 Fully charge the trimmer before the first use or after long-term non-use (When charging, please use a power adapter with an output voltage not higher than 5V/1A).
- 2 In order to prolong the life of the product, it is recommended to keep it in a dry place and only disassemble and wash the blade head.

3 Install and remove the guide comb

- Make sure the trimmer is turned off before installing or removing the guide comb.
- 1) Remove the guide comb as figure 1;
 - 2) Install the guide comb as figure 2.



4 Install and remove the blade head

The trimmer must be turned off before installing or removing the blade head. installing or removing the guide comb.

- 1) Remove the blade head as figure 3;
- 2) Install the blade head as figure 4. (Please adjust the scale at the bottom to 2.0mm before installing the blade head.)



- 5 Before the first use, apply a small amount of oil to the blade. When the trimmer is used for 2 hours totally, some problems may occur, such as relatively loud noise, dullness, dropping in shear force or high temperature, then the blade head needs dripping care. It is recommended to replace the blade head once a year. cutter head once a year.

- 6 This trimmer has 2 gear modes: low gear & high gear. You can long press the switch to change the gear mode (TURBO). When charging, the corresponding battery indicator flashes. When the battery power is lower than 20%, the corresponding indicator flashes (Note: When the power is too insufficient to be turned on, you can directly use it by connecting the USB charging cable. If it is not used for a long time, please fully charge it at least once every six months. It can be used for about 180 minutes under a fully charged state.)

WARRANTY AND SERVICE

Warranty Description

From the date of purchase, the main part of the product can enjoy a one-year warranty service, and the accessories can enjoy the warranty service for once during the warranty period. Product failures due to accidental damage, unauthorized repairs, improper storage and other man-made damage are not covered by the warranty.

After-sales Service

If you have any query about our products, please feel free to contact us.

Contact Info

SUPRENT After-sales Service	support@suprent.com
Official Website	www.suprent.com
Social Medias	Facebook: @suprentinfo Instagram: @suprent_official
Amazon Customer Service	Amazon's home page--At the bottom--Help--Need more help--Contact Us
Amazon Returns or Replace Items	Amazon's home page--Hamburger button--Menu--Your orders--Find our products--Order details--Need help with your item--Return or replace items