

SUPRENT *PRO*

BEYOND MASTER

THE BLACK
DEVIL

PROFESSIONAL HAIR
CLIPPER COMBO HC596BX

If you need a more detailed
multilingual manual version
(US/CA/EU/UK/JP), please scan
the following official QR code




Beyond Master

Everything in the process
makes who you are. So we're here,
to witness the birth of masterpiece.

SUPRENT PRO,
the Best Partner of Masters.

USER
MANUAL

SPECIFICATIONS

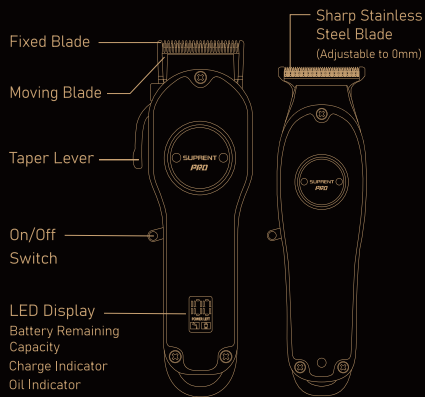

BASIC PARAMETERS


-  Speed: Hair Clipper 5500RPM; Detail Trimmer 6000RPM±10%
-  Charging Interface: USB Cable
-  Decibel: ≤ 60dB
-  Type: Lithium Battery
Power Supply Input: DC 5V 1A

Battery Capacity: Hair Clipper 2500mAh;
Detail Trimmer 1400mAh

Charging Time: Hair Clipper 180 min; Detail Trimmer 120 min
Running Time: Hair Clipper 300 min; Detail Trimmer 180 min

PRODUCT DESCRIPTION

- ① Fully charge the trimmer before you use it for the first time or after not using it for a long period(When charging, please use a power adapter with an input voltage not higher than 5V 1A).
- ② **Power on and off**
Toggle the switch down to start work, and the display will light up; toggle it up to turn off the trimmer, and the display will be off 5 seconds later.

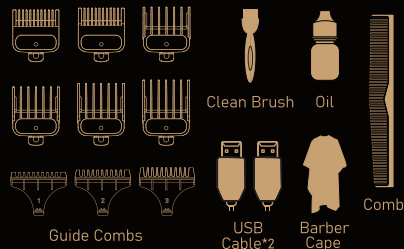

③ Display function introduction

- 1) When working: The digital display shows the remaining power.
- 2) When low power: The charging symbol light flashes.
- 3) When charging: the charging symbol is always on. When fully charged, the number and charging symbol remain on.

④ Guide comb installation

Firstly align the top of the guide comb with the cutter head and fasten the position, and then forcefully buckle the bottom of the guide comb into the bottom of the cutter head. When disassembling, firstly pull the bottom of the guide comb apart, and then remove the guide comb.

⑤ Zero Gap

With the guidance and help of professionals, the T blade trimmer can be adjusted to 0mm, which can provide you with more playability and professionalism.

- ④ When the trimmer is used for 2 hours totally, some problems may occur, such as relatively loud noise, dullness, dropping in shear force or high temperature, then the cutter head needs dripping care. It is recommended to replace the cutter head once a year.
- ⑦ When the product works continuously for about 40 minutes, the temperature will generally rise. Please turn off the trimmer and restart after it cools down. If the body temperature is abnormally high, please stop using it immediately and cool it down for a while before restarting. If the heat persists, please contact customer service.

WARRANTY AND SERVICE

Warranty Description

From the date of purchase, the main part of the product can enjoy a one-year warranty service (excluding accessories). Product failures due to accidental damage, unauthorized repairs, improper storage and other man-made damage are not covered by the warranty.

After-sales Service

If you have any query about our products, please feel free to contact us.

Issues Contact Info

SUPRENT After-sales Service	support@suprent.com
Official Website	www.suprent.com
Social Medias	Facebook: @suprentinfo Instagram: @suprent_official
Amazon Customer Service	Amazon's home page--At the bottom--Help--Need more help--Contact Us
Amazon Returns or Replace Items	Amazon's home page--Ham-burger button-- Menu--Your orders--Find our products--Order details--Need help with your item--Return or replace items