

airpure[®]

Automatic Air Freshener

PRECAUTIONS FOR USE

FOR ADULT USE ONLY.

This appliance is not to be used by children and persons with reduced physical, sensory or mental capabilities.

Read the precautions and directions for use CAREFULLY before using this product. Keep this packaging for future reference.

The OFF/TIMER SWITCH must be in the OFF position before placing the aerosol refill inside the machine. Ensure that the machine is directed away from the face at all times. When switched on, the machine will automatically spray within 5 to 15 seconds. Please ensure you are not caught by this spray after you have switched on the machine. Place the device at a height of at least 2 metres above floor level. Ensure the device is not placed in a position where it is likely to be caught or spray near faces or other objects. While the device is switched on, do not insert fingers or any other objects into the machine. When the aerosol refill is empty, switch off the machine and remove. If you will be away from home or office for more than one day, turn off the machine by moving the OFF/TIMER switch to the OFF position.

CAUTION:

Read and follow the precautions and directions for use on the aerosol can. Use only as directed.

KEEP OUT OF REACH OF CHILDREN

Keep away from heat, hot surfaces, sparks, open flames and other ignition sources. No smoking. Do not spray on an open flame or other ignition source (e.g. Candle, TV). Do not pierce or burn, even after use.

High temperature can easily occur near fires, radiators, ovens, inside motor cars and conservatories. Store away in a well-ventilated place. Protect from sunlight. Do not expose to temperatures exceeding 50°C/122°F.

Do not get in eyes, skin or on clothing. IF ON SKIN: Gently wash with plenty of soap and water. IF IN EYES: Rinse cautiously with water for several minutes. Remove contact lenses, if present and easy to do. Continue rinsing.

Intentional misuse by deliberately concentrating and inhaling contents is dangerous; can be harmful or fatal. Do not spray onto foods, fabric or surfaces. In case of contact with fabric or surfaces they should be cleaned immediately to avoid staining. People suffering from perfume sensitivity should be cautious when using this product. Air fresheners do not replace good hygiene practices.

This machine is battery operated; ensure the batteries are inserted correctly. Align the positive (+) and negative (-) terminals as indicated. Do not cause a short-circuit. Do not expose batteries to water, fire or high temperatures. If any leakage from batteries is noticed, then remove them immediately and remove any leaked material. Remove the batteries if the machine is not in use for a long period of time. Batteries contain: 0% Hg, 0% Cd, 0% Pb.


Remove batteries and dispose according to local regulations. Dispose of empty aerosol can with your normal household rubbish or recycle according to your local regulations. Dispose of your automatic device in the appropriate recycling bin.

Read safety instructions before use. Retain instructions for future reference.


1. Open the Airpure Automatic by pressing down on the button on the top of the machine and pull open. Ensure your fingers are not on the seam of the machine.




2. Then insert the aerosol refill with the nozzle facing out, directing the Airpure Automatic away from your face.

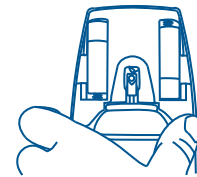

3. Close the machine. Direct your device away from your face and select the desired automatic timing for the machine from the dial on the back. When activated the Airpure Automatic will spray within 5-15 seconds.

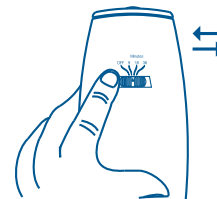

4. Directing the Airpure Automatic away from your face, place where you desire. Ensure that it is at least 2m from the floor level.

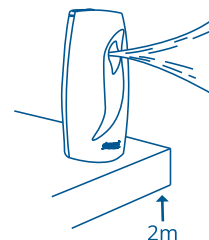

5. The device has a red light which will flash when the aerosol refill is nearly empty and indicate the Airpure Automatic will soon stop working. The aerosol refill will require changing when the fragrance no longer sprays. Directing the device away from your face, turn the switch on the back of the device to the 'OFF' position, replace the aerosol refill, then repeat from step 1 of the directions for use. The red light will also flash to indicate when the batteries are becoming low and will need replacing soon.

Airpure, Parsons Lane, Bury
Lancashire, BL9 0JT
✉ www.airpure.com

☎ UK Customer Services:
+44 (0)161 207 1010
✉ info@airpure.com

Product Code: AOM508

