 




使用說明書 USER MANUAL

30cm 檯地電風扇
30CM STAND AND TABLE FAN

DC-016WH / DC-016BK

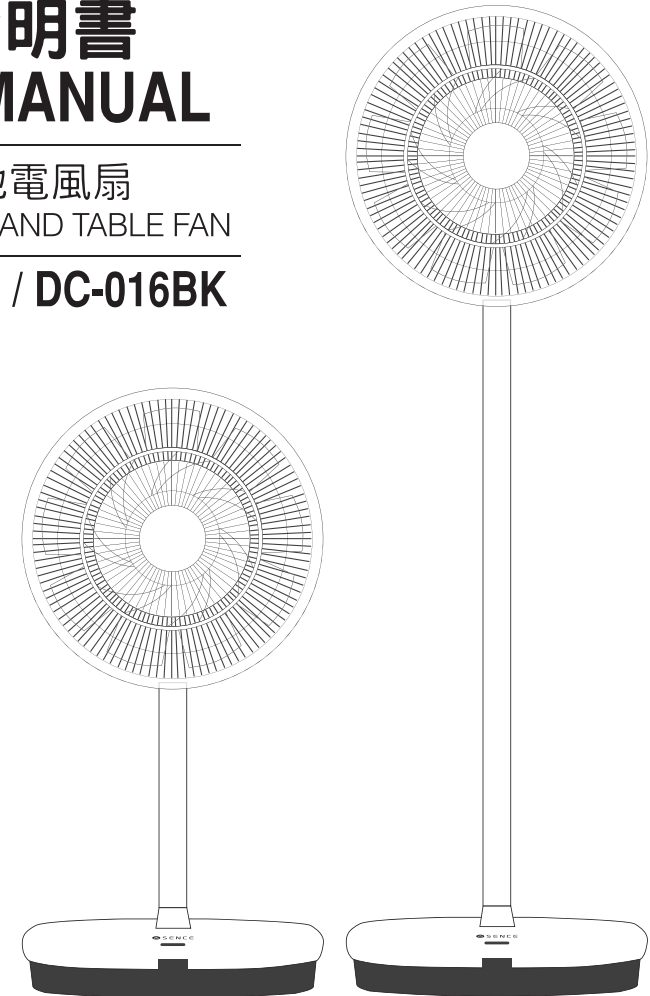


- 在使用之前請詳細閱讀「使用說明書」及「保用條款」，並妥為保存。
- Please read these instructions and warranty information carefully before use and keep them handy for future reference.

1. 技術參數


型號	尺寸	額定電壓	額定頻率	耗電量
DC-016	30cm	220V~	50Hz	25W

 2. 組裝方法

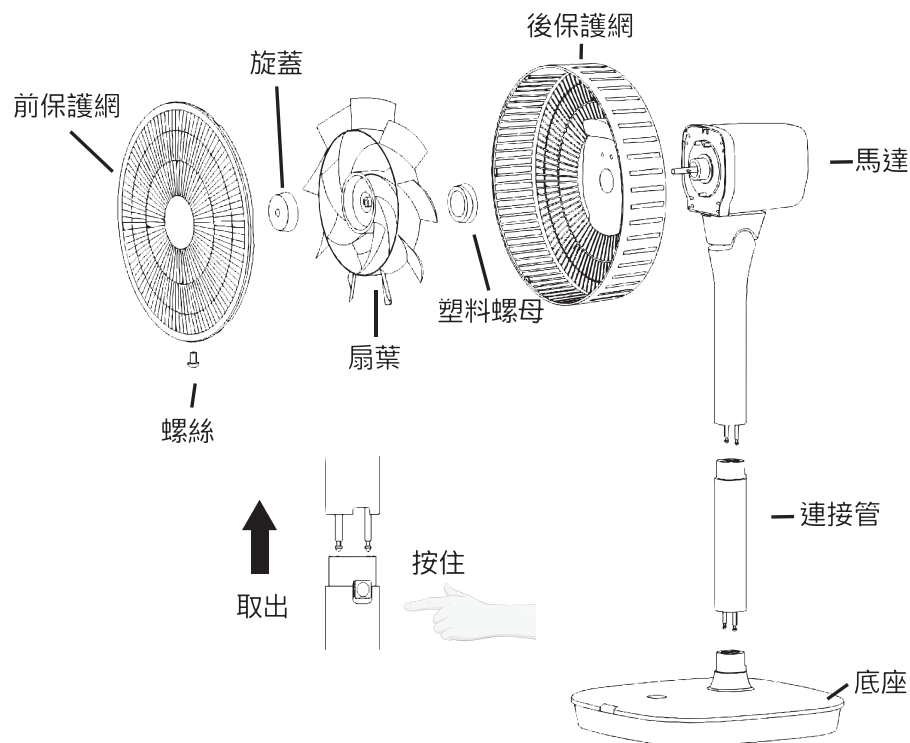

1. 從包裝盒取出風扇馬達，用塑料螺母把後保護網扭緊固定在馬達上。
2. 把扇葉裝上馬達軸上，並用旋蓋扭緊。
3. 用螺絲鎖緊前保護網和後保護網。
4. 將連接管嵌入底座。請注意針孔位置的接點。
5. 將已裝配的馬達部份再嵌入到連接管上並鎖緊。

 3. 使用方法

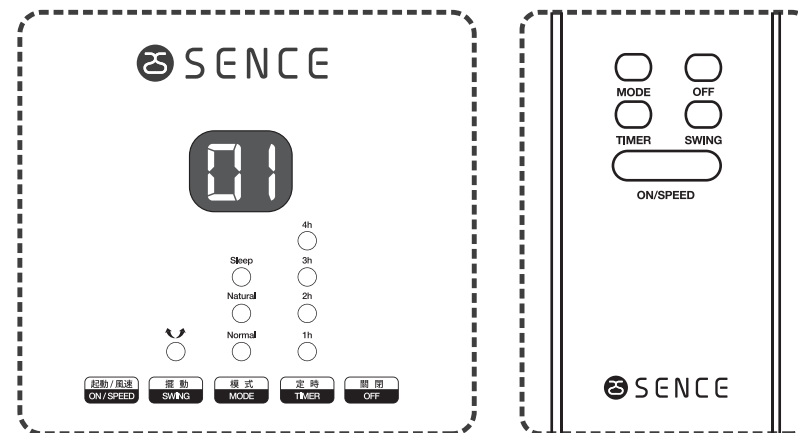


起動/風速：	按此鍵開動風扇並可選擇1至10級風速，同時電子顯示器會顯示當前風速。
擺動：	按此鍵可轉換搖頭 / 不搖頭的狀態。
模式：	按此鍵可轉換睡眠(Sleep)、自然(Natural)、普通(Normal) 的送風模式。
定時：	風扇正在運作時，每按此鍵可設定時間由1至10小時，到時後風扇將會停止運作。 風扇沒有運作時，每按此鍵可設定時間由1至10小時，到時後風扇將會啟動運作。
關閉：	按此鍵風扇會停止運作。
遙控器：	將遙控器指向信號接收範圍。控制範圍的距離是5米之內並面向風扇正面。若操作困難請換電池。
記憶功能：	此產品在未斷電時，會記住上次關機前的設定。「定時」並無記憶功能。切斷電源後記憶會被消除。
高度調整：	此產品可通過連接管切換高度成為座地扇或座檯扇。 注意！必須關機狀態下才進行安裝或拆除連接管，以免發生危險！

若長時間不使用風扇時，請拔掉電源插頭以節省能源


4. 警告

 220V~50Hz

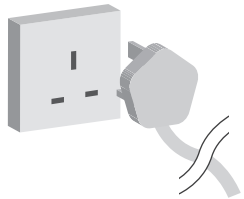


在使用前，必須詳細閱讀此說明書，方可開始接上電源；本產品的電源性質只能使用220V~50Hz電源；切勿使用超過電插座的額定功率。當如果使用風扇期間發出異常噪音、發出焦味、產品機身或配件異常地過熱或發出煙霧等情況，立即停止使用本產品，並拔除插頭，請立即聯絡經銷商進行保養 / 維修。

 
220V~50Hz

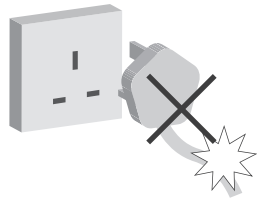

 
如果機器的電源線損壞了，必須找該機器的廠商、維修服務中心或合資格技術人員替您更換以防發生危險。必須抓住電源插頭拔出斷電，不要拉扯電源線。手濕時切勿接觸電源插頭。

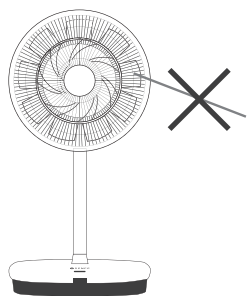

 
切勿用手指、鉛筆或其他物件插入保護網罩中或各可動部分，否則可能損害扇葉或引致受傷。

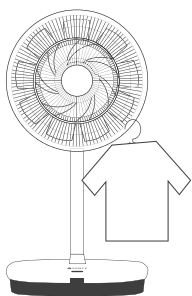

無論是使用風扇中或已關機時，切勿懸掛衣物或其他物品在扇葉上，應該保持距離。

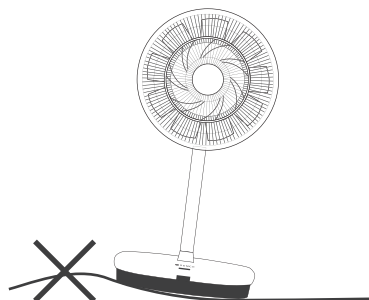 

請確保把風扇平衡放置在平坦的地方。

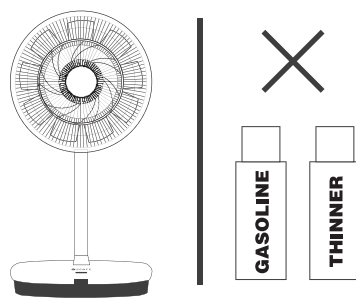 

清潔風扇面板時只需用乾濕布，不要使用任何具有研磨作用的清潔劑或刺激性化學品。

- 本設備是不打算供與（包括兒童）身體，感官或心理能力欠佳人士使用，或缺乏經驗和知識，除非他們是在負責他們安全的人員監督下或有關使用該設備的指示下使用。
- 為了避免可能造成傷害用戶或損壞財產，請遵守所有的書面解釋。製造商不會因有缺陷或不足的安裝所造成的意外及傷亡負責。
- 兒童應該受到監督以確保它們不玩該設備。
- 切勿擅自拆散、修理或改造。
- 除非電風扇完全裝配妥當，否則不要將電源線插入電源出口。
- 不要在接近氣體爐具、有易燃氣體的地方、有雨淋或容易被滴水的地方、接近殺蟲劑的地方、油性的腐蝕性溶劑附近、高溫的地方、潮濕的地方、在化學品、多油、多塵的地方使用。
- 不要長時間把風扇吹著身體。

5. 保養與清潔

- 請確保機組已關閉並關閉電源才可進行清洗，以免發生危險。
- 清潔外殼，扇葉，支架，底座或控制面板時，請用浸過溫水或沾上溫和清潔劑的軟布拭抹，再用軟布抹乾零件。
- 如想風扇運作壽命延長，可考慮有需要時可適當地加入少許滑潤劑在馬達上。
- 如產品可能長時間不使用時，從插座中拔出插頭電源線，並且妥善地包裝產品，兼確保存放在乾爽地方。
- 不可讓風扇沾水。

6. 所有配件

馬達x1、底座x1、搖控器x1、連接管x1、扇葉x1、前保護網x1、後保護網x1、旋蓋x1、塑料螺母x1、螺絲x1、說明書x1



7. 產品保養須知及保養範圍

- 本產品的保用期限自購買日開始計算，提供1年產品自攜維修保養。客戶必須自行保留購買收據及產品盒標籤以作紀錄。
- 本公司保養服務包括在保養期內正常使用情況下之零件故障，如因所須零件停產、缺貨或其他原因導致無法維修或即時更換，本公司有權以同級相近之產品代替。

基於以下條件，本產品將不獲保修

- 客戶未能提供產品有效購買發票/收據
- 機身編號曾被塗改、損毀或撕除。
- 產品曾被非本公司技術人員改裝、調較、修理或拆開檢查。
- 基於任何原因(包括意外)，人為損毀、跌撞、不正當之安裝或操作所造成之損壞。
- 因不可抗力造成損壞的，如火災、水災、地震、雷擊、颱風等自然災害。
- 所須零件停產、缺貨或其他原因導致無法維修
同時，本公司不負責承擔因本產品之品質問題所造成的其他間接損失、
- 花費及其它附帶損害，包括但不限於資訊遺失，預期利益損失等等。
- 產品存放在高溫或潮濕的位置、或經浸沒在水中所造成的損壞。


如有任何爭議，本公司保留最終決定權。



1. TECHNICAL PARAMETERS


Model	Size	Rated Voltage	Rated Frequency	Rated Power
DC-016	30cm	220V~	50Hz	25W

 2. HOW TO ASSEMBLE

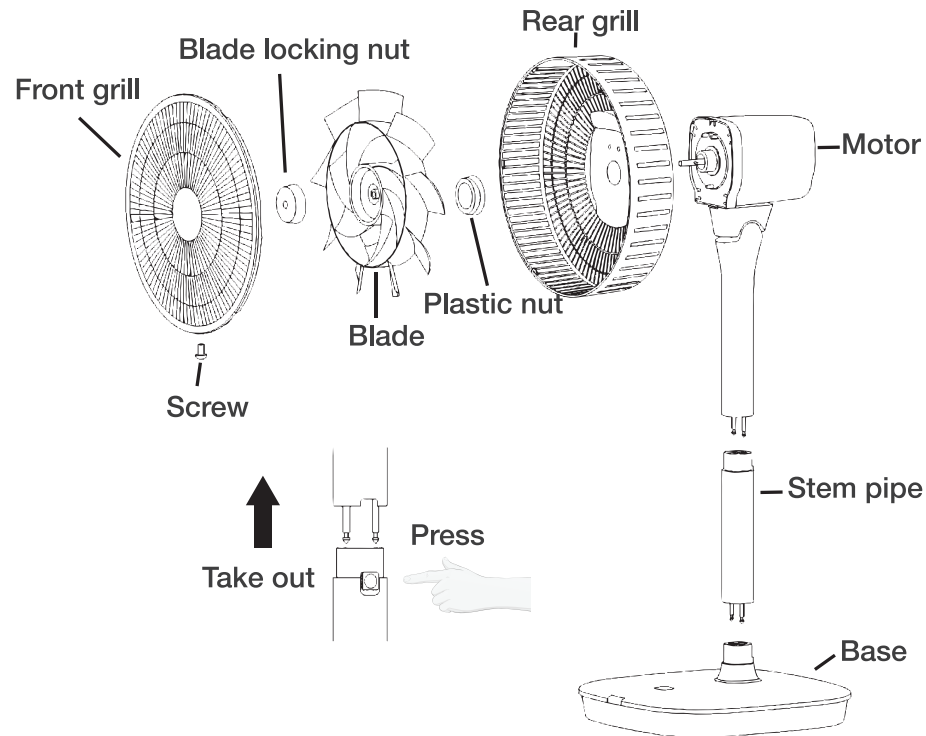

1. Take the motor out of the box and attach the rear grill to the motor. Use the plastic nut to screw them up.
2. Place the blade onto the shaft and turn the blade locking nut to tighten the blade.
3. Attach the front grill and use a screw to lock it with the rear grill.
4. Insert the stem pipe into the base. Pay attention to the pins of the stem pipe.
5. Insert the motor part into the stem pipe.

 3. HOW TO OPERATE

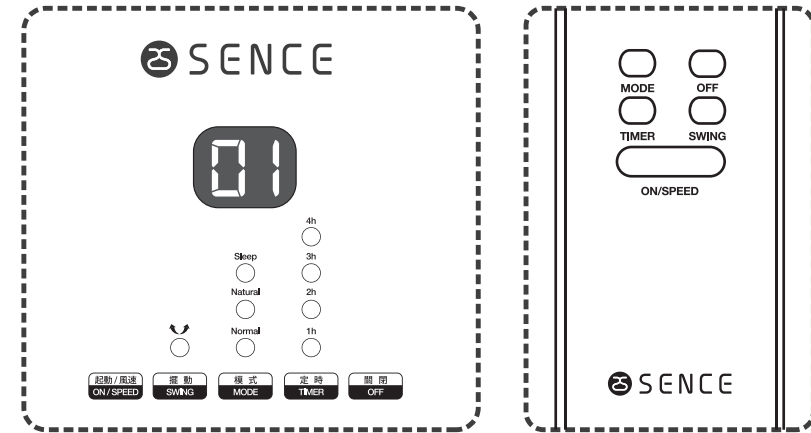


ON/SPEED:	Press this button to turn on the fan and change the fan speed from 1 to 10 levels. The LED display shows the current fan speed.
SWING:	Press to toggle fan oscillation.
MODE:	Press this button to select between Sleep, Natural or Normal modes.
TIMER:	When the fan is in operation, each press of this button can set the time from 1 to 10 hours. Once the set time is reached, the fan will stop. When the fan is NOT in operation, each press of this button can set the time from 1 to 10 hours. Once the set time is reached, the fan will start.
OFF:	Press this button to switch off the fan.
REMOTE CONTROL:	Direct the remote control towards the signal receiving area of the fan. Effective distance is within about 5m. When operation is difficult, replace the batteries.
MEMORY FUNCTION:	The fan memorizes the settings before you switch it off. However, Timer settings cannot be memorized. When main plug is pulled out, memories will be deleted.
HEIGHT ADJUSTMENT:	Install/remove the stem pipe to convert to stand fan or desk fan. Attention! Do not install or remove the stem pipe when the appliance is in operation.

Warm tip: if you don't use it for a long time, unplug the power


4. WARNING

 220V~50Hz

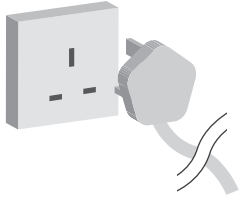


Check the rating label before connecting with power, and cut off power if something abnormal noise, smell, temperature rising or fog.

 
220V~50Hz

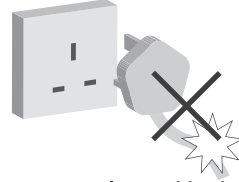

 
If the power supply cord is damaged. It must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid any hazard. Hold the main plug when disconnect from power supply, never pull the supply cord. Never touch the main plug if your hands are wet.

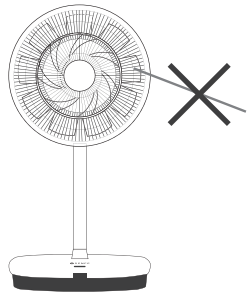

 
Never insert finger, pencils or any other item through the fan guard when the unit is running.

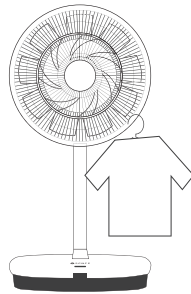

 Never put clothes on the fan, make it far away from curtain.

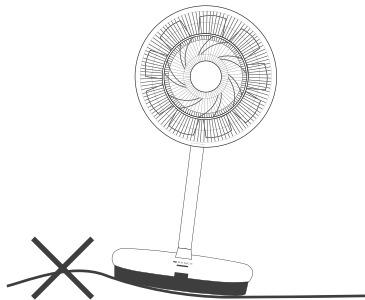

 Make sure the fan unit is placed on a stable surface to avoid overturning.

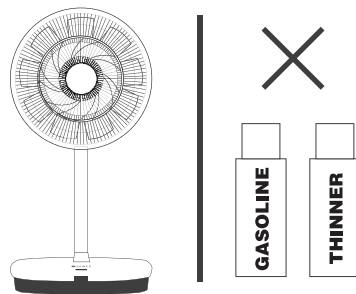

Never use organic matter to clean the fan.

- This appliance is not intended for use by anyone (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- To avoid the possibility of causing injury to users or damage properties, please follow all the explanation written in this manual. The manufacturer is not responsible for accidents and injuries caused by defective or deficient installation.
- Children should be supervised to ensure that they do not play with the appliance.
- Never try to disassemble, repair or modify this product.
- Do not plug supply cord into outlet until fan has been completely assembled.
- Do not use under the following situation: • Near gas fuel cooker • Environment full of inflammable gas • Environment exposed to rain or moisture • Near insecticide • Oil corrosive solvent • High temperature • High humidity • Near chemicals, oil, dust area.
- Avoid exposing yourself to constant direct wind from the fan.

5. MAINTENANCE METHOD

- Disconnected the fan unit from power supply before clean it.
- Only clean the surface of fan body with mild detergent and soft cloth.
- Please add a few drops of lubricant to the motor shaft after cleaning to extend motor life every year.
- Pack the unit properly and store it in a cool dry place if you are not using it for a period of time.
- Do not contact with water.

6. PACKING LIST

Motor x1, base x1, remote control x1, stem pipe x1, blade x1, front grill x1, rear grill x1, blade locking nut x1, plastic nut x1, screw x1, user manual x1



7. WARRANTY COVERAGE

- Warranty coverage started from the date customer purchased the product. Customers should retain their sales receipt and warranty label.
- Warranty would be valid under normal use for the applicable period. If the product cannot be repaired under the conditions of no stock, off production or any other reasons, Service Centre would replace the product with functionally equivalent model.

EXCLUSIONS TO THE WARRANTY

- Customers could not present their sales receipt.
- The serial number has been altered, effaced and / or removed.
- Any modifications, adjustment, repair or disassemble to the products made by a third party or user without the written consent of SENCE.
- Any damage or defect due to misuse, negligence or use not in accordance with the user manual.
- Any damage or defect due to misuse, negligence or use not in accordance with the user manual.
- Limited life components or parts.
- At the same time, SENCE is not liable for any indirect loss, cost, or consequential damages caused by the quality problem of the product, including but not limited to loss of data, expected benefits and etc
- Damage by storing the product in a hot or humid location, or by submerging the product (water, coffee, beverage and etc.)

**In case of any dispute,
SENCE reserves the rights for any final decision.**

