

PLATINUM LITHIUM KIT

Wiring Diagram

Cables used to link batteries must be the same gauge (or better) as the cables used for connecting loads. E.g 3000W Inverter requires 0 AWG, then all cables must be atleast 0 AWG.

All positives from load/chargers to Battery 4

