


# INSTALLATION INSTRUCTIONS FOR SENTINEL CONVEX MIRRORS

#### HARDWARE IS ENCLOSED IN CARTON:

1 RIGHT ANGLE BASE PLATE (PART #A) L"J" BAR (PART #B) (PART #D)

1-BAG OF NUTS AND BOLTS

The hardware furnished with each Sentinel Convex Mirror is flexible to meet your special needs. They can be attached to wall, ceiling, shelf or counter top. You will have to supply the screws, lag bolts or toggle bolts needed to fasten the base plate (A) to the ceiling or wall, as we do not know what type of material you are working with (plaster, wood or concrete).

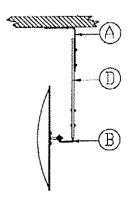

CEILING MOUNT

WALL MOUNT

#### TIPS ON HANGING SENTINEL MIRRORS

\* Do not hang the mirrors too high from the floor. (8-10 feet is recommended for the best extended view.) ★ Avoid hanging in path of heating or air-conditioning blowers.

#### 11. WALL OR POST MOUNT

- (1) For close wall mounting discard "U" channel (D).
- (2) Fasten base plate to wall or post. Attach "J" bar (B) to base plate with two of the bolts provided.
- (3) Attach mirror with ball swivel stem (C) to "J" bar (B) adjust to angle needed. Then lighten the three screws on hall swivel (C) to lock in place.

For extended wall mounting attach base plate (A) to wall. Cut U channel (D) to desired length (the shorter you cut the U-channel, the more stable your hanging mirror will be). Attach stem of hall swivel to the "I" bar, with nut provided on the stem. Then with the two remaining bolts attach the "I" bar mirror assembly to the "U" channel. Adjust mirror to angle needed, then tighten the three screws on ball swivel (C) to lock in place.

#### III. CEILING MOUNT

- (1) Faston base plate (A) to ceiling.
- (2) Attach "U" channel (D) to base plate (A) with 2 of the bolts provided.
- (3) Attach mirror to "I" bar (B). Adjust to proper height on "U" channel and attach with the remaining 2 holts.
- (4) Adjust mirror to angle needed. Then righten screws on ball swivel (D) to lock in place. Mirrors can easily be hung from suspended ceilings. Cut a small hole in ceiling panel for "U" channel (D) to fit through. Mount baseplate (A) to piece of 2 by 4 which should span the two joists above suspended ceiling. Follow balance of above ceiling mount instructions.

#### IV. OUTDOOR MIRROR INSTALLATIONS

If you have purchased a Sentinel outdoor convex mirror, follow either instructions II or III to start with. On the back of each outdoor model, there are threaded mounting boits. Using angle iron, strapping or some sort of bracing (not included), attach these from the wall, ceiling or post to the threaded mounting bolts. This will help stabilize your mirror in high wind conditions.

# LIMITED WARRANTY

Vestil Manufacturing Corporation ("Vestil") warrants this product to be free of defects in material and workmanship during the warranty period. Our warranty obligation is to provide a replacement for a defective original part if the part is covered by the warranty, after we receive a proper request from the warrantee (you) for warranty service.

# Who may request service?

Only a warrantee may request service. You are a warrantee if you purchased the product from Vestil or from an authorized distributor AND Vestil has been fully paid.

## What is an "original part"?

An original part is a part <u>used to make the product as shipped</u> to the warrantee.

## What is a "proper request"?

A request for warranty service is proper if Vestil receives: 1) a photocopy of the <u>Customer Invoice</u> that displays the shipping date; AND 2) a <u>written request</u> for warranty service including your name and phone number. Send requests by any of the following methods:

MailFaxEmailVestil Manufacturing Corporation(260) 665-1339sales@vestil.com2999 North Wayne Street, PO Box 507PhoneAngola, IN 46703(260) 665-7586

In the written request, list the parts believed to be defective and include the address where replacements should be delivered.

# What is covered under the warranty?

After Vestil receives your request for warranty service, an authorized representative will contact you to determine whether your claim is covered by the warranty. Before providing warranty service, Vestil may require you to send the entire product, or just the defective part or parts, to its facility in Angola, IN. The warranty covers defects in the following *original* dynamic components: motors, hydraulic pumps, electronic controllers, switches and cylinders. It also covers defects in *original* parts that wear under normal usage conditions ("wearing parts"): bearings, hoses, wheels, seals, brushes, batteries, and the battery charger.

#### How long is the warranty period?

The warranty period for original components is <u>1 year</u>. The warranty period begins on the date when Vestil ships the product to the warrantee. If the product was purchased from an authorized distributor, the period begins when the distributor ships the product. Vestil may extend the warranty period for products shipped from authorized distributors by *up to* 30 days to account for shipping time.

## If a defective part is covered by the warranty, what will Vestil do to correct the problem?

Vestil will provide an appropriate replacement for any *covered* part. An authorized representative of Vestil will contact you to discuss your claim.

#### What is not covered by the warranty?

- 1. Labor;
- Freight;
- 3. Occurrence of any of the following, which <u>automatically voids the</u> warranty:
  - Product misuse:
  - Negligent operation or repair;
  - Corrosion or use in corrosive environments;
  - Inadequate or improper maintenance;
  - Damage sustained during shipping;
  - Collisions or other incidental contacts causing damage to the product;
  - <u>Unauthorized modifications</u>: DO NOT modify the product IN ANY WAY without first receiving written authorization from Vestil. Modification(s) might make the product unsafe to use or might cause excessive and/or abnormal wear.

# Do any other warranties apply to the product?

Vestil Manufacturing Corp. makes no other express warranties. All implied warranties are disclaimed to the extent allowed by law. Any implied warranty not disclaimed is limited in scope to the terms of this Limited Warranty.

