 


WARNING. THIS IS NOT A TOY. DO NOT BOUNCE ON THE BALL. NOT FOR CHILDREN. PLEASE SECURE AND WEIGH DOWN YOUR BALL AS SOON AS IT IS INFLATED TO AVOID INJURY AND/OR DAMAGE. BALLS ARE HEAVIER WHEN INFLATED.





Improper use of inflatable can result in serious injury or death. Please follow all instructions.*



mini (astes

Do not use product in rain, wind, or extreme weather. Store in cool dry place away from direct sunlight.

Ensure proper weight is used to weigh down the ball. The total of which must be more that the weight of the inflated ball itself. Ball weights: 0.6m - 0.6kg, 0.8m - 2.2kg, 1.2m - 4kg, 1.5m - 6kg, 2m - 10.2, 3m - 23.5kg.

If hanging ball for decoration: Use straps that are adequate to handle the weight of the inflated ball and ensure proper securing to any stationary object. Only attach to secure to sturdy points enough to handle the weight of the inflated ball.



Pearl Drops - Decorative Mirror Balls 0.6m/0.8m/1.2m/1.5m/2m/3m

*Mini Castles Co is not responsible for inflatable misuse.



Steps for inflating:

- Find a location with a diameter greater than the ball you intend to inflate. Clear any debris that may be in the way prior to inflation.
- 2. Unroll your ball and locate the inflation valve.
- 3. Open the valve by turning left and removing the lid.
- 4. Attach the inflator hose with the "C" attachment to the open valve by turning it right, into the valve, until it snaps into place.
- 5. Once you have ensured secure attachment of the inflator hose, turn on the blower and watch your ball inflate.
- 6. Turn off the blower as soon as creases of the inner film become smooth. DO NOT OVER INFLATE OR THE FILM WILL BURST.
- 7. Remove the inflator hose from the valve by turning it left and gently pulling it off. Some air may escape and that is normal.
- 8. Quickly reattach the lid to the valve by turning it right, into the valve, until it snaps into place.
- 9. Weigh down or secure your ball with a sandbag using D rings on ball immediately after you have inflated it.

Steps for deflating:

- 1. Position the ball so that the inflation valve is near the floor.
- 2. Open the valve by turning left and removing the lid.
- 3. Set up the blower as a deflator by removing the hose from the front base of the blower and reattaching it to the rear base of the blower.
- 4. Attach the deflator hose with the "C" attachment to the open valve by turning it right, into the valve, until it snaps into place.
- 5. Once you have ensured secure attachment of the deflator hose, turn on the blower and watch your ball deflate. For best deflation, do not fold or press the collapsing ball but allow it to gently fall into a circle.
- 6. Turn off the blower as soon as all the air is removed from the ball.
- 7. Remove the deflator hose from the valve by turning it left and gently pulling it off.
- 8. Replace the "C" head of the deflator hose with the "point" attachment.
- 9. Place and hold the "point" head of the deflator hose into the PVC hole near the valve of the ball and turn on the blower to deflate the remaining air above the mylar film.
- 10. Once fully deflated, turn off the blower and remove the "point" head from the PVC hole.
- 11. Reattach the lid to the valve by turning it right, into the valve, until it snaps into place.
- 12. Fold up your ball, ensuring that the valve is visible and easily accessible for next use.