

PEAK

# SOLICE

MODULAR WIRELESS  
MACHINE  
MANUAL



EXPERIENCE ULTIMATE FREEDOM

WITH PEAK'S FIRST-EVER MODULAR MACHINE

Switch effortlessly between a wireless or wired setup




**2** PEAK SOLICE DIAGRAM


**3** TECHNICAL SPECIFICATIONS

**3** KEY FEATURES

**4** GET STARTED WITH SOLICE

**5** PEAK WARRANTY INFORMATION

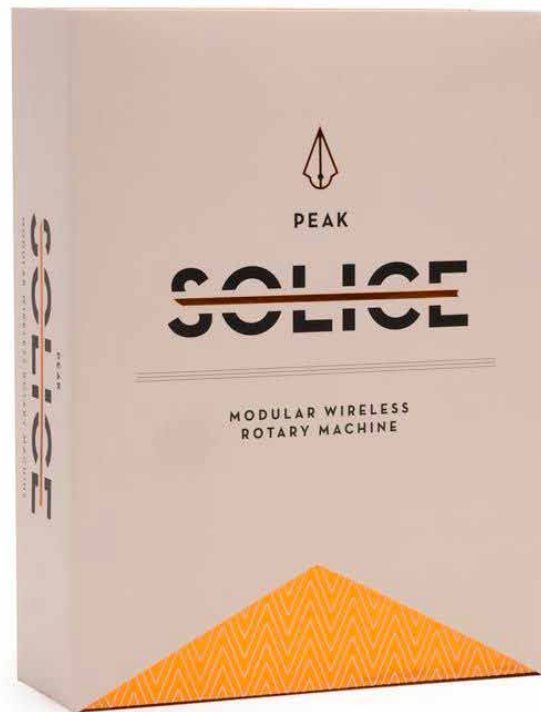

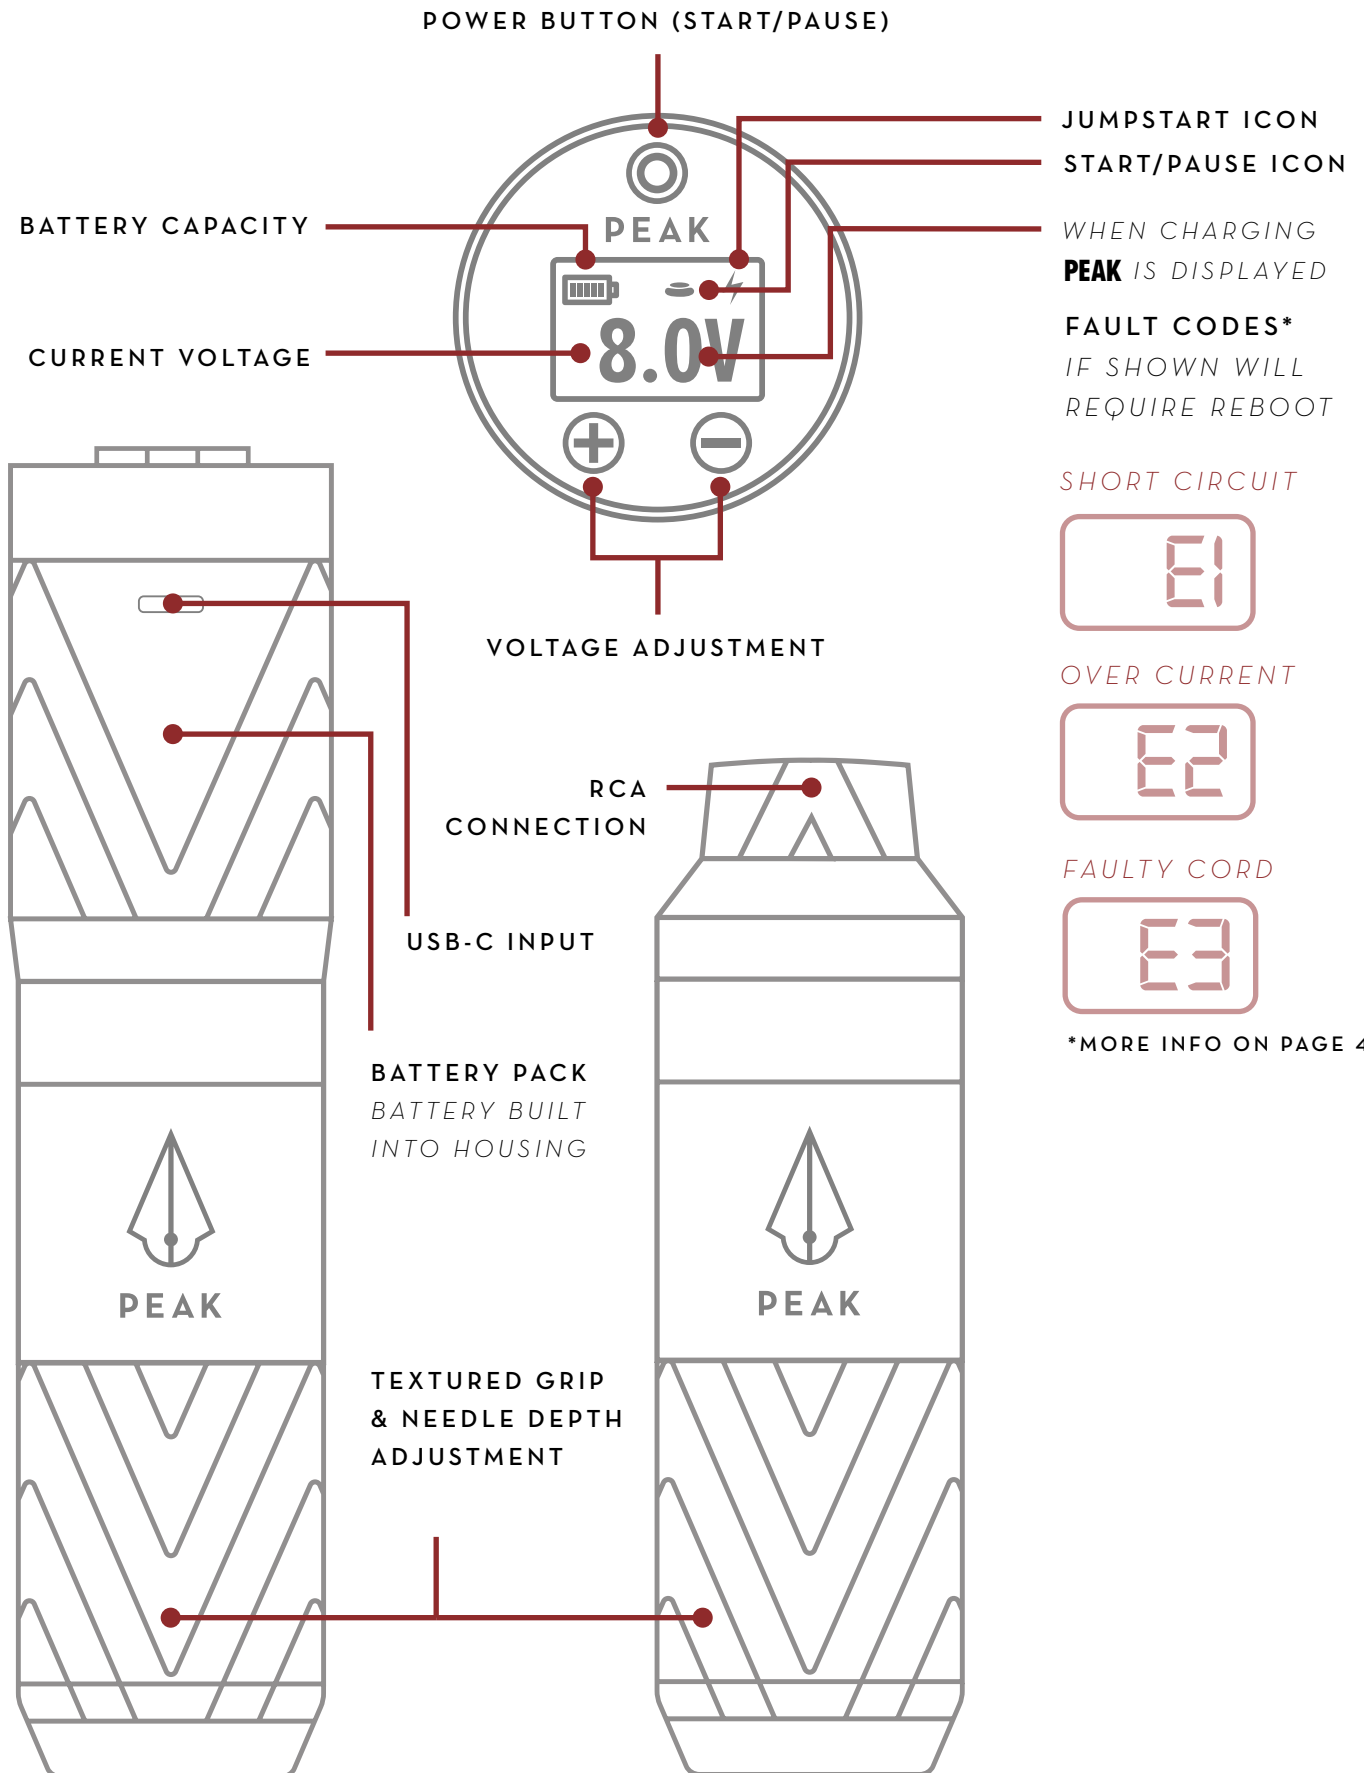

## TECHNICAL SPECIFICATIONS

**Net Weight:** 158g (~5.6oz)

**Machine Length:** 4.5"

**Stroke Length:** 3.5mm; 4mm cam available separately

**Machine Body:** Constructed from durable aluminum featuring the Peak logo on machine body

**Battery:** USB-C chargeable; offers 10+ hours of tattooing power; Microchip battery controller prevents short-circuit, overcharge, and drain

**Motor:** 6v 6800rpm motor

**Maximum voltage:** 10v

**Jumpstart voltage:** 9v in 0.3 seconds

**Connection:** Removable 1800 mAh battery and magnetic RCA module

**Package Includes:** 2 O-rings, 2 Allen keys, 1 USB-C charging cable, and 1 RCA cord

## KEY FEATURES

**Ultra-lightweight pen-style modular machine**

**Can be used wirelessly or with a standard RCA connection**

**Let's you plug into power and continue tattooing even if your battery is close to dying**

**Offers a close grip and interchangeable design**






**Can be used for all tattooing styles**

**Comes in Black, Pink, or Red**

---

---

## FOR WIRELESS TATTOOING

- 1 To turn on the Solice without the jumpstart feature**, long-press the power button  on the attached PowerPack battery. Your machine will start with previously adjusted voltage.
- 2 To turn on the Solice with the jumpstart feature**, quickly double press the power button . A lightning bolt icon  will appear on your display.
- 3 To start or pause your machine**, press the power button  whenever you want. A pedal icon  will appear on your display when your machine is working. Tattoo for 10+ hours on a single charge; the PowerPack battery will automatically shut off after 5 minutes of inactivity.
- 4 When you're ready to recharge**, connect your PowerPack to a USB-C charging cable. You will also see your battery capacity.

## FOR TATTOOING WITH AN RCA CONNECTION

- 1 Remove the PowerPack battery.**
- 2 Attach the magnetic RCA module** (included with your Solice machine).
- 3 Plug your Solice Pen** into your favorite power supply with the included RCA cable.

## FAULT CODES

### SHORT CIRCUIT



This means there is a short somewhere. Take battery off and try with another direct drive pen to see if error persists. If battery works on a new machine, that means the original machine has an issue potentially with the motor. If the battery continues to display E1, that means the battery will need to be replaced.

### OVER CURRENT



This means overcurrent protection. Please open the machine and check to see if the motor is stuck or the drive bar or motor is broken. If all appears to be working, please try a softer membrane needle. An E2 error means there is an issue somewhere outside the battery, and the battery is protecting itself by displaying the E2 error.

### FAULTY CORD



This means that the charging cord is faulty. Please change to a new cord and try again.

## WARRANTY INFORMATION

If you experience any technical issues or your Solice Modular Machine requires repairs, please contact our customer service team at 410-712-0145. After our customer service team provides you with a return authorization, you can download and fill out our **Peak Repair Order Form**:



Mail your completed repair order form, machine, and invoice as proof of purchase to 7410 Coca Cola Dr STE 108, Hanover, MD 21076. You can also direct any questions or concerns regarding issues with your Solice Modular Machine to **info@peakneedles.com**.

If you purchased your Solice Modular Machine less than a year ago, we will replace it with a brand new model. If your machine is older than a year, it is unfortunately no longer protected under our one-year warranty.